

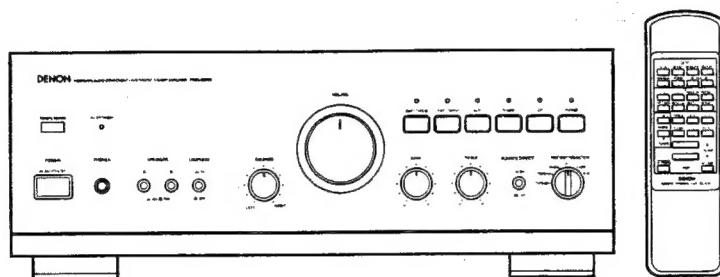
# DENON

Hi-Fi Integrated Stereo Amplifier


## SERVICE MANUAL

# MODEL PMA-925R/725R

### INTEGRATED STEREO AMPLIFIER



PMA-925R

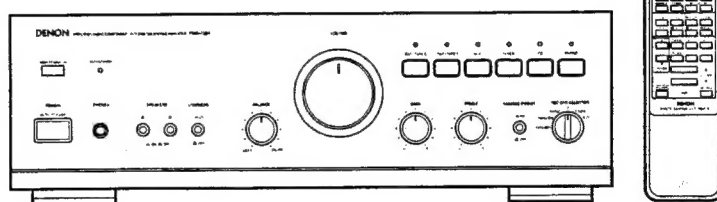

PMA-725R

### CONTENTS

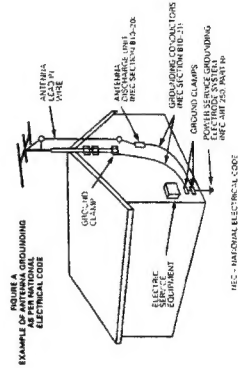
OPERATING INSTRUCTIONS .....	2-7
REMOVAL OF EACH SECTION .....	8, 9
FUNCTION OF NEW CIRCUIT .....	10, 11
METHOD OF ADJUSTMENTS .....	12
BLOCK AND LEVEL DIAGRAM .....	13
SEMICONDUCTORS .....	14, 15
PRINTED WIRING BOARD .....	16-19
NOTE FOR PARTS LIST .....	20
PARTS LIST OF P.W.B. ASS'Y .....	20-25
PMA-925R .....	20-23
PMA-725R .....	23-25
EXPLODED VIEW OF CHASSIS AND CABINET, PARTS LIST OF EXPLODED VIEW .....	26-29
PMA-925R .....	26, 27
PMA-725R .....	28, 29
WIRING DIAGRAM .....	30
SCHEMATIC DIAGRAM .....	31-34
PMA-925R .....	31, 32
PMA-725R .....	33, 34

## NIPPON COLUMBIA CO., LTD.

● FOR U.S.A. MODEL ONLY

# SAFETY INSTRUCTIONS

1. Read Instructions – All the safety and operating instructions should be read before the appliance is operated.
2. Retain Instructions – The safety and operating instructions should be retained for future reference.
3. Head Warnings – All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow Instructions – All operating and use instructions should be followed.
5. Water and Moisture – The appliance should not be used near water – for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, and the like.
6. Carts and Stands – The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A. An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. Wall or Ceiling Mounting – The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. Ventilation – The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. Heat – The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. Power Sources – The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. Grounding or Polarization – Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.
12. Power-Cord Protection – Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them; paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.
14. Cleaning – The appliance should be cleaned only as recommended by the manufacturer.
15. Power Lines – An outdoor antenna should be located away from power lines.
16. Outdoor Antenna Grounding – If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built-up static charges. Article B10 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna-discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.
17. Nonuse Periods – The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
18. Object and Liquid Entry – Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
19. Damage Requiring Service – The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged; or
  - a. Objects have fallen, or liquid has been spilled into the appliance; or
  - c. The appliance has been exposed to rain; or
  - d. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - e. The appliance has been dropped, or the enclosure damaged.
20. Servicing – The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.



**CAUTION**  
RISK OF ELECTRIC SHOCK  
DO NOT OPEN

**CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.**



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.**

● FOR U.S.A. & CANADA MODEL ONLY

## CAUTION

TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS IPO-LARIZED PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

● POUR LE MODELE CANADIEN UNIQUEMENT

## ATTENTION

POUR PREVENIR LES CHOCS ELECTRIQUES, NE PAS UTILISER CE TYPE DE PLOCH POLARISE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE CORDANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

## DECLARATION OF CONFORMITY

We declare our sole responsibility that the product PMA-925R/725R to which this declaration relates is in conformity with the following standards:

EN5013, EN5020, EN60555-2 and EN60555-3  
Wir erklären unsere alleinige Verantwortung, daß das Produkt PMA-925R/725R auf das sich diese Erklärung bezieht, den folgenden Standards entspricht:

EN5013, EN5020, EN60555-2 und EN60555-3  
Nous déclarons sur notre seule responsabilité que l'appareil Amplificateur PMA-925R/725R auquel se réfère cette déclaration est conforme aux standards suivants:

EN5013, EN5020, EN60555-2 et EN60555-3  
Dichiaro con piena responsabilità che il prodotto amplificatore di precedenza PMA-925R/725R al quale questa dichiarazione si riferisce, è conforme alle seguenti normative:

EN5013, EN5020, EN60555-2 e EN60555-3  
Declaramos bajo nuestra única responsabilidad que el producto PMA-925R/725R, al que esta declaración hace referencia, es conforme con los siguientes estándares:


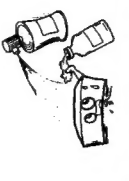

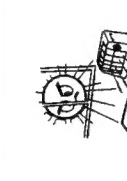

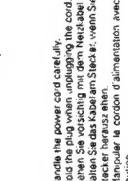
EN5013, EN5020, EN60555-2 y EN60555-3  
Wij verklaren uitsluitend op onze verantwoordelijkheid dat het product waarop deze verklaring betrekking heeft, de voorversterker PMA-925R/725R, in overeenstemming is met de volgende normen:

EN5013, EN5020, EN60555-2 en EN60555-3  
Mendeklaro inggis Neil pa apil anasar an produkten, torforstatkare/disksting PMA-925R/725R, vilan detta intyg harvarar till applyller följande standarder:

EN5013, EN5020, EN60555-2 og EN60555-3  
Declaramos sob nossa exclusiva responsabilidade que o produto pre Amplificador Principal PMA-925R/725R ao qual esta declaração corresponde, está em conformidade com as seguintes normas:

EN5013, EN5020, EN60555-2 e EN60555-3

# NOTE ON USE/HINWEISE ZUM GEBRAUCH / OBSERVATIONS RELATIVES A L'UTILISATION NOTE SULL'USO / NOTAS SOBRE EL USO / ALVORENS TE GEBRUIKEN / OBSERVERA OBSERVAÇÕES QUANTO AO USO

 <ul style="list-style-type: none"> <li>Do not let foreign objects in the set.</li> <li>Né laissez des objets étrangers dans l'appareil.</li> <li>Ne pas laisser des objets étrangers dans l'appareil.</li> <li>Proteggere l'appareil contro l'umidità, l'acqua e la polvere.</li> <li>No darf das Gerät feucht, nass oder mit Wasser in Berührung kommen.</li> <li>Assicurarsi che l'unità non venga in contatto con l'umidità, benzina o solventi.</li> <li>Verzorging met droogte, benzine, oplosmiddelen en andere vloeistoffen.</li> <li>Se il set viene installato già assemblato, ben-tenoch thinner kommer in contact met appar-ato.</li> <li>Não permita que líquidos, benzina e disol-vente entrem em contacto com o aparelho.</li> </ul>	 <ul style="list-style-type: none"> <li>Keep the set free from moisture, water, and dust.</li> <li>Halten Sie das Gerät von Feuchtigkeit, Wasser und Staub fern.</li> <li>Proteggere l'appareil contro l'umidità, l'acqua e la polvere.</li> <li>Tenez l'unité loin de l'humidité, de l'eau et de la poussière.</li> <li>Met geen object op het bord van humiditeit, water of stof in het ap-paraat.</li> <li>Laat geen vocht, water of stof in het ap-paraat.</li> <li>Uitsluitend met droogte, benzine, oplosmiddelen en andere vloeistoffen.</li> <li>Mantenha o aparelho livre de qualquer umida-de, água ou pó.</li> </ul>	 <ul style="list-style-type: none"> <li>Never disassemble or modify the set in any way.</li> <li>Né démontez ou modifiez l'appareil.</li> <li>Ne jamais démonter ou modifier l'appareil.</li> <li>Non smontare né modificare l'unità in nessun modo.</li> <li>Nunca desarme o modifique o equipo de nin-guna forma.</li> <li>Laat geen insakeverdelende middelen, benzine of oplosmiddelen in contact met het apparaat.</li> <li>Se il set viene installato già assemblato, ben-tenoch thinner kommer in contact met appar-ato.</li> <li>Não permita que líquidos, benzina e disol-vente entrem em contacto com o aparelho.</li> </ul>
 <ul style="list-style-type: none"> <li>Avoid high temperatures.</li> <li>Evitez les températures élevées.</li> <li>Vermeiden Sie hohe Temperaturen.</li> <li>Bachten Sie, daß eine überhöhter Lufttem-peratur zu einer Beschädigung des Geräts führen kann.</li> <li>Assicurarsi che ci sia un'atmosfera dispo-nibile del calore quando installate l'unità in un mo-do sicuro.</li> <li>Verzorging met droogte, benzine, oplosmiddelen en andere vloeistoffen.</li> <li>Mantenha o aparelho livre de qualquer umida-de, água ou pó.</li> </ul>	 <ul style="list-style-type: none"> <li>Unplug the power cord when not using the set for long periods of time.</li> <li>Wenn das Gerät eine längere Zeit nicht ver-wendet wird, ziehen Sie das Netzkabel vom Netzstecker.</li> <li>Débrancher le cordon d'alimentation lorsque l'appareil n'est pas utilisé pendant de longues périodes.</li> <li>Disconnettare il filo di alimentazione quando avete l'intenzione di non usare il filo di alimen-tazione per un lungo periodo di tempo.</li> <li>Nunca alijar del receptor un tal contacto con el equipo por mucho tiempo.</li> <li>Neem altijd het netkabel uit het stopcontact voordat u het apparaat nog een lange tijd niet gaat gebruiken.</li> <li>Kopie u netkabel om apparaten niet kom-men in aanraking met de stroom.</li> <li>Desplugue o fio condutor da força quando o aparelho não for utilizado por um longo pe-ríodo.</li> </ul>	 <ul style="list-style-type: none"> <li>Do not obstruct the ventilation holes.</li> <li>Né bloquez les trous de ventilation.</li> <li>Die Belüftungslöcher dürfen nicht verdeckt werden.</li> <li>Do not obstruct the ventilation holes.</li> <li>Né bloquez les trous de ventilation.</li> <li>Die Belüftungslöcher dürfen nicht verdeckt werden.</li> <li>No obstruct the ventilation holes.</li> <li>Né bloquez les trous de ventilation.</li> <li>Die Belüftungslöcher dürfen nicht verdeckt werden.</li> </ul>

## NOTA:

- Mantenga siempre activado el interruptor de alimentación (POWER) en la unidad principal.
- Encienda y apague el equipo desde la unidad de control remoto.
- Cuando la unidad de control remoto no se utilice por un periodo prolongado de tiempo, desconecte el cable de alimentación.

## PRECAUTION:

Cuando son el indicador LED de silenciamiento/modo de espera (MUTE/STANDBY) se ilumina, la unidad de control remoto debe estar desactivada desde la unidad de control remoto. Conecte la alimentación desde la unidad de control remoto.

## OPMERKING:

- Zorg dat het licht van de stroomschakelaar (POWER) van het hoofdelement in de afstandsbediening stand staat.
- Schakel de stroom in uit in b.v. de afstandsbediening.
- Trek het netkabel uit wanneer u niet het toestel gebruikt gedurende een lange perio-de van niet te gebruiken.

## WAARSCHUWING:

Indien enkel de demping-/MUTE/STANDBY LED brandt, betekent dit dat de spanning niet meer aanwezig is op het apparaat. Sluit de afstandsbediening op de stroom aan.

## OBSERVA:

- Lit aliud stromibreytari (POWER) på huvudelementet vers påslagen.
- Indien enkel de demping-/MUTE/STANDBY LED brandt, betekent dit dat de spanning niet meer aanwezig is op het apparaat. Sluit de afstandsbediening op de stroom aan.
- Kopie u netkabel om apparaten niet komen in aanraking met de stroom.

## WARNING:

Om endast MUTE/STANDBY-lampen lysar betyder det att strömmen har stängts av via fjärrkontrollen. Strömmen måste då slås på via fjärrkontrollen igen.

## NOTA:

- Mantenha o interruptor de Corrente (POWER) na unidade principal sempre ligado.
- Quando o LED de silêncio/standby estiver aceso, a unidade de controle remoto deve estar desligada.
- Desconecte o fio de força quando intencionalmente não utilizar a unidade por tempo prolongado.

## CAUTION:

Se apenas o LED de silêncio/standby estiver aceso, a unidade de controle remoto deve estar desligada. Ligue a força a partir do controle remoto.

## 注意:

- 主機上的POWER (電源) 指示燈亮，就表示電源已由遙控器關閉。
- 出遙控器接電線之開和關。
- 本機打長時間不用時應將電線接線拔下。

## 注意:

若只有MUTE/STANDBY LED指示燈亮，就表示電源已由遙控器關閉。應從遙控器接電線。

## PRECAUTIONS PARA LA INSTALACION

Deje por lo menos 10 cm. de espacio entre esta unidad y cualquier otro componente situado sobre ella.

## VOORZORGSAAMTEGELIEN

Plaatsing dient een ruimte van minstens 10 cm open te laten tussen de toestel en een ander erop geplaatst component.

## FÖRSIKTIGHETSÅTGÄRDER VID INSTALLATIONEN

Så till ett det finns minst 10 cm mellanrum mellan apparaten och en ev. annan apparat som ställs ovanpå.

## CUIDADOS NA INSTALAÇÃO

Deixe um espaço de pelo menos 10 cm entre esta unidade e qualquer outro componente colocado acima.

## 安裝注意

本機須與其他設備間保持至少10厘米。

10cm or more  
10cm oder mehr  
10cm o più  
10cm o più  
10cm o più  
10cm o più  
10cm o più  
10cm o più

10 厘米或更多

## NOTE:

- Always keep the POWER switch on the main unit turned on.
- Turn the power on and off from the remote control unit.
- Unplug the power cord when you do not plan to use the unit for a long period of time.

## CAUTION:

If only the MUTE/STANDBY LED is lit, this means that the power is turned off from the remote control unit. Turn the power on from the remote control unit.

## HINWEIS:

- Lassen Sie den Netzschalter (POWER) am Hauptgerät stets eingeschaltet.
- Schalten Sie den Strom mit dem Fernbedienungsgerät ein-und aus.
- Trennen Sie das Netzkabel vom Netz, wenn Sie das Gerät nicht länger verwenden möchten. Schalten Sie den Strom vom Fernbedienungsgerät aus.

## VORSICHT:

Wenn nur das Stummzeichen-/Beleuchtungs-LED (MUTE/STANDBY) leuchtet, bedeutet dies, dass die Stromversorgung über die Fernbedienung unterbrochen ist. Schalten Sie den Strom vom Fernbedienungsgerät aus ein.

## REMARKUE:

- S'assurer que le commutateur d'alimentation (POWER) sur l'unité principale reste toujours dans la position active.
- Alumer et éteindre l'appareil avec la télécommande.
- Débrancher le cordon d'alimentation lorsque l'appareil ne sera pas utilisé pendant une longue période.

## ATTENTION:

Si seul le témoin (LED) de sourdine/veille (MUTE/STANDBY) est allumé, cela signifie que l'appareil est mis hors circuit par la télécommande. Allumez l'appareil avec la télécommande.

## NOTA:

- Tenere sempre l'interruttore della corrente (POWER) dell'unità principale nella posizione di attivazione.
- Accendere e spegnere l'appareil con la telecomando.
- Scendere il cavo di alimentazione quando avrete intenzione di non usare l'appareil per un lungo periodo.

## AVVERTENZE:

Se solo il LED di silenziosità/standby è illuminato, questo significa che la corrente è stata spenta con il telecomando. Riaccendere la corrente usando il telecomando.

## PRECAUTIONS FOR INSTALLATION

Leave at least 10cm of space between this unit and any other component placed above.

## SICHERHEITSSACHWAGEN BEIM EINBAU

Lassen einen Mindestabstand von 10 cm zwischen diesem Gerät und der anderen Komponente, die daraufgestellt wird.

## PRECAUTIONS D'INSTALLATION

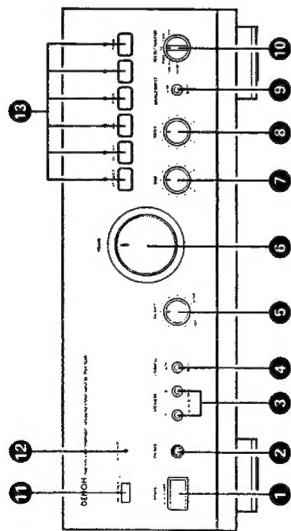
Prévoir un espace d'au moins 10 cm entre l'unité et tout autre appareil se trouvant au-dessus.

## PRECAUTIONI PER L'INSTALLAZIONE


Lasciare uno spazio libero di almeno 10 cm fra quest'unità e qualsiasi altro componente che è collocato sopra la stessa.



FRONT PANEL  
FRONTPLATTE  
PANNEAU AVANT  
PANNELLO ANTERIORE  
正面



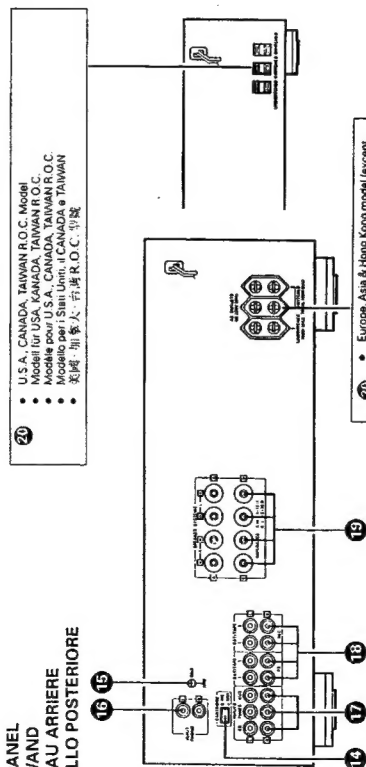REAR PANEL  
RÜCKWAND  
PANNEAU ARRIERE  
PANNELLO POSTERIORE  
背面



- 20
- Europe, Asia & Hong Kong model (except for U.K.)
  - Modell für Europa, Asien & Hong Kong (außer Großbritannien).
  - Modèle pour Europe, Asie et Hong Kong (sauf Royaume-Uni).
  - Modello per l'Europa, l'Asia e Hong Kong (escluso il Regno Unito).
  - 歐洲、亞洲及香港型號 (除英國外)

Fig. 1  
Abb. 1

CONNECTIONS  
ANSCHLÜSSE  
CONNEXIONS  
CONNESSIONI  
連接方法

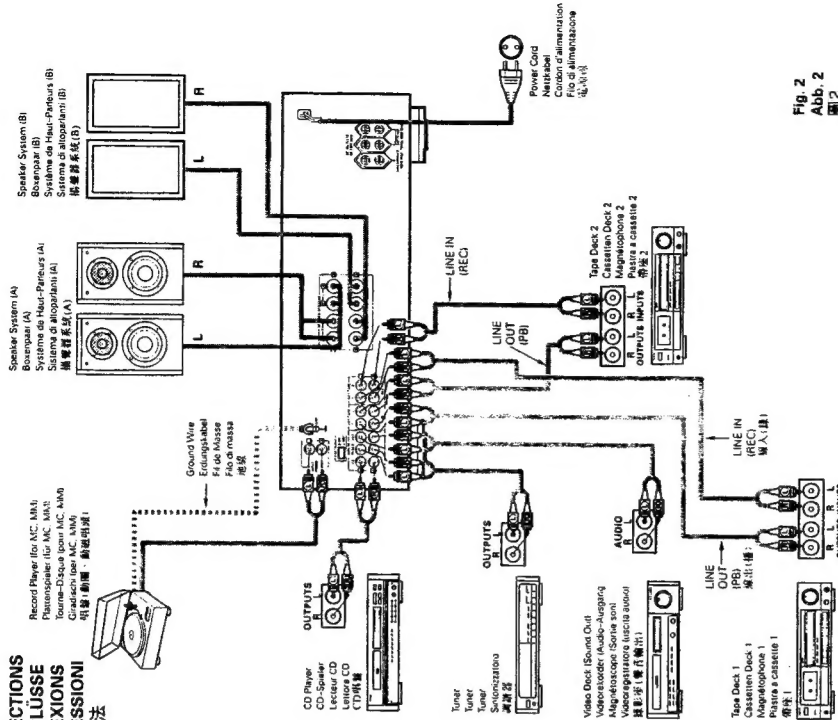


Fig. 2  
Abb. 2

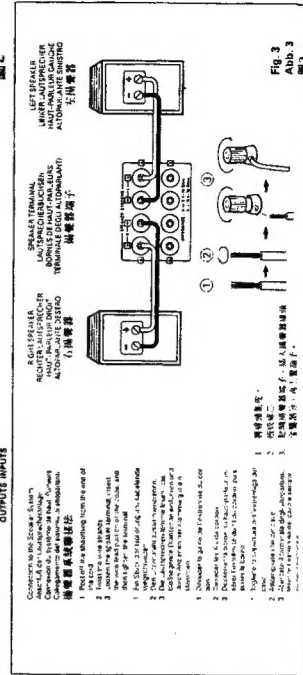



 













Fig. 3  
Abb. 3

① CARTRIDGE	② GND	③ PHONO	④ CD, TUNER, AUX	⑤ DAT/TAPE-1, DAT/TAPE-2	⑥ SPEAKERS
Cartridge Selector Switch	Phono Input Terminals (Phono)	Phono Input Terminals (Phono)	Input Terminals (CD, TUNER, AUX)	Playback and Recording Terminals (DAT/TAPE-1, DAT/TAPE-2)	Speaker Terminals
Turn-on/Standby Switch	Ground	Scalable Input Terminals (Phono)	Input Terminals (CD, TUNER, AUX)	Recording Terminals (DAT/TAPE-1, DAT/TAPE-2)	Lautsprecher-Miniklammern
Selector de canal	Ground	Phono d'entrée (Phono)	Entrées d'entrée (CD, TUNER, AUX)	Terminals for Playback and Recording (DAT/TAPE-1, DAT/TAPE-2)	Bornes de haut-parleurs
Interruttore di selezione canale	Ground	Terminali di ingresso (Phono)	Terminali di ingresso (CD, TUNER, AUX)	Terminals for Playback and Recording (DAT/TAPE-1, DAT/TAPE-2)	Terminali degli altoparlanti
頻道選擇開關	地線	喇叭輸入端子 (喇叭)	輸入端子 (CD, 調諧器, 輔助)	播放/錄音端子 (DAT/TAPE-1, DAT/TAPE-2)	揚聲器端子



## DESIGNATIONS AND FUNCTIONS OF PANEL CONTROLS

- 1 POWER (Power Switch)**  
When the power switch is turned ON (  ), the MUTE/STAND-BY LED  lights.  
When the power switch is turned ON, power is supplied to the unit. It takes a few seconds after the power is turned on for the unit to warm up. This is due to the built-in muting circuit that eliminates noise during the *warm-up* operation.
- 2 PHONES (Headphone Jack)**  
This jack is used to plug in the headphones.
- 3 SPEAKERS (Speaker Selection Switch)**  
The PMA-925R/725R can be connected to two speaker systems. Speaker system A and speaker system B.  
When the speaker switch is turned ON, speaker system A operates. When the speaker switch is turned OFF, speaker system B operates.  
When A and B are pressed on together, both speaker systems operate simultaneously. When the A and B switches are both off (in the out position), there is no output from the speaker terminals. This setting is used to listen to playback through the headphones.
- 4 LOUDNESS (Loudness Switch)**  
When the volume is low, it is difficult for the human ear to clearly distinguish notes in the low and high frequency ranges. The loudness switch allows a simple "one-touch" correction of this difficulty. Press the loudness switch ON (  ) when listening to music at a low volume. The low notes and high notes will be corrected to produce a natural sound.
- 5 BALANCE (Balance Control)**  
This knob is used to adjust the balance between the left and right channels. When it is set to the center position, the amplitude of the amplifier is equal on both sides. If there is a difference in the left and right channel output voltages for a cartridge, move the knob to the left and the right to adjust it. If the volume on the right side is too low, turn the knob to the right (  ). If the volume on the left side is too low, turn the knob to the left (  ). This will achieve an even balance on the left and right sides.
- 6 VOLUME (Volume Control)**  
This knob controls the overall volume level.  
Turn the knob to the right (  ) to raise the volume and to the left (  ) to lower it.
- 7 BASS (Bass Control)**  
This knob is used to control the bass quality of the sound.  
When the knob is set at the center position, the frequency characteristics are flattened in the range below 1000 Hz. The bass is emphasized as the knob is moved off center to the right (  ), and reduced as it is moved to the left (  ).  
When volume control  is set to the right of the center position, the effect of the other controls is reduced.
- 8 TREBLE (Treble Control)**  
This knob is used to control the treble quality of the sound.  
When the knob is set at the center position, the frequency characteristics are flattened in the range above 1000 Hz. The treble is emphasized as the knob is moved off center to the right (  ), and reduced as it is moved to the left (  ).  
When volume control  is set to the right of the center position, the effect of the other controls is reduced.

**13 SOURCE DIRECT (Source Direct Switch)**

The controls (BALANCE, LOUDNESS, and TONE) can be used when this switch is in the OFF (  ) position.  
When set to the ON (  ) position, the above controls are bypassed and the signals are input directly to the volume control circuit, providing high quality sound.

**14 REC OUT SELECTOR (Rec Out Select Switch)**

- Use this switch to select the recording component.
- PHONO: Used to recording from the turntable.
  - CD: Used to recording from the CD player.
  - TUNER: Used to recording from the tuner.
  - AUX: Used to recording component that connected to the AUX terminal.
  - DAT/TAPE-1  2: Used to recording from the tape deck connected to the DAT/TAPE-1 jacks.
  - DAT/TAPE-2  1: Used to recording from the tape deck connected to the DAT/TAPE-2 jacks.

**15 REMOTE SENSOR (Remote Control Sensor)**


This sensor receives the infra-red light transmitted from the wireless remote control unit.  
For remote control, point the wireless remote control unit towards the sensor.

**16 MUTE/STANDBY LED**

This LED flashes while the muting circuit is activated when the power is turned on and when muting is turned on from the remote control unit, and remains lit (without flashing) while the power is on.



**17 INPUT SELECTOR (Input Select Switch)**

Use these to select the program source.  
When the button for the desired program source is selected, its LED lights. One program source only can be selected at a time, as follows:

- PHONO: Used to select the output from a turntable that is connected to the PHONO terminal. Use the PHONO switch  (flair Panel Serial) to switch the sensitivity to correspond to the cartridge type being used.  
Used to listen a compact disc player or other component that is connected to the CD terminal.
- TUNER: Used to play a component such as an FM/AM tuner or a TV tuner that is connected to the TUNER terminal.  
Used to play a component such as a Hi-Fi video player, TV tuner, 8-track tape player or tape deck that is connected to the AUX terminal.
- AUX: Used to play a component such as a Hi-Fi video player, TV tuner, 8-track tape player or tape deck that is connected to the AUX terminal.
- DAT/TAPE-1: Use this Position when using the tape deck, etc., connected to the DAT/TAPE-1 jacks.
- DAT/TAPE-2: Use this Position when using the tape deck, etc., connected to the DAT/TAPE-2 jacks.

**18 PHONO (Cartridge Selection Switch): Rear Panel Side**

This switch is set according to the type of player cartridge to be used.


- MC (  ): Used when an MC (moving-coil) cartridge with an output of less than 0.5 mV is used.
- MM (  ): Used when an MM (moving-magnet) cartridge with an output of 2 mV or more is used.

**19 AC OUTLETS: Rear Panel Side**

- For U.S.A., Canada, and Taiwan R.O.C. models:  
AC outlets are used for connecting amplifier component units, such as tuner, turntable, tape deck, etc.
- SWITCHED (Total capacity: 120 W):  
These outlets are turned ON/OFF when main power switch and POWER button on the Remote Control Unit is turned on/off.
- UNSWITCHED (Capacity: 240 W):  
This outlet is always ON whether power switch is on or OFF.
- For Europe (except the U.K.), Asia and Hong Kong models:  
AC outlets are used for connecting amplifier component units, such as tuner, turntable, tape deck, etc.
- SWITCHED (Total capacity: 100 W):  
These outlets are turned ON/OFF when main power switch and POWER button on the Remote Control Unit is turned on/off.
- UNSWITCHED (Capacity: 100 W):  
This outlet is always ON whether power switch is on or OFF.

## OPERATION

## PREPARATION

- 1. CHECKING CONNECTIONS**
  - Make sure that all the connections are proper by referring to the back panel. (Fig. 2, 3)
  - Check the polarity (positive and negative) of connections, and the directivity of stereo separation (right cord to right channel terminal, and left cord to left channel terminal).
  - Check the directivity of pin cord connection.
- 2. SETTING OF EACH KNOB**
  - Turn the volume control knob counterclockwise, to "0".
  - Set the rotary knob to "flat".
  - Set SOURCE DIRECT and LOUDNESS to "OFF (  )".

After checking the above items, turn on the power; the amplifier is set in the ready mode in a few seconds.

## PLAYING A RECORD

1. Set the INPUT SELECTOR switch to "PHONO".
2. Operate the turntable and play the record.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

## PLAYBACK OF CD PLAYER

1. Set the INPUT SELECTOR switch to "CD".
2. Operate the CD player.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

## RECEPTION OF RADIO PROGRAMS

1. Set the INPUT SELECTOR switch to "TUNER".
2. Operate the tuner to receive a radio program.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

## CONNECTIONS OF AUDIO EQUIPMENT TO AUX TERMINALS

1. Set the INPUT SELECTOR switch to "AUX" Position.
2. Operate the Audio equipment Systems.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

## PLAYBACK WITH TAPE DECK

1. Set the INPUT SELECTOR switch to "DAT/TAPE-1" or "DAT/TAPE-2".
2. Operate the Tape Deck.
3. Turn the volume and tone controls to yield an appropriate volume and sound quality.

## RECORDING WITH TAPE DECK

1. Set the REC OUT SELECTOR to the program source you wish to record.
2. Start the playback of the program source.
3. Start recording with the component connected to "DAT/TAPE-1" or "DAT/TAPE-2".

- In the PMA-925R/725R, the REC OUT signal and the speaker headphones signal are output via separate circuits so that knobs and switches related to the tone and volume have no effect whatsoever on the sound that is recorded. Also, since the recording function is selected by the REC OUT SELECTOR, the free program source can be played through the speakers (or headphones) even during recording.

## MONITORING THE RECORDING

 
- A recording in progress can be monitored if a tape deck with three individual heads for recording and playback is used. A tape deck in which a common head is used for both recording and playback cannot be used to monitor recording. To monitor recording, turn the REC OUT selector to "DAT/TAPE-1" or "DAT/TAPE-2" with the INPUT SELECTOR will engage the RECORDING MONITOR and permit a check of the recording condition.

## CAUTION

## Protective Circuit

This set is equipped with a high speed protective circuit. This circuit protects the internal circuitry from damage due to large currents flowing when the speaker jacks are short-circuited. This protection circuit operates automatically in a short time after the speaker jacks are short-circuited. In such a case, be sure to turn the power to the set off and check the connections to the speakers. Then turn the power on again. After muting for several seconds, the set will operate normally.


## NOTE

- This amplifier has a full memory back-up system. When the power is turned on, INPUT SELECTOR  are set to the last mode set before the power was turned off.


## REMOTE CONTROL OPERATION

 The accessory Remote Control Unit is used to control the amplifier from a convenient distance.


- (1) **Inserting the Dry Cell Batteries**
1. Remove the battery cover on the Remote Control Unit.



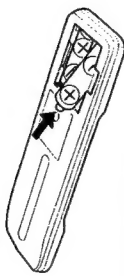
2. Insert two dry cell batteries as shown in the diagram on the battery supply unit.



 3. Replace the battery cover.



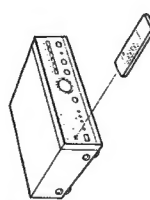- (2) **Directions for use**



### Note on operation

- Do not press the operating buttons on the Amplifier and the Remote Control Unit at the same time. This will cause misoperation.
- Operation of the Remote Control Unit will become less effective or erratic if the infrared Remote Control Sensor on the Amplifier is exposed to strong light or if there are obstructions between the Remote Control Unit and the sensor.
- In case you operate a VCR, TV or other components by remote control, do not operate buttons on two different remote control units at the same time. This will cause misoperation.

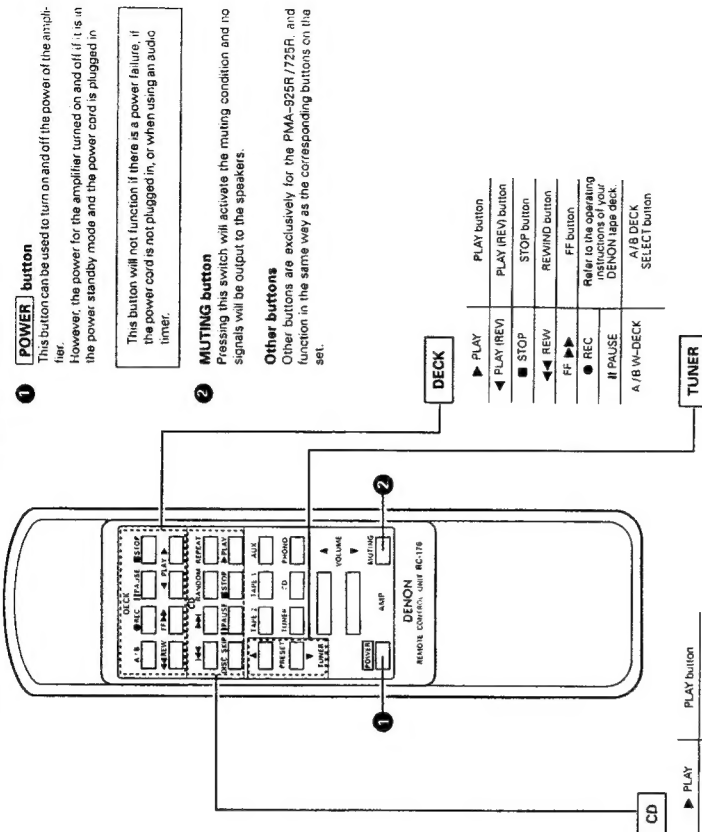
**Besides being able to operate the PMA-925R/725R amplifier with this Remote Control Unit, you can also operate a DENON cassette deck and CD player from this handy full-system Remote Control Unit.**

### Remote control section

#### Full-system Remote Control Unit

The full-system Remote Control Unit operates all major functions of the Amplifier, such as function switching, volume control. But that's not all! The same control pad can also control the major functions of a DENON CD player and cassette deck, and when combined with the PMA-925R/725R to create a remarkably ergonomic and versatile DENON system with all the quality sound reproduction that the devoted audiophile expects.

## Remote Control Unit RC-176 supplied with the PMA-925R/725R



### 1 POWER button

This button can be used to turn on and off the power of the amplifier. However, the power for the amplifier turned on and off if it is in the power standby mode and the power cord is plugged in.

This button will not function if there is a power failure, if the power cord is not plugged in, or when using an audio tuner.

### 2 MUTING button

Pressing this switch will activate the muting condition and no signals will be output to the speakers.

### Other buttons

Other buttons are exclusively for the PMA-925R/725R, and function in the same way as the corresponding buttons on the set.

### DECK

▶ PLAY	PLAY button
◀ PLAY (REV)	PLAY (REV) button
■ STOP	STOP button
◀◀ REW	REWIND button
▶▶ FF	FF button
● REC	Refer to the operating instructions of your DENON tape deck
■ PAUSE	A/B DECK SELECT button

### TUNER

### PRESET buttons

Press this button to move up or down among the preset station numbers.

▶ PLAY	PLAY button
■ STOP	STOP button
◀◀ REW	Reverse Track Search button
▶▶ FF	Forward Track Search button
RANDON	Refer to the operating instructions of your DENON CD player
REPEAT	Refer to the operating instructions of your DENON CD player
DISC SKIP	DISC SKIP button
■ PAUSE	PAUSE button

- The RC-176 Remote Control Unit can control CD players and cassette decks manufactured by DENON.
- Note that operation may not be possible for some models.
- Buttons are conveniently separated into groups, each group controlling one specific component. The groups are AMP, FUNCTION, CD, DECK and TUNER etc.

For details on operating other components, refer to the operating instructions for the CD player and/or cassette deck.

### CAUTION:

- If the power is turned off with the Remote Control Unit, the set is switched to the power stand-by state. If you are absent for a long period of time, unplug the power cord.
- Only the MUTE/STANDBY LED lights when in the power stand-by mode.
- You may experience erratic operation of the Remote Control Unit if it is operated in fluorescent light and direct sunlight. In particular if this light strikes the Remote Control Sensor on the Amplifier. However, this is not a malfunction, and if this should happen, simply protect the sensor against such light.

Technical Data (typical values)	Technische Daten (typische Werte)	Caractéristiques techniques (valeurs caractéristiques)	PMA-925R/725R
<b>• POWER AMPLIFIER SECTION</b> Rated Output Power: *Bridged channel driving 20 Hz to 20 kHz, T.H.D. 0.05% (400 ohm load) DIN, 1 kHz, T.H.D. 0.7% *Continuous 80W/65W per channel min. into 8 ohms from 20 Hz to 20 kHz with 1% THD, 0.05% T.H.D. and total harmonic distortion	<b>• LEISTUNGSSTÄRKE VERSTÄRKER</b> Nenn-Ausgangsleistung: *Bridg. Kanal betriebsbereit 20 Hz bis 20 kHz, T.H.D. 0.05% (400 Ohm Last) DIN, 1 kHz, T.H.D. 0.7% *Zustandföhrig 80W/65W pro Kanal min. zu 8 Ohm von 20 Hz bis 20 kHz mit einem 1% THD, 0.05% T.H.D. und Gesamtharmonikverföhrung	<b>• PARTIE AMPLIFICATEUR</b> Puissance nominale: *Entièrement deux canaux 20 Hz à 20 kHz, T.H.D. 0.05% (charge 400 ohms) DIN, 1 kHz, T.H.D. 0.7% *80W/65W en continu par canal sur min. 8 Ohms de 20 Hz à 20 kHz avec une THD de 1% et une distorsion totale de 0.05% ou moins.	80W + 80W/65W + 65W 130W + 130W/100W + 100W 80W/65W
<b>• PRE AMPLIFIER SECTION</b> Input Sensitivity/ (Rec'd. Terminal) Input Impedance: PHONO CD, TUNER, AUX TAPE-1, TAPE-2 RIAA Deviation: PHONO Within $\pm 0.3$ dB Maximum input: Maximum input: *OVERALL CHARACTERISTICS SN Ratio (IHF A Network): (input terminals short-circuited) SOURCE-DIRECT ON Tone Control Adjustable BASS TREBLE Loudness: *OTHERS Power Supply	<b>• VORVERSTÄRKER</b> Empfindlichkeit/ (Empfangsterminal) Eingangsimpedanz: PHONO CD, TUNER, AUX TAPE-1, TAPE-2 RIAA-Abweichung: PHONO Innerhalb $\pm 0.3$ dB Maximum Eingang: Maximum Eingang: *GESAMTEIGENSCHAFTEN Signal/Rauschverföhrung (IHF A-Netzwerk) (Eingangsterminal kurzgeschlossen) SOURCE-DIRECT ON Klangregelbereich: TIEFEN (BASS) HOHEN (TREBLE) TREBLE Geföhrlichkeits Lautstärke: *SONSTIGES Netzspannung und-Frequenz	<b>• PRE-AMPLI</b> Puissance d'entrée/ (Borne de sonde d'interconnexion) Impédance d'entrée: PHONO CD, TUNER, AUX TAPE-1, TAPE-2 Variation RIAA: PHONO Int. $\pm 0.3$ dB Entrée max.: Entrée max.: <b>• CARACTÉRISTIQUES GÉNÉRALES</b> Rapport signal/bruit (Réseau IHF A) (Bornes d'entrée court-circuitées) SOURCE DIRECT ON Gamme de réglage de tonalité: GRAVES TIEFEN (BASS) AIGÜES Compensations physiologique: *AUTRES Alimentation	MAX 3.5 mV/20 kHz MC 200 pV/100 kHz 150 mV/47 kHz 20 Hz ~ 20 kHz PHONO 180 mV/1 kHz MC 120 mV/1 kHz PHONO MAX 94 dB int. 5 mV input MC 76 dB int. 0.5 mV input CD 100 dB TAPE-1, TAPE-2: 107 dB 100 Hz $\pm 8$ dB 10 kHz $\pm 8$ dB 100 Hz $\pm 7$ dB 10 kHz $\pm 6$ dB AC230V/50 Hz (For Europe, Asia and Hong Kong models) AC110V/60 Hz (For U.S.A., Canada, and Taiwan R.O.C. models) 100W (Total for Europe (except the U.K.), Asia and Hong Kong models) 120W (Total for U.S.A., Canada, and Taiwan R.O.C. models) 240W (For U.S.A., Canada, and Taiwan R.O.C. models) 4.2A/3.6A (U.S.A. and Canada models) 4.3A/3.6A (U.S.A. and Canada models) 4.3A/3.6A (U.S.A. and Canada models) 4.3A/3.6A (U.S.A. and Canada models) 11 kg (24 lbs 4oz) / 9.6 kg (21 lbs 3oz)
<b>• WECHSELSTROM-AUSGÄNGE</b> Switched x 2 Unswitched x 1: <b>Power Consumption</b> Dimensions x (W) x (H) x (D)	<b>Wachstums-Ausgänge</b> Geschaltet x 2 Ungeschaltet x 1: <b>Leistungsaufnahme</b> Abmessungen (B) x (H) x (T)	<b>Prises secteur (AC)</b> Commutées x 2 Non commutées x 1: <b>Consommation</b> Dimensions (L) x (H) x (D)	55W (90 x 194H) x 180Dmm 2-1184" x 7-4164" x 4584" 100 g (about 3.5 oz) (including batteries)

Note: \*1 For Europe, Asia and Hong Kong. Hinweis: \*1 Für Europa, Asien und Hong Kong.  
 \*2 For U.S.A., Canada, and Taiwan R.O.C. \*2 Für U.S.A., Kanada, und Taiwan R.O.C.

Specifications and contents are subject to change without notice for purposes of improvement.  
 Spezifikationen und Inhalte sind ohne Vorwarnung Änderungen vorbehalten.  
 Specifications and contents are subject to change without notice for purposes of improvement.

## ENGLISH

Please check to make sure the following items are included with the main unit in the carton:

- (1) Operating Instructions ..... 1
- (2) Remote Control Unit (RC-176) ..... 1
- (3) Batteries R6P (AA) ..... 2

## DEUTSCH

Bitte überprüfen Sie, ob die folgenden Teile vollständig in der Verpackung enthalten sind:

- (1) Bedienungsanleitung ..... 1
- (2) Fernbedienung (RC-176) ..... 1
- (3) Batterien vom Typ R6P (AA) ..... 2

## FRANCAIS

Veuillez contrôler que les articles suivants sont bien joints à l'appareil principal dans le carton:

- (1) Mode d'emploi ..... 1
- (2) Unité de télécommande (RC-176) ..... 1
- (3) Piles R6P (AA) ..... 2

## ITALIANO

Controllare che le parti seguenti si trovino imballate con l'apparecchio nella scatola di spedizione.

- (1) Libretto delle istruzioni ..... 1
- (2) Telecomando (RC-176) ..... 1
- (3) Batterie R6P (AA) ..... 2

## MEMO:

## 中文

下列物品應主機一起包裝於紙箱內，請查對：

- (1) 使用說明書 ..... 1
- (2) 遙控器 (RC-176) ..... 1
- (3) 電池 R6P (AA) ..... 2

## ESPAÑOL

Por favor verifique asegurándose de que los siguientes artículos son empacados en la caja pero separados de la unidad principal:

- (1) Manual de instrucciones ..... 1
- (2) Unidad de control remoto (RC-176) ..... 1
- (3) Pilas R6P (AA) ..... 2

## NEDERLANDS

Controleer of de volgende accessoires bij het hoofd toestel in de doos zijn verpakt:

- (1) Gebruiksaanwijzing ..... 1
- (2) Afstandsbediening (RC-176) ..... 1
- (3) Batterijen R6P (AA) ..... 2

## SVENSKA

Kontrollera att följande förutsett huvudapparaten, finns med i kartongen.

- (1) Bruksanvisning ..... 1
- (2) Fjärrkontroll (RC-176) ..... 1
- (3) Batterier R6P (AA) ..... 2

## PORTUGUÊS

Certifique-se de que as seguintes peças estão incluídas na embalagem fora da unidade principal:

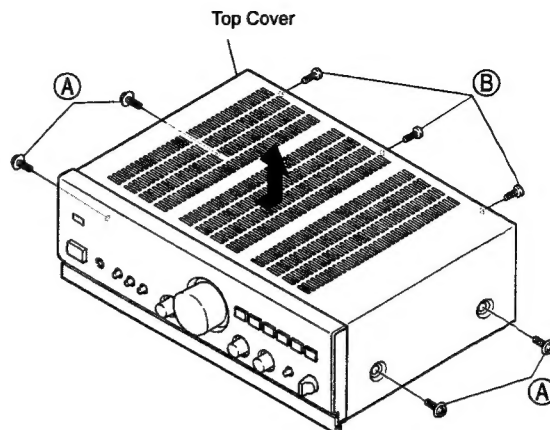
- (1) Instruções de operação ..... 1
- (2) Unidade de controle remoto (RC-176) ..... 1
- (3) Baterias R6P (AA) ..... 2



## REMOVAL OF EACH SECTION


### ● Top Cover

- 1) Remove 4 screws (A) and 3 screws (B).
- 2) Pull up Top Cover in arrow direction.




### ● Front Panel

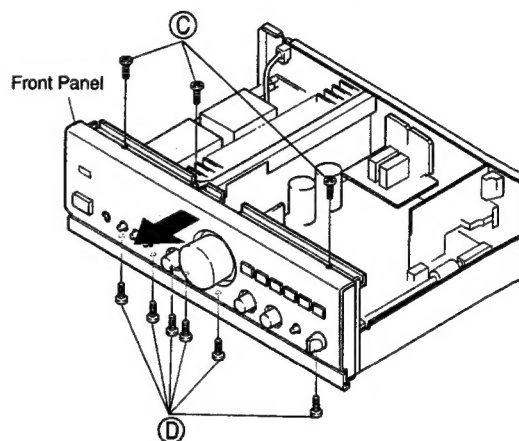- 1) Remove 3 screws (C).
- 2) Remove 6 screws (D).
- 3) Detach Front Panel in arrow direction.



### ● Main Chassis

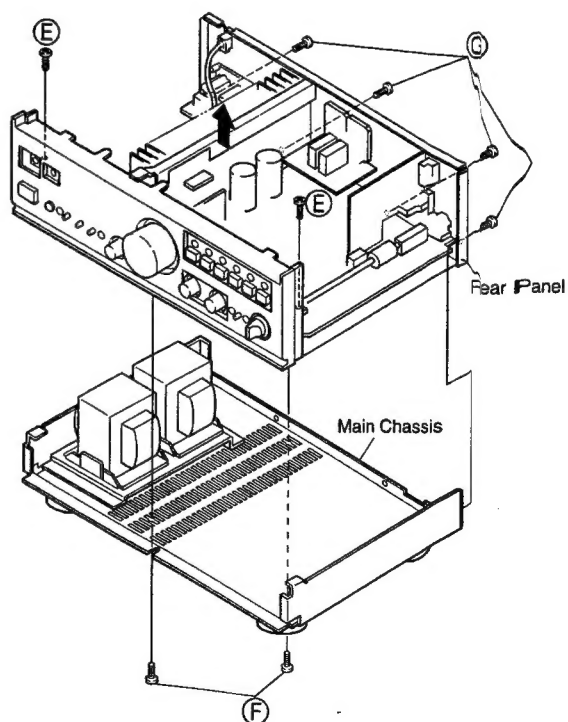
- 1) Remove 2 screws (E).
- 2) Remove 2 screws (F) securing Power Radiator with Main Chassis.
- 3) Remove 4 screws (G) securing Rear Panel with Main Chassis.






## ● Inner Panel

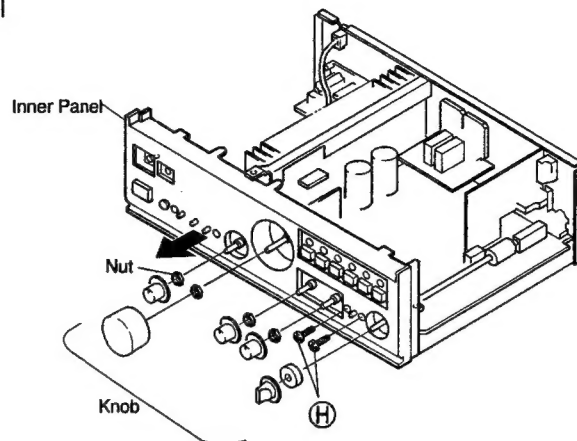- 1) Remove 5 Knobs and 4 nuts.
- 2) Remove 2 screws (H) and detach Inner Panel in arrow direction.



## ● Each Unit of Inner Panel

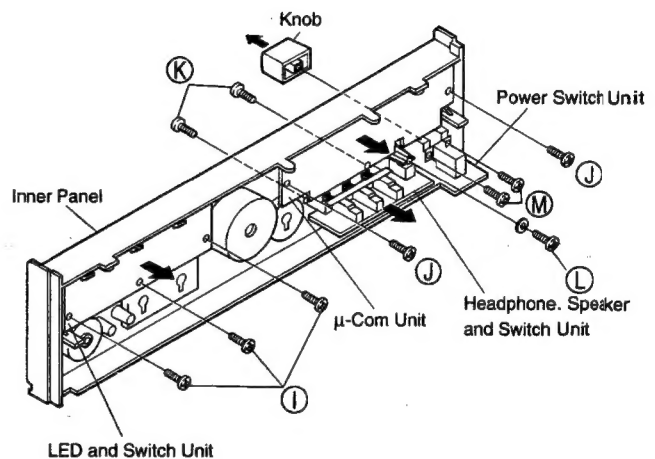- 1) Remove 3 screws (I), and detach LED and Switch Unit.
- 2) Remove 2 screws (J), and detach  $\mu$ -Com Unit.
- 3) Remove 2 screws (K) securing Headphone, SP Switch Unit with Inner Panel.
- 4) Remove 1 screw (L) and 1 washer, and detach Headphone, SP. switch Unit.
- 5) Remove 2 screws (M) and a Knob, then detach Power Switch Unit.



## FUNCTION OF NEW CIRCUIT

### 1. CHARACTERISTIC OF THIS CIRCUIT

The junction temperature of power amplifier output transistor always varies by an ambient temperature and music signal. Occurrence of junction temperature varying causes in change of bias current, unstable function, thus pure music signal playback is unable to do.

To maintain fixed bias current and to make pure music signal playback possible is the purpose of this circuit. This circuit holds stable bias current condition within a few seconds after turning on the power.

### 2. BLOCK DIAGRAM OF BIAS CONTROL CIRCUIT FUNCTION

As explained in Fig. 1, detects a voltage across the emitter resistors (RE) of TR1, TR2. Converts the detected voltage and comparing with the reference voltage to make the bias current value in stable state. Actually, these functions are performed by 1 chip IC.

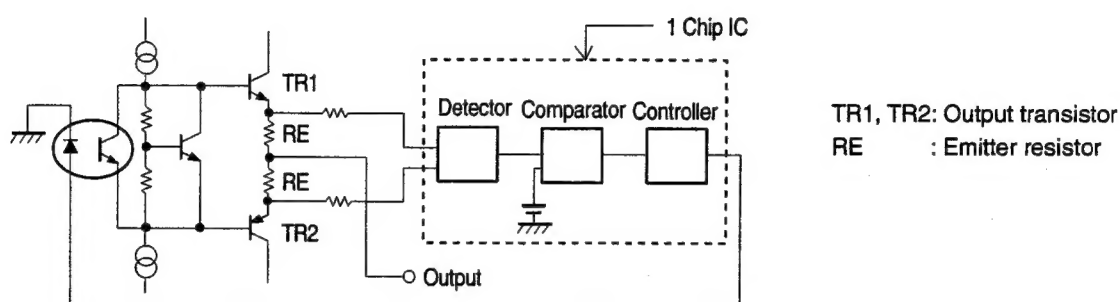


Fig. 1

### 3. POWER SUPPLY FOR ACTUATING CONTROL CIRCUIT

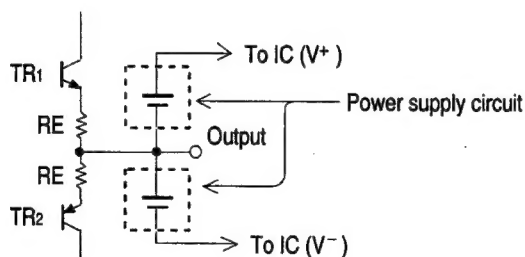




Fig. 2

The circuit (IC) controlling bias current actuates by floating.

Accordingly, the power supply is also needed to be floated.

In this circuit, as indicated in Fig. 2, output is common to provide +, - power system and supplies to IC.


#### 4. IC DESCRIPTION ( $\mu$ PC5023CS-064)

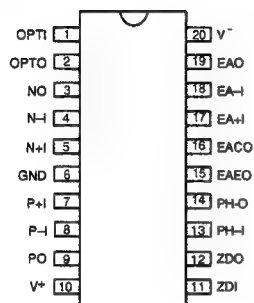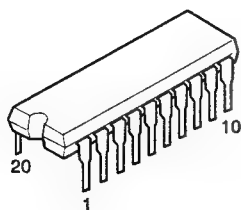


Pin. No.	Name	Contents
1	OPTI	NCP
2	OPTO	
3	NO	Comparator output
4	N-I	Comparator input (-)
5	N+I	Comparator input (+)
6	GND	Floating common
7	P+I	Comparator input (+)
8	P-I	Comparator input (-)
9	PO	Comparator output
10	V+	+ Power supply

Pin. No.	Name	Contents
11	ZDI	Control signal stabilizer input
12	ZDO	Control signal stabilizer output
13	PH-I	Peak hold input
14	PHO	Peak hold output
15	EACO	Controller gain setting
16	EA-I	Reference voltage
17	EA+I	Comparator gain setting
18	EA-1	Comparator gain setting
19	EAO	Comparator output
20	V-	- Power supply

#### 5. CIRCUIT IN THE CONCRETE

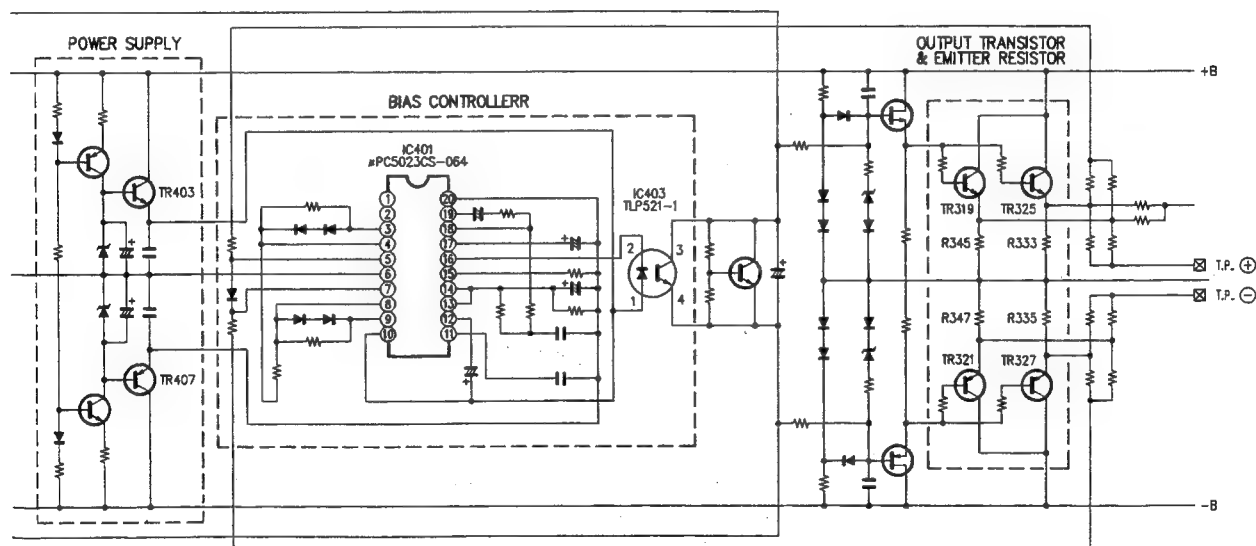

## METHOD OF ADJUSTMENTS

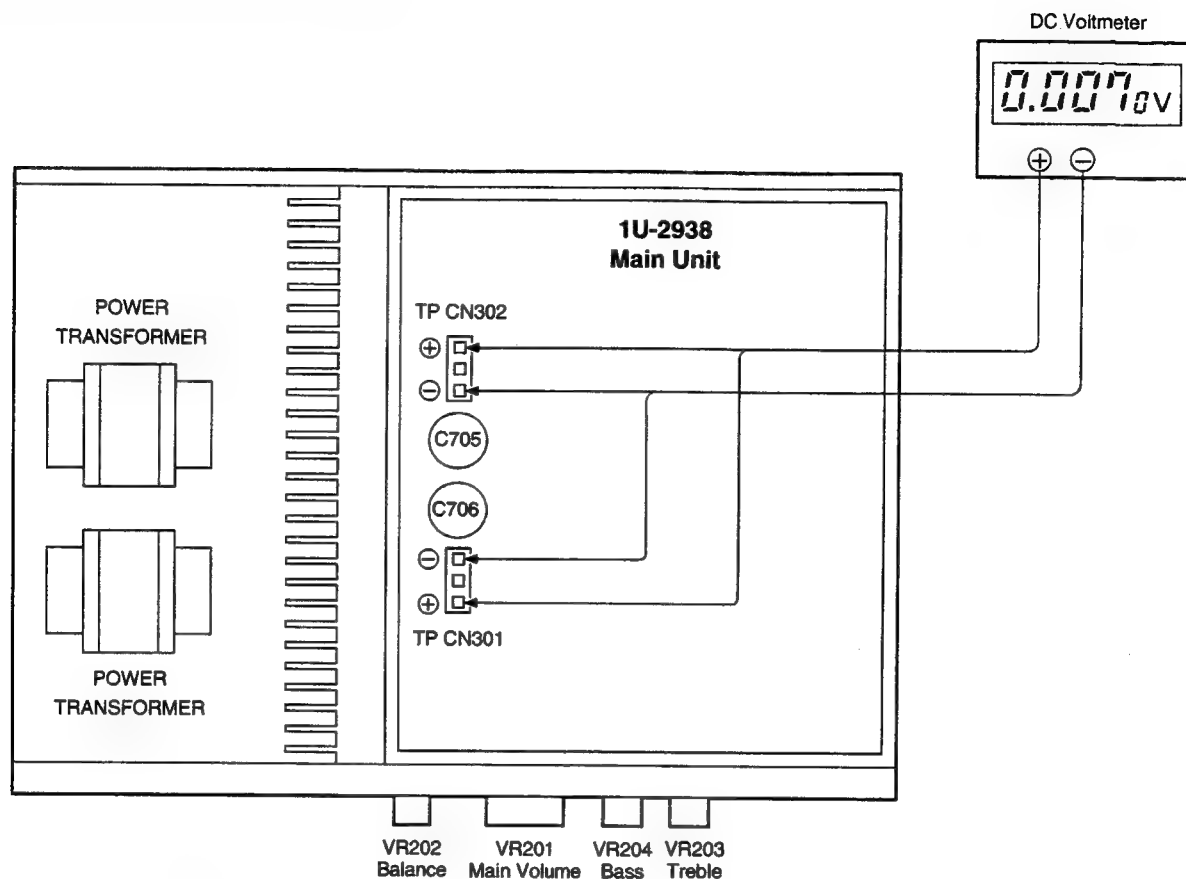

### IDLING CURRENT

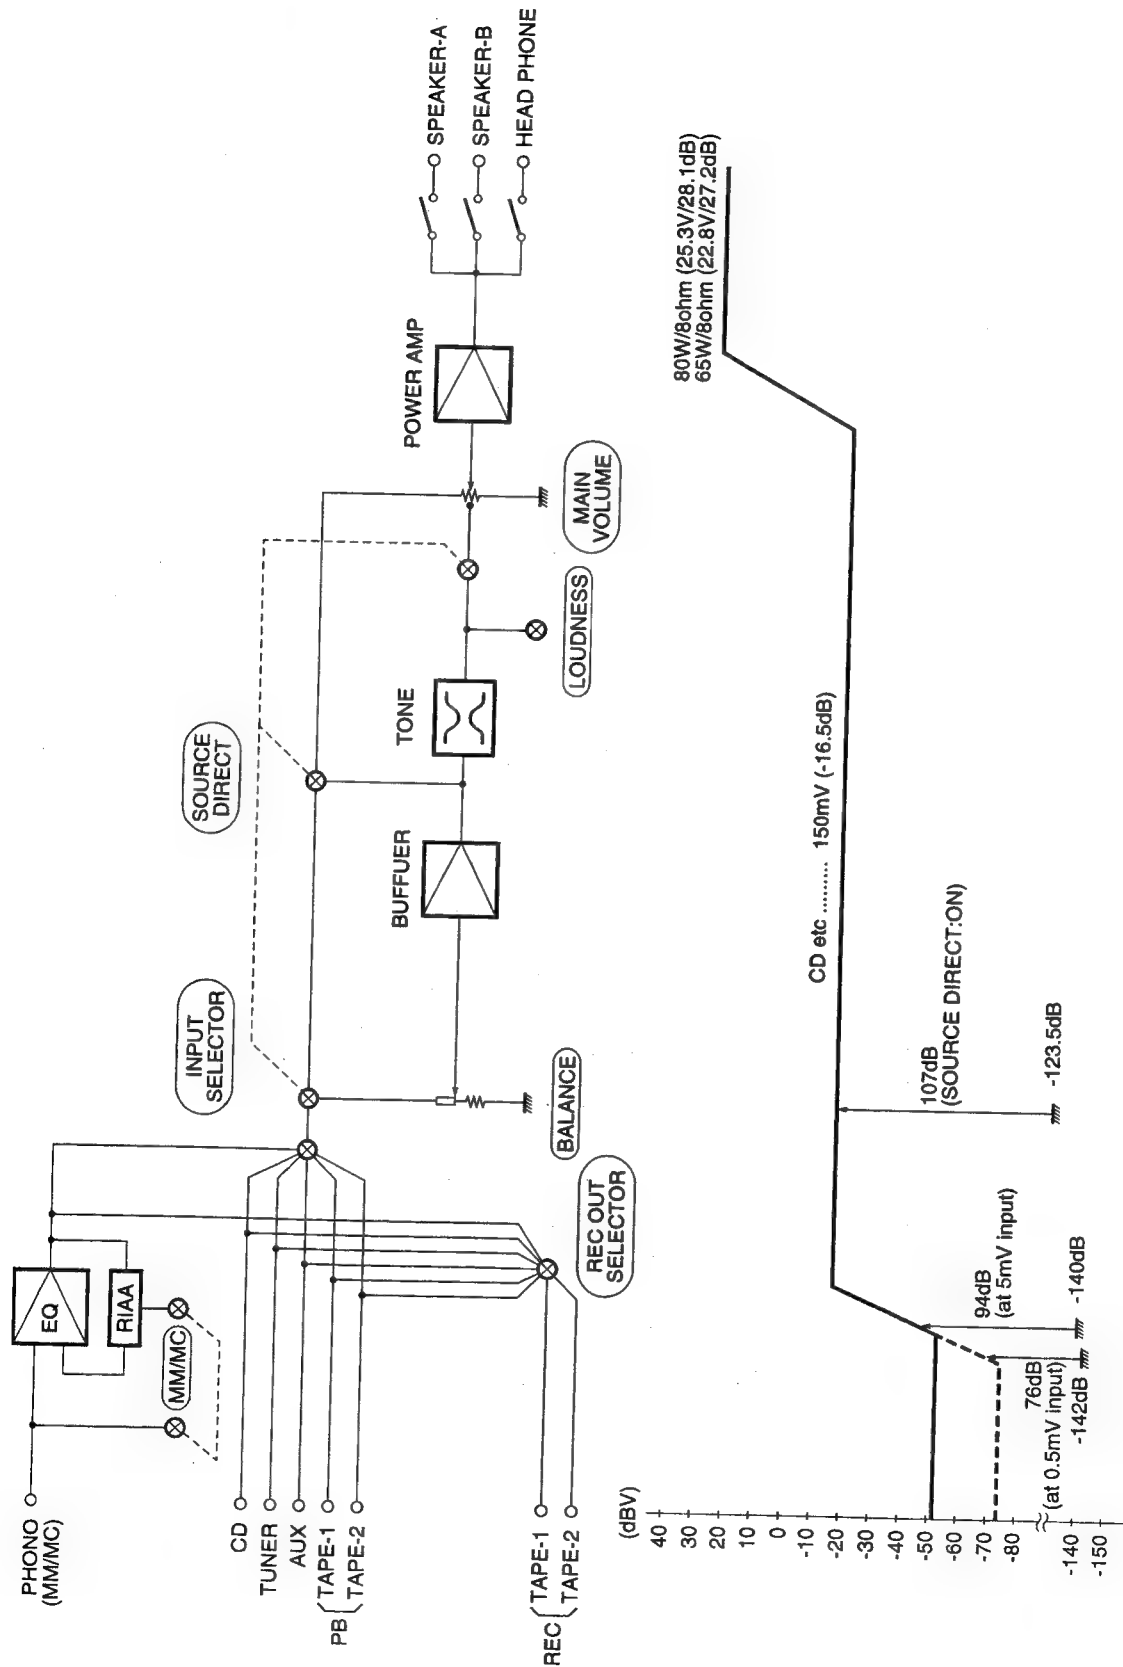
#### ● Setup

1. Lay the unit at an ordinary position away from a direct current from a cooler or fan. Do the adjustment at a temperature between 15°C (59°F) and 30°C (86°F).
2. Set controls as follows.  
 POWER SWITCH → OFF (■)  
 VOLUME CONTROL → fully counterclockwise. (⤿) min. (Main Volume VR201)  
 (VR202, 203 and 204 are center position.)  
 SPEAKER Terminals → open: do not connect the speakers, dummy load etc.

#### ● Confirm

1. Remove Top cover. And then connect DC Voltmeter to Test points of Main Unit.
2. Connect Power cord to AC Outlet, and turn POWER Switch "on" (■).
3. 10 seconds after check to see DC Voltmeter reading is  $7 \pm 2\text{mV}$ .
4. 2 minutes after re-check DC Voltmeter for  $7 \pm 2\text{mV}$  reading.



## BLOCK AND LEVEL DIAGRAM



## SEMICONDUCTORS

## ● IC's

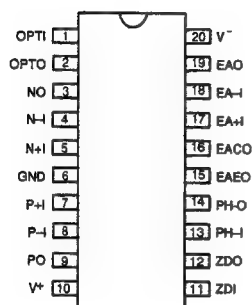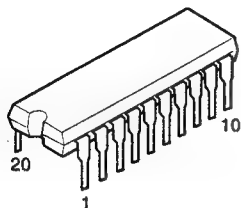
μPC5023CS-064 (IC401,402)



Pin. No.	Name	Contents
1	OPTI	NCP
2	OPTO	
3	NO	Comparator output
4	N-I	Comparator input (-)
5	N+I	Comparator input (+)
6	GND	Floating common
7	P-I	Comparator input (+)
8	P-I	Comparator input (-)
9	PO	Comparator output
10	V+	+ Power supply

Pin. No.	Name	Contents
11	ZDI	Control signal stabiliser input
12	ZDO	Control signal stabiliser output
13	PH-I	Peak hold input
14	PHO	Peak hold output
15	EAEO	Controller gain setting
16	EACO	Control signal output
17	EA+I	Reference voltage
18	EA-I	Comparator gain setting
19	EAO	Comparator output
20	V-	- Power supply


## HD404304A13P (IC801)

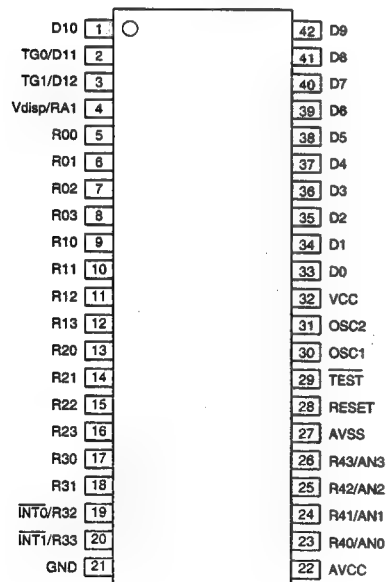


## HD404304A13P Terminal Function

Pin No.	Name	I/O	Contents	Active
1	D10	O	MUTE/STANDBY LED Indication	H
2	TG0/D11	O	NOP	
3	TG1/D12	O	Power Control (REMOTE Power-ON/OFF)	L
4	Vdisp/RA1	I	NOP	
5	R00	O	NOP	
6	R01	O	Muting Control (Power ON-OFF, Function Shifting, MUTING)	L
7	R02	O	SP-A Control	H
8	R03	O	SP-B Control	H
9	R10	O	Key scan strobe	H
10	R11	O		H
11	R12	O		H
12	R13	O	NOP	
13	R20	I	Key scan receive	
14	R21	I		
15	R22	I		
16	R23	I		
17	R30	O	Volume Control "UP" → "H"	H
18	R31	O	Volume Control "DOWN" → "H"	H
19	INT0/R32	I	Power Breakdown detect input	
20	INT1/R33	I	Remote control signal decoding input	
21	GND		GND	
22	AVcc		Avcc (Vcc)	
23	R40/AN0		NOP	
24	R41/AN1	I	NOP	
25	R42/AN2	I	NOP	
26	R43/AN3	I	Discrimination port by user's genre	
27	AVss		AVss (GND)	
28	RESET		M51954A; External	
29	TEST		Vcc	
30	OSC1		Center Fill Oscillator 4MHz; External	
31	OSC2		Center Fill Oscillator 4MHz; External	
32	Vcc		Vcc	
33	D0	O	NOP	
34	D1	O	NOP	
35	D2	O	TAPE-2 Control	H
36	D3	O	TAPE-1 Control	H
37	D4	O	NOP	
38	D5	O	AUX Control	H
39	D6	O	TUNER Control	H
40	D7	O	NOP	
41	D8	O	CD Control	H
42	D9	O	PHONO Control	H

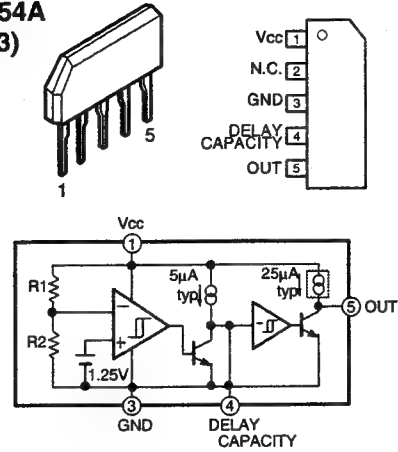M51954A  
(IC803)




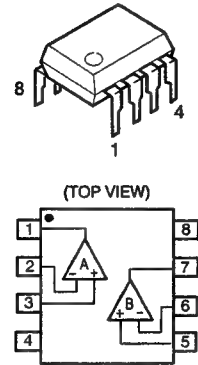BA4558 (IC201, 901)  
NJM2068DDC (IC202)




1. A OUTPUT
2. A-INPUT
3. A+INPUT
4. V-
5. B+INPUT
6. B-INPUT
7. B OUTPUT
8. V+


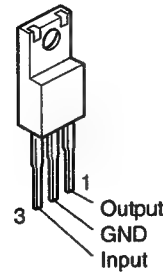
NJM7806FA(S) (IC702)




TLP521-1(BL)  
INFRARED LED + PHOTO TRANSISTOR  
(IC403, 404)

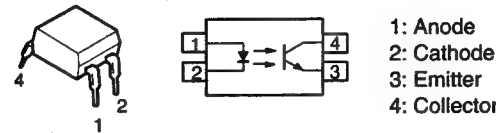


LB1639 (IC802)

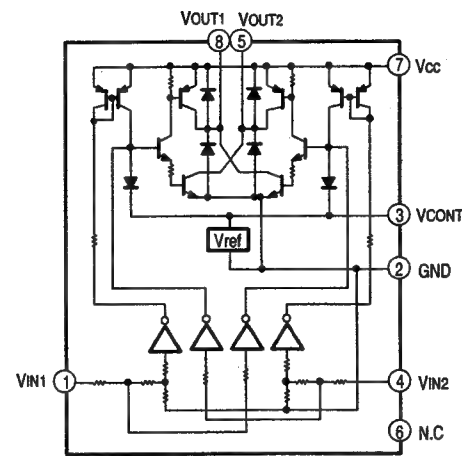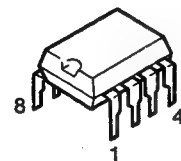

● IC PROTECTOR  
ICP-15 (IC701)

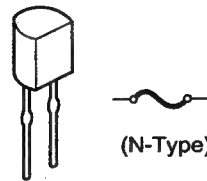

SBX1610-52 (Remote Control Receiver) (IC105)



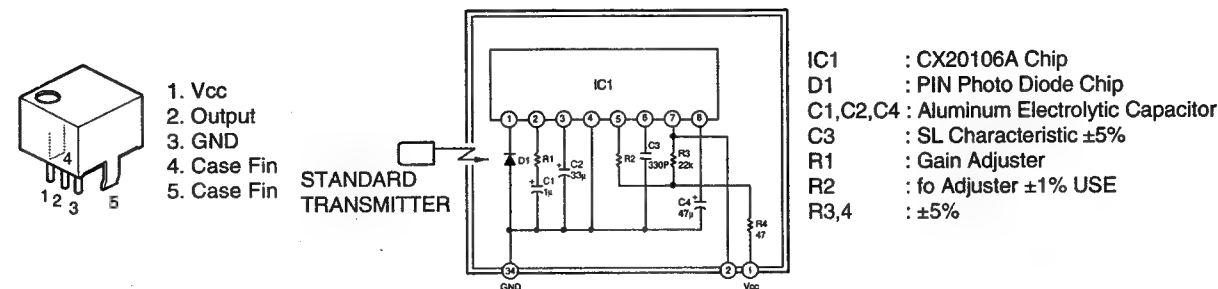


## ● TRANSISTORS


2SA970 (BL), (BL/GR)  
2SA988 (E/F)  
2SC1841 (E/F)  
2SC1815 (BL)  
2SC2240 (BL/GR)

2SA1145 (O)/(Y)  
2SC2705 (O)/(Y)

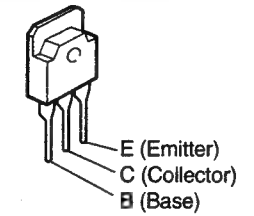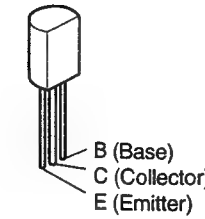
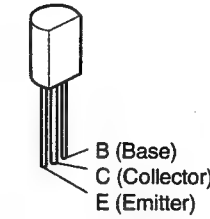
2SA1491 (O/P/Y)/(Z) PMA-925R  
2SC3855 (O/P/Y)/(Z) PMA-925R  
2SB1560 (O/P/Y) PMA-725R  
2SD2390 (O/P/Y) PMA-725R



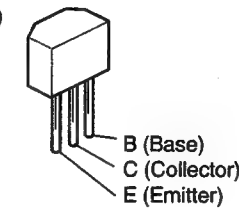
2SA1038S (S/E)  
2SA933S (S)  
2SC2389S (S/E)  
2SSC1740S (S)




DTA114ES

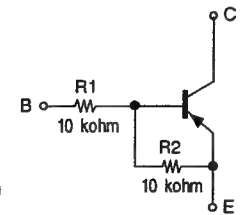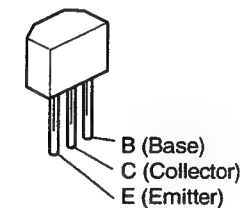


2SJ78  
2SK215

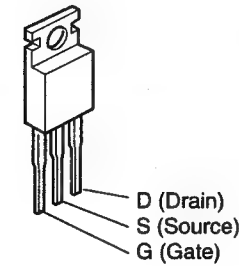


2SD2395 (E/F)  
2SB1566 (E/F)

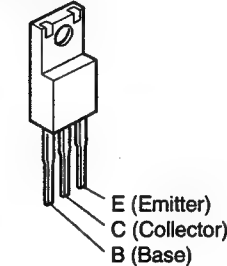

2SB1328 (P)

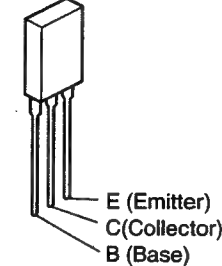


2SK369 (BL)/(GR)-C

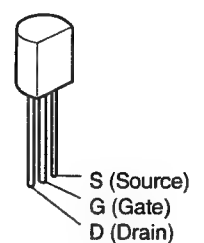


## ● DIODES (including LED)

 
1SS252




MTZJ 3.9A MTZJ 36A  
MTZJ 7.5A MTZJ 16A  
MTZJ 18A

 

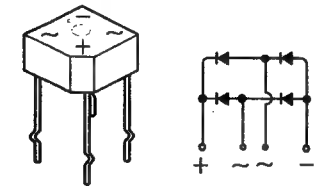
S4VB20F (D702) PMA-725R  
4D4B42 (D702) PMA-925R




SLR56-VR (Red)  
SLR56-DU (Orange)

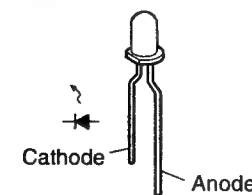

Thyristor  
SF0R1A42 (SC601)

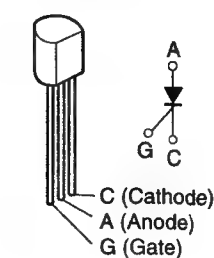


1SR35-200A

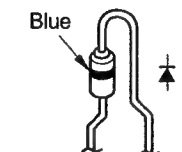



8

**1U-2938C MAIN UNIT ASS'Y FOR PMA-925R**

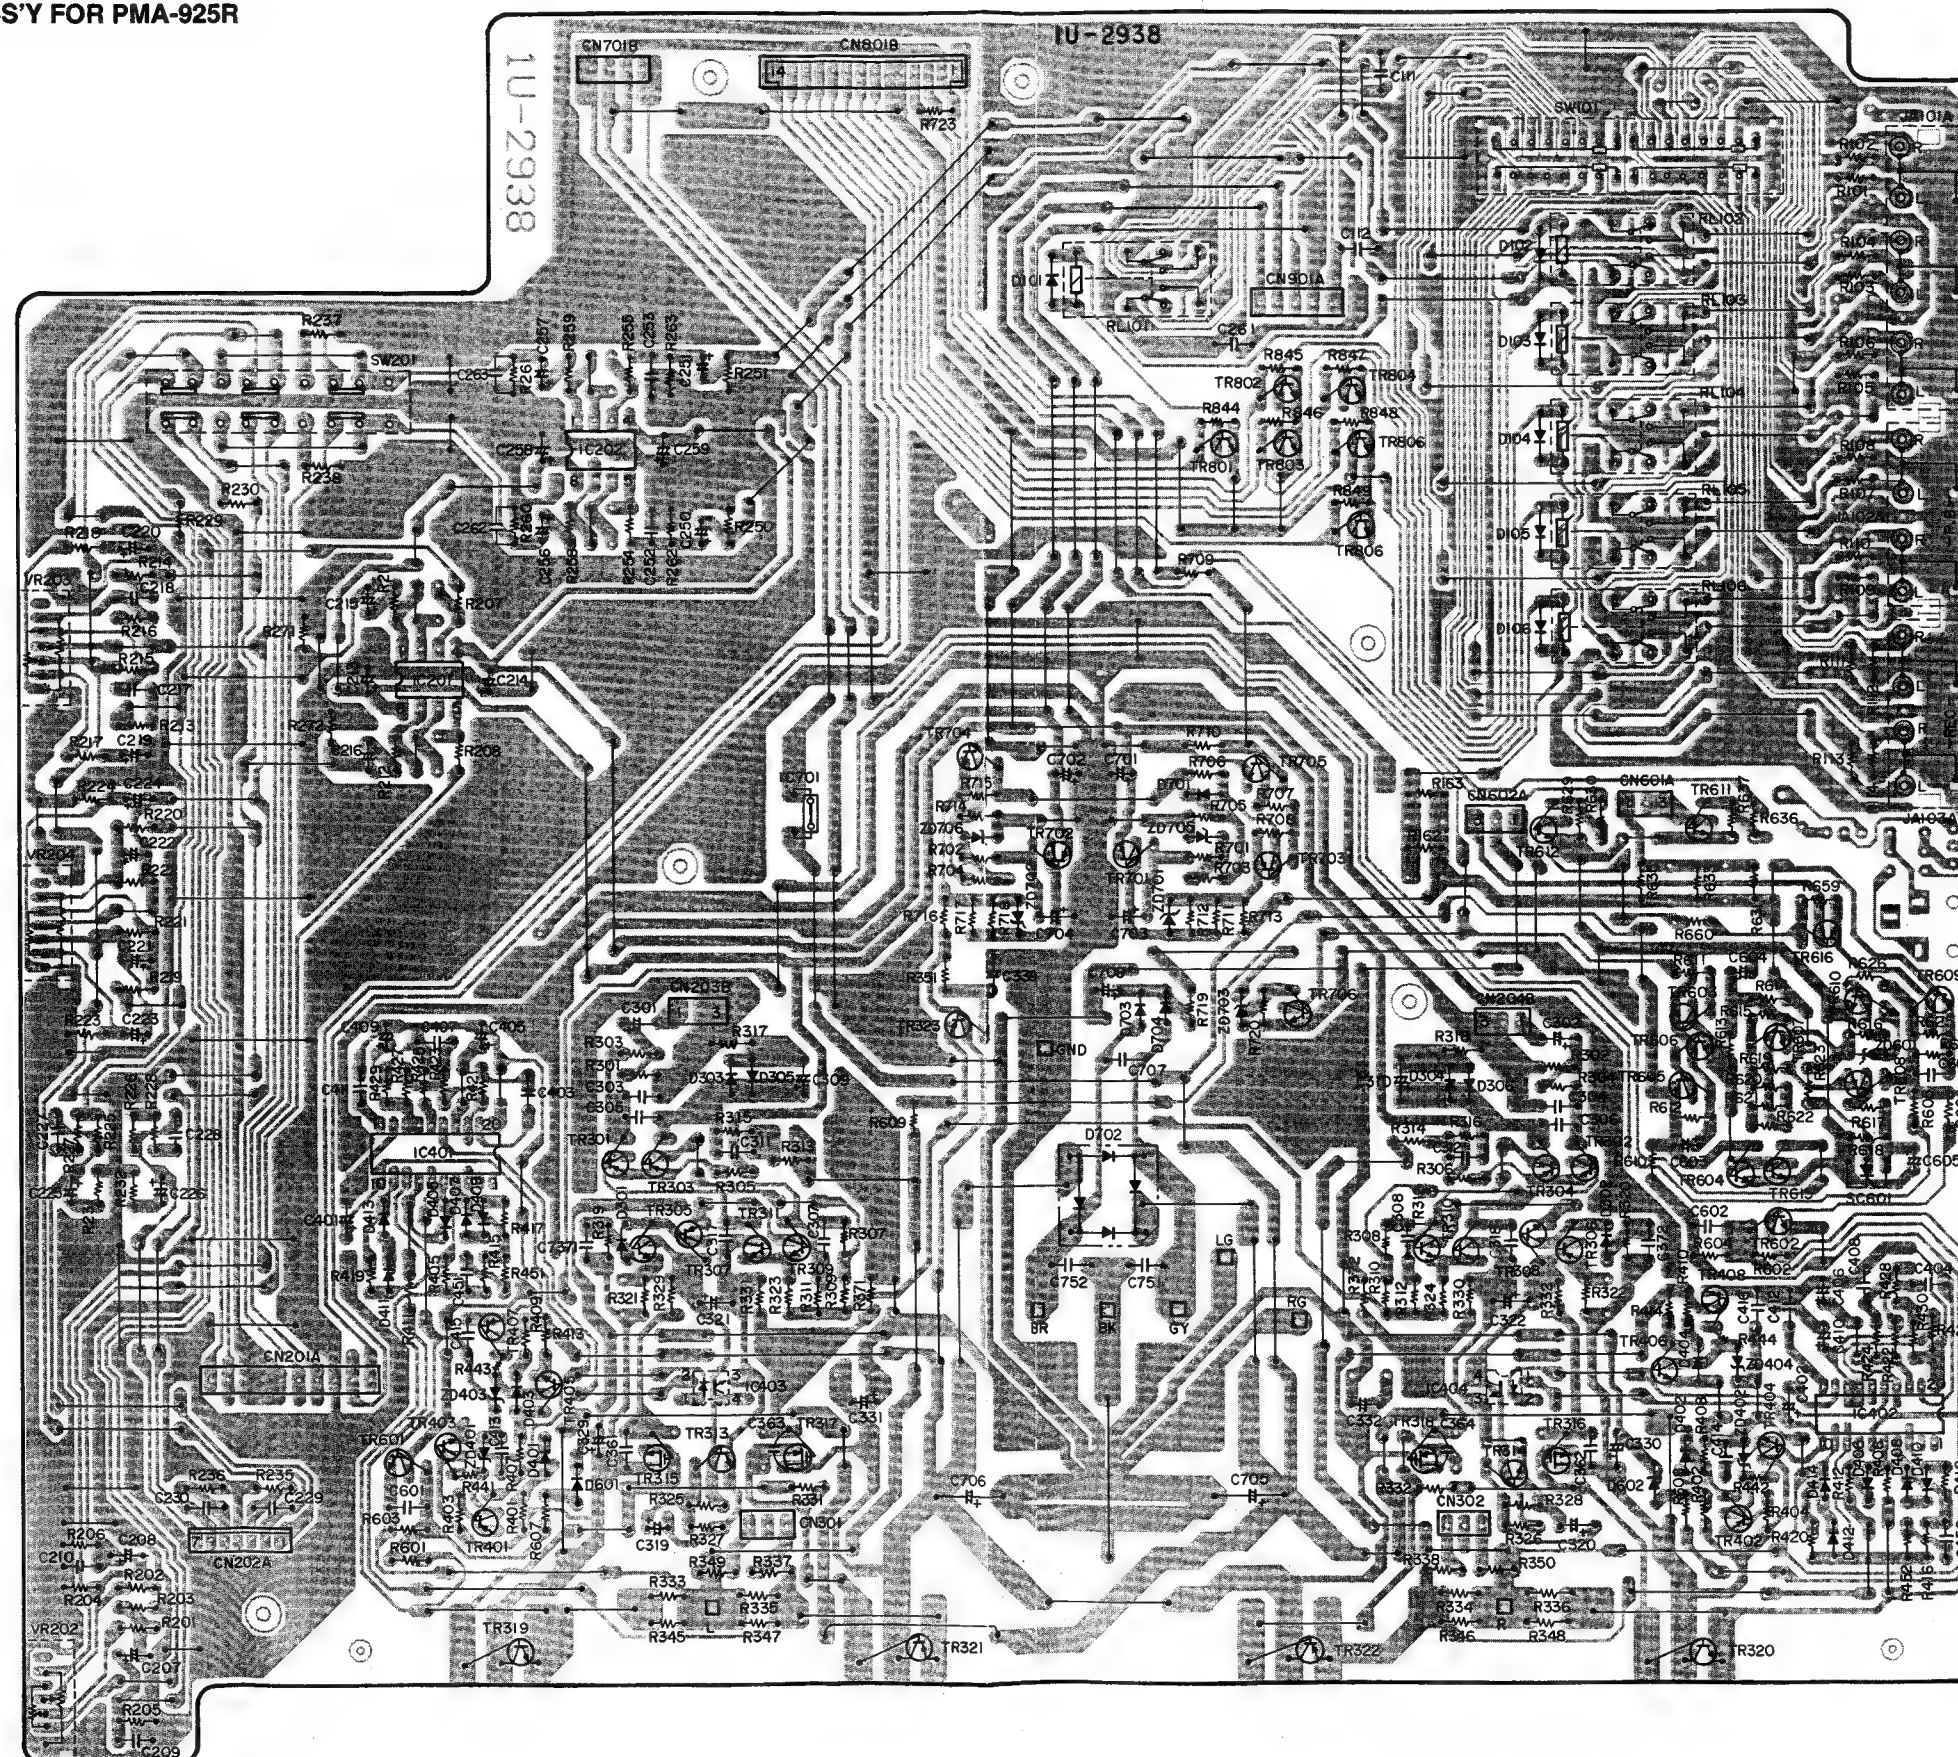






**1U-2939A  $\mu$ -COM. UNIT ASS'Y**



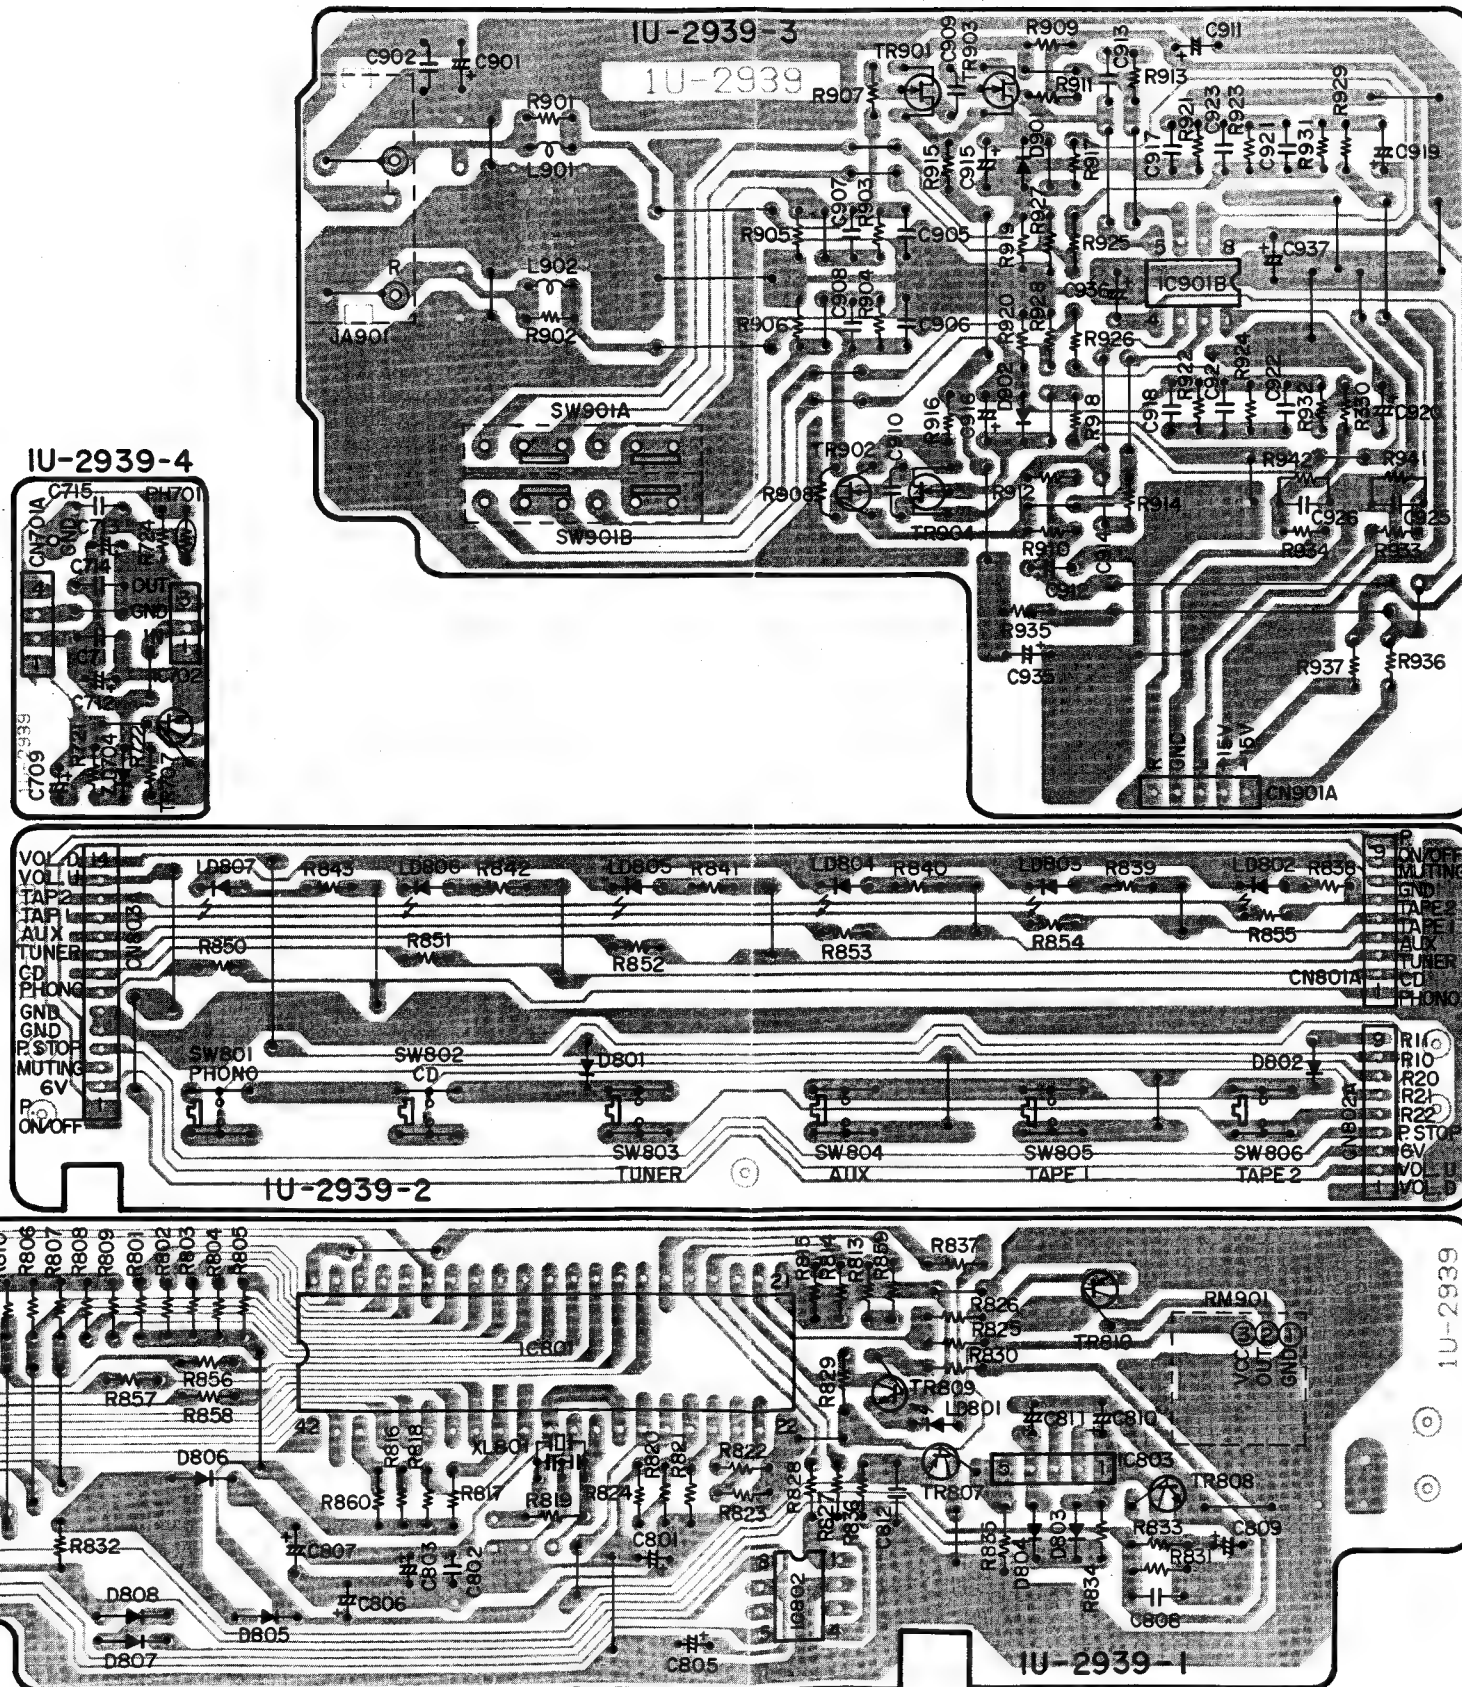
1U-2939A $\mu$ -Com. Unit Ass'y	
-1	$\mu$ -Com. Unit
-2	LED Unit
-3	Phono Unit
-4	Supply Unit






**1U-2940 VOLUME UNIT ASS'Y**  
**1U-2940A : PMA-725R EUROPE Model**  
**1U-2940B : PMA-725R U.K. Model**  
**1U-2940C : PMA-925R**

1U-2940 Volume Unit Ass'y	
-1	Volume Unit
-2	Speaker Unit
-3	AC Outlet Unit
-4	Speaker Sel. Unit

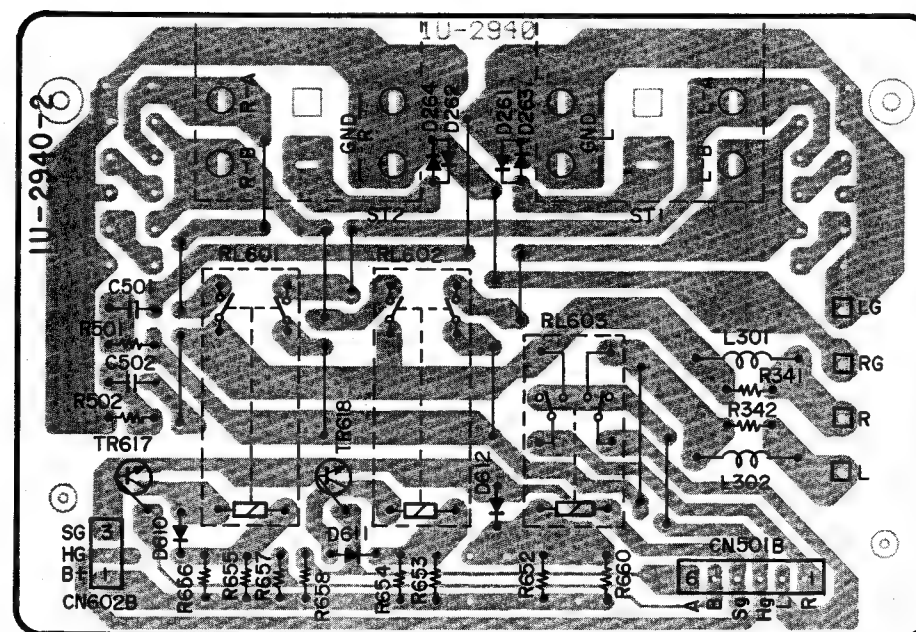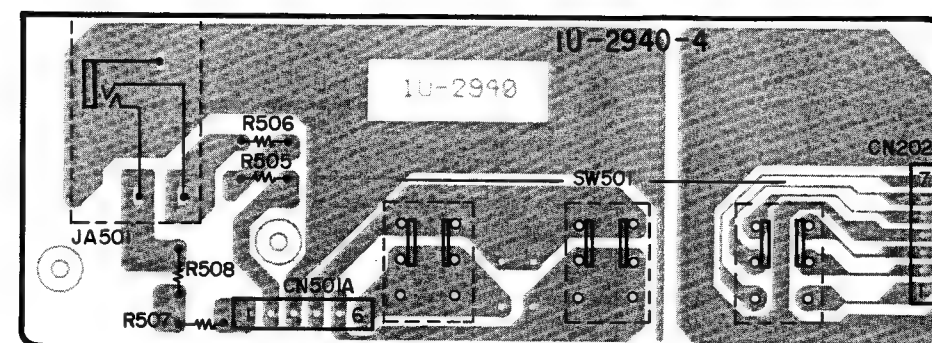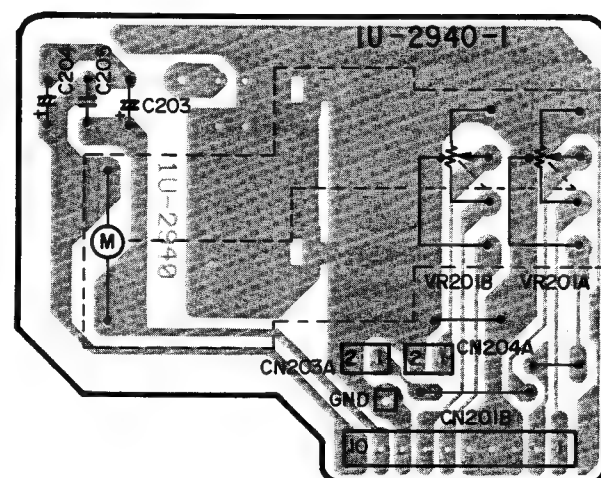

※ PMA-925R : FI T2.5A

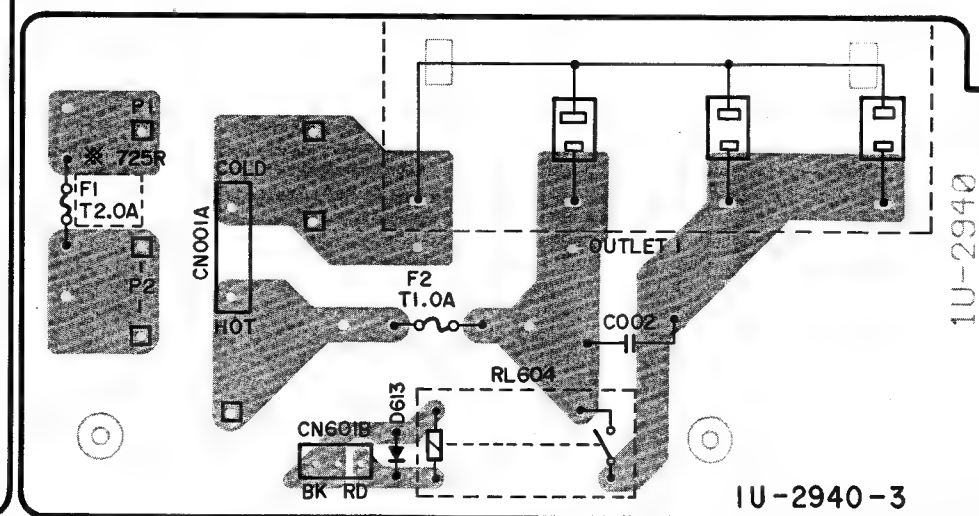



Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
CAPACITORS GROUP							
C111,112	253 4444 907	Ceramic cap. 220pF/50V	CC45SL1H221J	C701,702	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
C207,208	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M	C703,704	254 4261 921	Electrolytic 100μF/50V	CE04W1H101M
C209,210	253 4537 982	Ceramic cap. 56pF/50V	CC45SL1H560J	C705,706	254 6206 007	Electrolytic 12000μF/63V	CE68W1J123MC(DL)
C213,214	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M	C707	256 1042 903	Metalized 0.1μF/250V	CF93A2E104K
C215,216	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M	C708	254 4263 916	Electrolytic 0.22μF/100V	CE04W2AR22M
C217,218	255 1265 994	Film cap. 0.033μF/50V	CQ93M1H333J(B)				
C219,220	254 4260 919	Electrolytic 0.22μF/50V	CE04W1HR22M				
C221,222	254 4260 906	Electrolytic 0.1μF/50V	CE04W1H0R1M				
C223,224	254 4260 935	Electrolytic 0.47μF/50V	CE04W1HR47M				
C225,226	254 4260 922	Electrolytic 0.33μF/50V	CE04W1HR33M				
C227,228	256 1034 953	Metalized 0.068μF/50V	CF93A1H683J				
C229,230	255 1265 994	Film cap. 0.033μF/50V	CQ93M1H333J(B)				
C250,251	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M				
C252,253	255 4237 929	Film cap. 56pF/100V	CQ93P2A560J(NH)				
C256,257	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M				
C258,259	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M				
C261	253 1181 917	Ceramic cap. 0.022μF/50V	CK45F1H223Z				
C262,263	255 1265 936	Film cap. 0.01μF/50V	CQ93M1H103J(B)				
C301,302	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M				
C303,304	255 4235 918	Film cap. 100pF/100V	CQ93P2A101J(NH)				
C305,306	255 6177 980	Film cap. 220pF/50V	CQ09S1H221J(STM)				
C307,308	255 1264 908	Film cap. 1000pF/50V	CQ93M1H102J(B)				
C309,310	254 4252 082	Electrolytic 2200μF/10V	CE04W1A222M				
C311,312	255 4237 929	Film cap. 56pF/100V	CQ93P2A560J(NH)				
C317,318	253 4470 900	Ceramic cap. 10pF/500V	CC45SL2H100D				
C319-322	254 4261 921	Electrolytic 100μF/50V	CE04W1H101M				
C329-332	254 4262 904	Electrolytic 4.7μF/63V	CE04W1J4R7M				
C339	254 4262 755	Electrolytic 100μF/63V	CE04W1J101MC				
C361,362	253 4490 906	Ceramic cap. 68pF/500V	CC45SL2H680J				
C363,364	253 4470 900	Ceramic cap. 10pF/500V	CC45SL2H100D				
C371,372	255 6178 947	Film cap. 680pF/50V	CQ09S1H681J(STM)				
C401,402	254 4261 918	Electrolytic 47μF/50V	CE04W1H470M				
C403,404	254 3056 959	Electrolytic 10μF/50V	CE04D1H100MBP (Bipole)				
C405,406	254 4260 993	Electrolytic 22μF/50V	CE04W1H220M				
C407,408	255 1264 908	Film cap. 1000pF/50V	CQ93M1H102J(B)				
C409,410	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M				
C411,412	255 1265 936	Film cap. 0.01μF/50V	CQ93M1H103J(B)				
C413-416	256 1034 979	Metalized 0.1μF/50V	CF93A1H104J				
C451,452	253 1179 987	Ceramic cap. 470pF/50V	CK45B1H471K				
C601,602	255 1265 936	Film cap. 0.01μF/50V	CQ93M1H103J(B)				
C603	254 4250 945	Electrolytic 330μF/6.3V	CE04W0J331M				
C604	254 4252 930	Electrolytic 100μF/10V	CE04W1A101M				
C605	254 4252 901	Electrolytic 22μF/10V	CE04W1A220M				
C606	255 1265 978	Film cap. 0.022μF/50V	CQ93M1H223J(B)				

1U-2939A  $\mu$ -COM UNIT ASS'Y (PMA-925R)

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP							
IC105	499 0150 008	IC SBX1610-52	Remote sensor	C809	254 4196 973	Electrolytic 4.7μF/50V	CE04W1H4R7M(SRA)
IC702	263 0793 002	IC NJM7806FA(S)	Regulator +6 V	C810	254 4196 944	Electrolytic 1μF/50V	CE04W1H010M(SRA)
IC801	262 1579 303	IC HD404304A13P	μ-com	C811	254 4196 928	Electrolytic 0.33μF/50V	CE04W1HR33M(SRA)
IC802	263 0476 002	IC LB1639	Motor driver	C812	256 1034 982	Metallized 0.12μF/50V	CF93A1H124J
IC803	263 0535 008	IC M51954AL	Reset IC	C901	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
IC901	263 0322 004	IC BA4558		C902	253 1181 917	Ceramic cap. 0.022μF/50V	CK45F1H223Z
TR707	274 0168 006	Transistor 2SD2395(E/F)		C905,906	253 1179 929	Ceramic cap. 150pF/50V	CK45B1H151K
TR807	271 0192 905	Transistor 2SA933S(S)		C907,908	253 1179 961	Ceramic cap. 330pF/50V	CK45B1H331K
TR808,809	273 0303 910	Transistor 2SC1740S(S)		C909,910	253 1179 903	Ceramic cap. 100pF/50V	CK45B1H101K
TR810	269 0046 906	Transistor DTA114ES	Built in resistor	C911,912	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
TR901~904	275 0038 045	Transistor 2SK369(BL)/(GR)-C	N type FET ΔVGS	C913,914	255 1251 937	Film cap. 3300pF/50V	CQ92M1H332J(MRZ)
D801~805	276 0616 907	Diode 1SS252		C915,916	254 4252 930	Electrolytic 100μF/10V	CE04W1A101M
D806	276 0553 905	Diode 1SR35-200A		C917,918	256 1034 953	Metallized 0.068μF/50V	CF93A1H683J
D807,808	276 0616 907	Diode 1SS252		C919,920	254 4254 909	Electrolytic 10μF/16V	CE04W1C100M
D901,902	276 0616 907	Diode 1SS252		C921,922	255 4223 959	Film cap. 0.018μF/50V	CQ92M1H183J(MRZ)
ZD704	276 0644 995	Zener diode MTZJ16A	16 V	C923,924	255 1264 911	Film cap. 1200pF/50V	CQ93M1H122J(B)
LD801	393 9559 904	LED SLR-56DUTB7	Orange	C925,926	253 1179 961	Ceramic cap. 330pF/50V	CK45B1H331K
LD802~807	393 9515 906	LED SLR-56VR70	Red	C935	254 4252 930	Electrolytic 100μF/10V	CE04W1A101M
PH701	279 0034 041	Posistor PTH9M04BD222TS2F333		C936,937	254 4256 936	Electrolytic 47μF/25V	CE04W1E470M
RESISTORS GROUP				OTHERS PARTS GROUP			
Δ R832	241 2387 940	Carbon film 4.7ohm 1/4W	RD14B2E4R7JNBS	L901,902	235 9003 002	Inductor (150μH)	FTZ choke coil
Δ R936,937	241 2377 905	Carbon film 68ohm 1/4W	RD14B2E680JNBS	XL801	399 9018 003	Resonator	CST4.00 MGW
				SW801~806	212 4789 001	Tact switch	
				SW901	212 1099 008	1P push switch	MM/MC
					204 8413 000	2P pin jack(C-GND)	PHONE
					415 0309 013	P.V.C.tube L=10	for PHO 1
CAPACITORS GROUP							
C709	254 4263 916	Electrolytic 0.22μF/100V	CE04W2AR22M				
C711	253 1181 904	Ceramic cap. 0.01μF/50V	CK45F1H103Z				
C712,713	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M				
C714,715	253 1181 904	Ceramic cap. 0.01μF/50V	CK45F1H103Z				
C801	254 4213 937	Electrolytic 100μF/6.3V	CE04W0J101M(SRA)				
C802	253 1181 917	Ceramic cap. 0.022μF/50V	CK45F1H223Z				
C803	254 4213 937	Electrolytic 100μF/6.3V	CE04W0J101M(SRA)				
C805	254 4213 937	Electrolytic 100μF/6.3V	CE04W0J101M(SRA)				
C806	254 6190 906	Electrolytic 330μF/6.3V	CE04W0J331M(SRA)				
C807	259 0007 003	Back up cap. 8200μF/5.5V	SB CAP=822=				
C808	253 1181 917	Ceramic cap. 0.022μF/50V	CK45F1H223Z				



## 1U-2938 MAIN UNIT ASS'Y (PMA-725R)

1U-2938A : Europe model

1U-2938B : U.K. model

## 1U-2940C VOLUME UNIT ASS'Y (PMA-925R)

Ref. No.	Part No.	Part Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
TR617,618	273 0235 923	Transistor 2SC1841(E/F)	
D001	276 0616 907	Diode 1SS252	
D441-444	276 0616 907	Diode 1SS252	
D610-612	276 0616 907	Diode 1SS252	
<b>RESISTORS GROUP(Not included carbon film <math>\pm 5\%</math>, 1/4W)</b>			
VR201	211 0869 003	Variable resistor 30kohm	Main volume
$\Delta$ R341,342	244 2043 982	Metal oxide 0.22ohm 1W	RS14B3AR22JNBS(S)
$\Delta$ R501,502	244 2043 937	Metal oxide 10ohm 1W	RS14B3A100JNBS(S)
$\Delta$ R505-508	244 2050 933	Metal oxide 180ohm 1W	RS14B3A181JNBS(S)
$\Delta$ R652	244 0157 003	Metal oxide 2.2kohm 3W	RS14B3F222JNB
$\Delta$ R653	244 2069 018	Metal oxide 3kohm 5W	RS14B3H302JNB(S)
$\Delta$ R654	244 2069 005	Metal oxide 2.4kohm 5W	RS14B3H242JNB(S)
$\Delta$ R655	244 2069 018	Metal oxide 3kohm 5W	RS14B3H302JNB(S)
$\Delta$ R656	244 2069 005	Metal oxide 2.4kohm 5W	RS14B3H242JNB(S)
$\Delta$ R660	244 0157 003	Metal oxide 2.2kohm 3W	RS14B3F222JNB
<b>CAPACITORS GROUP</b>			
$\Delta$ C002	253 8003 713	Ceramic cap. 4700pF/400V AC	CK45E2GAC472MC
C203,204	254 4254 909	Electrolytic 10 $\mu$ F/16V	CE04W1C100M
C205	255 1265 936	Film cap. 0.01 $\mu$ F/50V	CQ93M1H103J(B)
C501,502	256 1034 979	Metalized 0.1 $\mu$ F/50V	CF93A1H104J
<b>OTHERS PARTS GROUP</b>			
	—	(P.W.board)	Q'ty
			(1)
L301,302	235 0104 007	Inductor(1mH)	2
	202 0022 008	Fuse holder	4
$\Delta$ F001	206 1015 032	Fuse(2.5A)	1
$\Delta$ F002	206 1015 029	Fuse(1A T)	1
	513 0654 017	Fuse label (T. 25A)	1
$\Delta$	415 0299 000	Capacitor cover	1
$\Delta$ RL001	214 0142 004	Relay(TV-5)	1
RL601,602	214 0129 001	Relay(DH2TU)	2
RL603	214 0178 007	Relay(MR62-12USRY)	1
SW501	212 1162 003	3P push switch	1
	205 0484 001	8P speaker terminal	1
	204 8503 004	Head phone jack	1
$\Delta$	203 3950 002	3P AC outlet	1
$\Delta$	205 0692 000	2P wrapping terminal	1

Ref. No.	Part No.	Part Name	Remarks
<b>SEMICONDUCTORS GROUP</b>			
IC201	263 0322 004	IC BA4558	Linear ope. amp
IC202	263 0609 002	IC NJM2068DDC	
IC401,402	263 0930 001	IC $\mu$ PC5023CS-064	Bias IC
IC403,404	262 0874 009	IC TLP521-1(BL)	
IC701	268 0073 905	IC ICP-N15	IC protector
TR301-304	271 0094 919	Transistor 2SA970(BL)	Europe model only
TR305,306	271 0131 924	Transistor 2SA988(E/F)	
TR307-312	273 0235 923	Transistor 2SC1841(E/F)	
TR313,314	273 0303 910	Transistor 2SC1740S(S)	
TR323	271 0131 924	Transistor 2SA988(E/F)	
TR401,402	271 0280 901	Transistor 2SA1038S(S/E)	
TR403,404	273 0281 906	Transistor 2SC2705(O)/(Y)	
TR405,406	273 0432 904	Transistor 2SC2389S(S/E)	
TR407,408	271 0168 900	Transistor 2SA1145(O)/(Y)	
TR601,602	273 0235 923	Transistor 2SC1841(E/F)	
TR603-605	273 0303 910	Transistor 2SC1740S(S)	
TR606	271 0192 905	Transistor 2SA933S(S)	
TR607	273 0235 923	Transistor 2SC1841(E/F)	
TR608	271 0094 935	Transistor 2SA970(BL/GR)	
TR609	272 0107 906	Transistor 2SB1328(P)	
TR610	273 0235 923	Transistor 2SC1841(E/F)	
TR611	273 0235 923	Transistor 2SC1841(E/F)	
R612	273 0235 923	Transistor 2SC1841(E/F)	
TR615	273 0303 910	Transistor 2SC1740S(S)	
TR616	272 0107 906	Transistor 2SB1328(P)	
TR701	274 0168 006	Transistor 2SD2395(E/F)	
TR702	272 0129 007	Transistor 2SB1566(E/F)	
TR703	271 0280 901	Transistor 2SA1038S(S/E)	
TR704,705	273 0432 904	Transistor 2SC2389S(S/E)	
TR706	273 0303 910	Transistor 2SC1740S(S)	
TR801-806	273 0235 923	Transistor 2SC1841(E/F)	
D101-106	276 0616 907	Diode 1SS252	
D301-306	276 0616 907	Diode 1SS252	
D351,352	276 0616 907	Diode 1SS252	
D401-414	276 0616 907	Diode 1SS252	
D601,602	276 0616 907	Diode 1SS252	
D701	276 0553 905	Diode 1SR35-200A	

Ref. No.	Part No.	Part Name	Remarks	Ref. No.	Part No.	Part Name	Remarks
△D702	276 0336 007	Diode S4VB20F	Bridge	<b>CAPACITORS GROUP</b>			
D703,704	276 0553 905	Diode 1SR35-200A		C111,112	253 4444 907	Ceramic cap. 220pF/50V	CC45SL1H221J
ZD401-404	276 0643 954	Zener diode MTZJ3.9A	3.9 V	C207,208	254 4260 980	Electrolytic 10μF/50V	CE04W1H100M
ZD601	276 0644 911	Zener diode MTZJ7.5A	7.5 V	C209,210	253 4537 982	Ceramic cap. 56pF/50V	CC45SL1H560J
ZD701,702	276 0645 978	Zener diode MTZJ36A	36 V	C213,214	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
ZD703	276 0644 911	Zener diode MTZJ7.5A	7.5 V	C215,216	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M
ZD705,706	276 0645 907	Zener diode MTZJ18A	18 V	C217,218	255 1265 994	Film cap. 0.033μF/50V	CQ93M1H333J(B)
SC601	279 0016 904	Thyristor SF0R1A42		C219,220	254 4260 919	Electrolytic 0.22μF/50V	CE04W1HR22M
<b>RESISTORS GROUP</b>				C221,222	254 4260 906	Electrolytic 0.1μF/50V	CE04W1H0R1M
VR202	211 0798 103	Variable resistor 100kohm	Balance	C223,224	254 4260 935	Electrolytic 0.47μF/50V	CE04W1HR47M
VR203	211 0834 012	Variable resistor 10kohm	Treble	C225,226	254 4260 922	Electrolytic 0.33μF/50V	CE04W1HR33M
VR204	211 0834 009	Variable resistor 30kohm	Bass	C227,228	256 1034 953	Metalized 0.068μF/50V	CF93A1H683J
△R115,116	244 2051 974	Metal oxide 1kohm 1W	RS14B3A102JNBS(S)	C229,230	255 1265 994	Film cap. 0.033μF/50V	CQ93M1H333J(B)
△R182,183	244 2051 974	Metal oxide 1kohm 1W	RS14B3A102JNBS(S)	C250,251	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M
△R309-312	241 2380 963	Carbon film 2.2kohm 1/4W	RD14B2E222JNBS	C252,253	255 4237 929	Film cap. 56pF/100V	CQ93P2A560J(NH)
△R317,318	241 2377 963	Carbon film 120ohm 1/4W	RD14B2E121JNBS	C256,257	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M
△R319-322	241 2377 976	Carbon film 130ohm 1/4W	RD14B2E131JNBS	C258,259	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
△R323,324	241 2315 967	Fusible resistor 68ohm 1/4W	RD14B2E680GFRS	C261	253 1181 917	Ceramic cap. 0.022μF/50V	CK45F1H223Z
△R325,326	241 2380 950	Carbon film 2kohm 1/4W	RD14B2E202JNBS	C262,263	255 1265 936	Film cap. 0.01μF/50V	CQ93M1H103J(B)
△R327,328	241 2379 929	Carbon film 560ohm 1/4W	RD14B2E561JNBS	C301,302	254 4254 941	Electrolytic 100μF/16V	CE04W1C101M
△R333-336	244 2043 982	Metal oxide 0.22ohm 1W	RS14B3A222JNBS(S)	C303,304	255 4235 918	Film cap. 100pF/100V	CQ93P2A101J(NH)
△R345-348	244 2043 982	Metal oxide 0.22ohm 1W	RS14B3A222JNBS(S)	C305,306	255 6177 980	Film cap. 220pF/50V	CQ09S1H221J(STM)
△R351	241 2379 987	Carbon film 1kohm 1/4W	RD14B2E102JNBS	C307,308	255 1264 908	Film cap. 1000pF/50V	CQ93M1H102J(B)
△R401,402	241 2379 916	Carbon film 510ohm 1/4W	RD14B2E511JNBS	C309,310	254 4252 082	Electrolytic 2200μF/10V	CE04W1A222M
△R403,404	241 2378 946	Carbon film 270ohm 1/4W	RD14B2E271JNBS	C311,312	255 4237 929	Film cap. 56pF/100V	CQ93P2A56J(NH)
△R409,410	241 2379 916	Carbon film 510ohm 1/4W	RD14B2E511JNBS	C317,318	253 4470 900	Ceramic cap. 10pF/500V	CC45SL2H10D
△R413,414	241 2378 946	Carbon film 270ohm 1/4W	RD14B2E271JNBS	C319-322	254 4261 921	Electrolytic 100μF/50V	CE04W1H101M
△R441-444	241 2379 987	Carbon film 1kohm 1/4W	RD14B2E102JNBS	C329-332	254 4262 904	Electrolytic 4.7μF/63V	CE04W1J47M
△R601-604	241 2380 950	Carbon film 2kohm 1/4W	RD14B2E202JNBS	C339	254 4262 755	Electrolytic 100μF/63V	CE04W1J101MC
△R631-633	244 2051 990	Metal oxide 4.7kohm 1W	RS14B3A472JNBS(S)	C371,372	255 6178 947	Film cap. 680pF/50V	CQ09S1H68J(STM)
△R634,635	244 2052 957	Metal oxide 5.6kohm 1W	RS14B3A562JNBS(S)	C401,402	254 4261 918	Electrolytic 47μF/50V	CE04W1H47M
△R681	244 2052 957	Metal oxide 5.6kohm 1W	RS14B3A562JNBS(S)	C403,404	254 3056 959	Electrolytic 10μF/50V	CE04D1H100MBP (Bipole)
△R711,712	244 2043 908	Metal oxide 680ohm 1W	RS14B3A681JNBS(S)	C405,406	254 4260 993	Electrolytic 22μF/50V	CE04W1H22M
△R713	241 2387 940	Carbon film 4.7ohm 1/4W	RD14B2E477JNBS	C407,408	255 1264 908	Film cap. 1000pF/50V	CQ93M1H101J(B)
△R716	241 2387 940	Carbon film 4.7ohm 1/4W	RD14B2E477JNBS	C409,410	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
△R717,718	244 2043 908	Metal oxide 680ohm 1W	RS14B3A681JNBS(S)	C411,412	255 1265 936	Film cap. 0.01μF/50V	CQ93M1H101J(B)
				C413-416	256 1034 979	Metalized 0.1μF/50V	CF93A1H104
				C451,452	253 1179 987	Ceramic cap. 470pF/50V	CK45B1H471K
				C601,602	255 1265 936	Film cap. 0.01μF/50V	CQ93M1H103J(B)
				C603	254 4250 945	Electrolytic 330μF/6.3V	CE04W0J331M
				C604	254 4252 930	Electrolytic 100μF/10V	CE04W1A101M
				C605	254 4252 901	Electrolytic 22μF/10V	CE04W1A220M
				C606	255 1265 978	Film cap. 0.022μF/50V	CQ93M1H223J(B)
				C701,702	254 4260 948	Electrolytic 1μF/50V	CE04W1H010M
				C703,704	254 4261 921	Electrolytic 100μF/50V	CE04W1H101M

## 1U-2940 VOLUME UNIT ASS'Y

1U-2940A : Europe model

1U-2940B : U.K. model

1U-2939A  $\mu$ -COM UNIT ASS'Y (PMA-725R)

Ref. No.	Part No.	Part Name	Remarks	Q'ty
C705,706	254 6205 008	Electrolytic 1000 $\mu$ F/51V	CE68W=103MC(DL)	
C707	256 1042 903	Metalized 0.1 $\mu$ F/250V	CF93A2E104K	
C708	254 4263 916	Electrolytic 0.22 $\mu$ F/100V	CE04W2AR22M	
OTHERS PARTS GROUP				(1)
SW101	212 0336 005	Rotary switch	Rec out sel.	1
SW202	212 1161 004	1P push switch	Surce direct	1
RL101~106	214 0178 007	Relay(MR62-12USRY)		6
	204 8266 008	4P pin jack(S-GND)	for TAPE	2
	204 8278 009	6P pin jack(S-GND)	for INPUTS	1

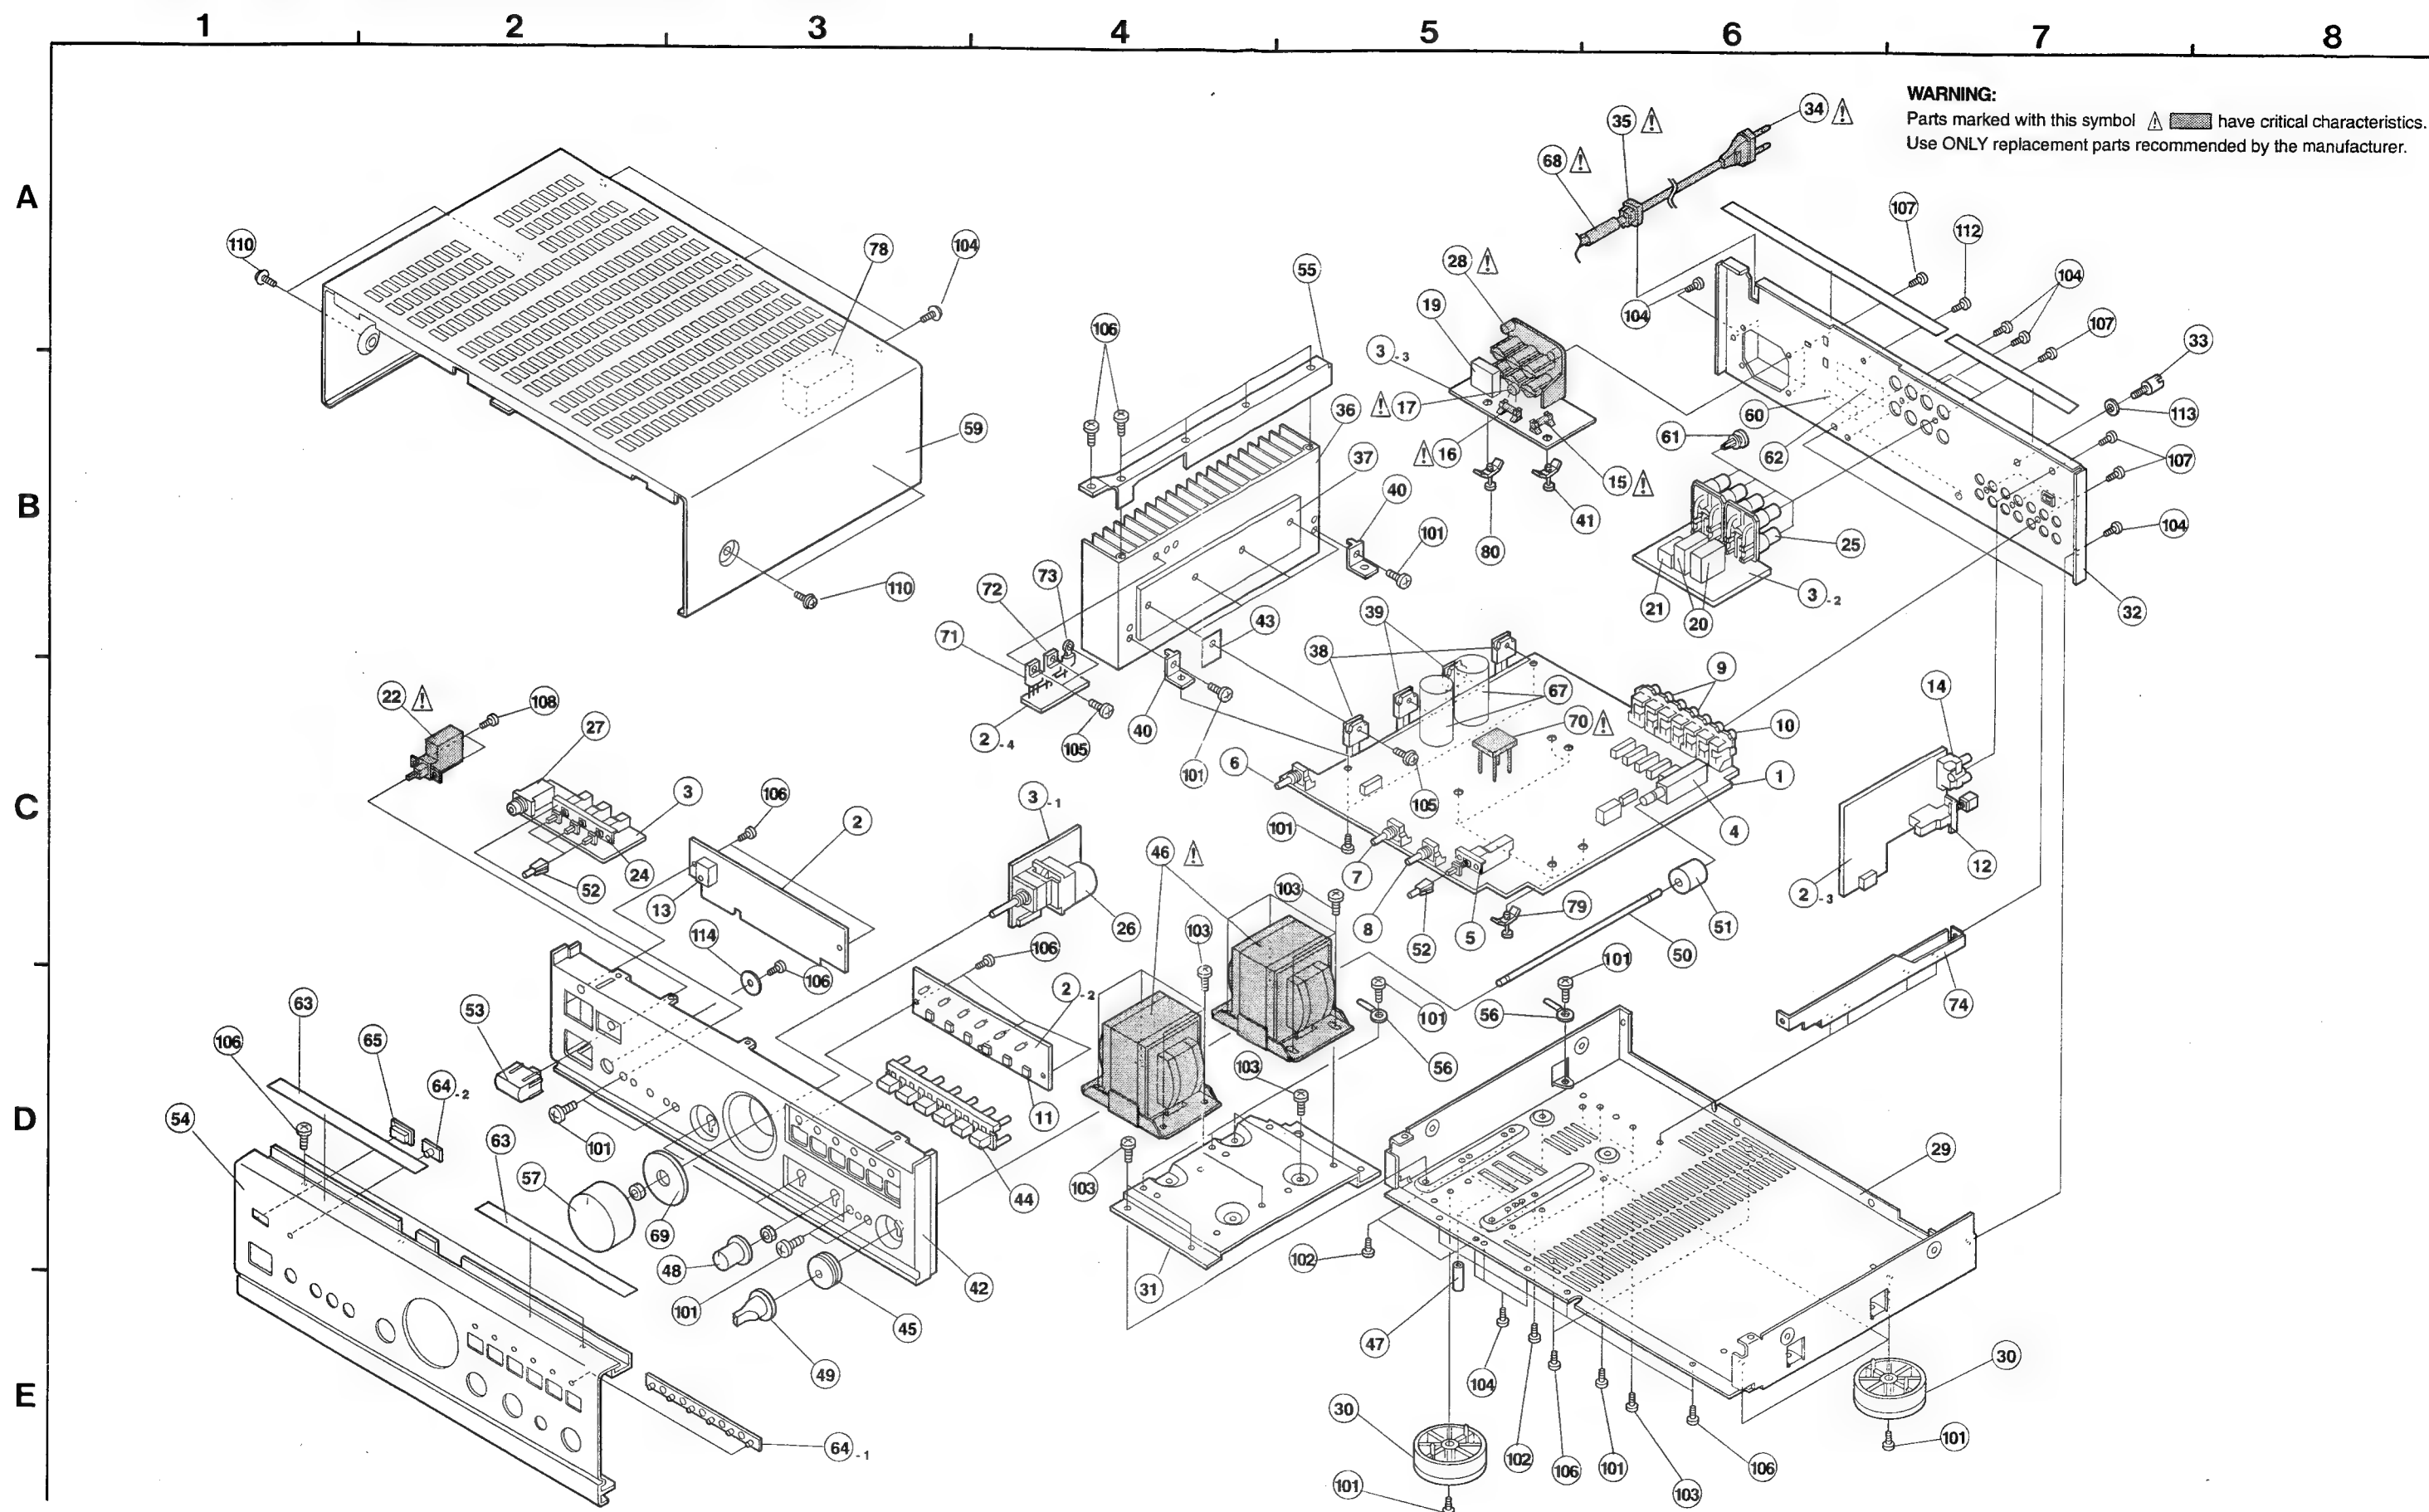
Ref. No.	Part No.	Part Name	Remarks
SEMICONDUCTORS GROUP			
IC105	499 0150 008	IC SBX1610-52	Remote sensor
IC702	263 0793 002	IC NJM7806FA(S)	Regulator +6V
IC801	262 1579 303	IC HD404304A13P	$\mu$ -com
IC802	263 0476 002	IC LB1639	Motor driver
IC803	263 0535 008	IC M51954AL	Reset IC
IC901	263 0322 004	IC BA4558	
TR707	274 0168 006	Transistor 2SD2395(E/F)	
TR807	271 0192 905	Transistor 2SA933S(S)	
TR808,809	273 0303 910	Transistor 2SC1740S(S)	
TR810	269 0046 906	Transistor DTA114ES	Built in resistor
TR901~904	275 0038 045	Transistor 2SK369(BL)/(GR)-C	N type FET $\Delta$ VGS
D801~805	276 0616 907	Diode 1SS252	
D806	276 0553 905	Diode 1SR35-200A	
D807,808	276 0616 907	Diode 1SS252	
D901,902	276 0616 907	Diode 1SS252	
ZD704	276 0644 995	Zener diode MTZJ16A	16 V
LD801	393 9559 904	LED SLR-56DUTB7	Orange
LD802~807	393 9515 906	LED SLR-56VR70	Red
PH701	279 0034 041	Posistor PTH9M04BD222TS2F333	
RESISTORS GROUP			
$\Delta$ R832	241 2387 940	Carbon film 4.7ohm 1/4W	RD14B2E4R7JNBS
$\Delta$ R836,937	241 2377 905	Carbon film 68ohm 1/4W	RD14B2E680JNBS
CAPACITORS GROUP			
C709	254 4263 916	Electrolytic 0.22 $\mu$ F/100V	CE04W2AR22M
C711	253 1181 904	Ceramic cap. 0.01 $\mu$ F/50V	CK45F1H103Z
C712,713	254 4260 980	Electrolytic 10 $\mu$ F/50V	CE04W1H100M
C714,715	253 1181 904	Ceramic cap. 0.01 $\mu$ F/50V	CK45F1H103Z
C801	254 4213 937	Electrolytic 100 $\mu$ F/6.3V	CE04W0J101M(SRA)
C802	253 1181 917	Ceramic cap. 0.022 $\mu$ F/50V	CK45F1H223Z
C803	254 4213 937	Electrolytic 100 $\mu$ F/6.3V	CE04W0J101M(SRA)
C805	254 4213 937	Electrolytic 100 $\mu$ F/6.3V	CE04W0J101M(SRA)
C806	254 6190 906	Electrolytic 330 $\mu$ F/6.3V	CE04W0J331M(SRA)
C807	259 0007 003	Back up cap. 8200 $\mu$ F/5.5V	SB CAP=822=
C808	253 1181 917	Ceramic cap. 0.022 $\mu$ F/50V	CK45F1H223Z

Ref. No.	Part No.	Part Name	Remarks	Q'ty
C809	254 4196 973	Electrolytic 4.7 $\mu$ F/50V	CE04W1H4R7M(SRA)	
C810	254 4196 944	Electrolytic 1 $\mu$ F/50V	CE04W1H010M(SRA)	
C811	254 4196 928	Electrolytic 0.33 $\mu$ F/50V	CE04W1HR33M(SRA)	
C812	256 1034 982	Metalized 0.12 $\mu$ F/50V	CF93A1H124J	
C901	254 4260 948	Electrolytic 1 $\mu$ F/50V	CE04W1H010M	
C902	253 1181 917	Ceramic cap. 0.022 $\mu$ F/50V	CK45F1H223Z	
C905,906	253 1179 929	Ceramic cap. 150pF/50V	CK45B1H151K	
C907,908	253 1179 961	Ceramic cap. 330pF/50V	CK45B1H331K	
C909,910	253 1179 903	Ceramic cap. 100pF/50V	CK45B1H101K	
C911,912	254 4260 948	Electrolytic 1 $\mu$ F/50V	CE04W1H010M	
C913,914	255 1251 937	Film cap. 3300pF/50V	CQ92M1H332J(MRZ)	
C915,916	254 4252 930	Electrolytic 100 $\mu$ F/10V	CE04W1A101M	
C917,918	256 1034 953	Metalized 0.068 $\mu$ F/50V	CF93A1H683J	
C919,920	254 4254 909	Electrolytic 10 $\mu$ F/16V	CE04W1C100M	
C921,922	255 4223 959	Film cap. 0.018 $\mu$ F/50V	CQ92M1H183J(MRZ)	
C923,924	255 1264 911	Film cap. 1200pF/50V	CQ93M1H122J(B)	
C925,926	253 1179 961	Ceramic cap. 330pF/50V	CK45B1H331K	
C935	254 4252 930	Electrolytic 100 $\mu$ F/10V	CE04W1A101M	
C936,937	254 4256 936	Electrolytic 47 $\mu$ F/25V	CE04W1E470M	
OTHERS PARTS GROUP				(1)
L901,902	235 9003 002	Inductor (150 $\mu$ H)	FTZ choke coil	2
XL801	399 9018 003	Resonator	CST4.00 MGW	1
SW801~806	212 4789 001	Tact switch		6
SW901	212 1099 008	1P push switch	MM/MC	1
	204 8413 000	2P pin jack(C-GND)	PHONO	1
	415 0309 013	P.V.C.tube L=10	for PH701	2

Ref. No.	Part No.	Part Name	Remarks	Q'ty
SEMICONDUCTORS GROUP				
TR617,618	273 0235 923	Transistor 2SC1841(E/F)		
D001	276 0616 907	Diode 1SS252	Europe model only	
D441~444	276 0616 907	Diode 1SS252		
D610~612	276 0616 907	Diode 1SS252		
RESISTORS GROUP(Not included carbon film $\pm$ 5%,1/4W)				
VR201	211 0869 003	Variable resistor 30kohm	Main volume	
$\Delta$ R341,342	244 2043 982	Metal oxide 0.22ohm 1W	RS14B3AR22JNBS(S)	
$\Delta$ R501,502	244 2043 937	Metal oxide 10ohm 1W	RS14B3A100JNBS(S)	
$\Delta$ R505~508	244 2050 933	Metal oxide 180ohm 1W	RS14B3A181JNBS(S)	
$\Delta$ R652	244 0157 003	Metal oxide 2.2kohm 3W	RS14B3F22JNB	
$\Delta$ R653	244 2043 940	Metal oxide 2.2kohm 1W	RS14B3A22JNBS(S)	
$\Delta$ R654	244 2052 915	Metal oxide 1.8kohm 1W	RS14B3A182JNBS(S)	
$\Delta$ R655	244 2043 940	Metal oxide 2.2kohm 1W	RS14B3A22JNBS(S)	
$\Delta$ R656	244 2052 915	Metal oxide 1.8kohm 1W	RS14B3A182JNBS(S)	
$\Delta$ R660	244 0157 003	Metal oxide 2.2kohm 3W	RS14B3F22JNB	
CAPACITORS GROUP				
$\Delta$ C002	253 8003 713	Ceramic cap. 4700pF/400V AC	CK45E2GAC472MC	
C203,204	254 4254 909	Electrolytic 10 $\mu$ F/16V	CE04W1C100M	
C205	255 1265 936	Film cap. 0.01 $\mu$ F/50V	CQ93M1H103J(B)	
C501,502	256 1034 979	Metalized 0.1 $\mu$ F/50V	CF93A1H104J	
OTHERS PARTS GROUP				(1)
L301,302	235 0104 007	Inductor(1mH)		2
	202 0022 008	Fuse holder	Europe model	4
	202 0022 008	Fuse holder	U.K. model	2
$\Delta$ F001	206 1015 061	Fuse(2A)		1
$\Delta$ F002	206 1015 029	Fuse(1A T)	Europe model only	1
$\Delta$	415 0299 000	Capacitor cover	for C002	1
$\Delta$ RL001	214 0142 004	Relay(TV-5)	Europe model only	1
RL601,602	214 0129 001	Relay(DH2TU)	for SP-AE	2
RL603	214 0178 007	Relay(MR62-12USRY)	for Headphone	1
SW501	212 1162 003	3P push switch	for Speaker ON-OFF	1
	205 0484 001	8P speaker terminal	for Speaker	1
	204 8503 004	Head phone jack	JA501	1
$\Delta$	203 3950 002	3P AC outlet	AOL-1	1
$\Delta$	205 0692 000	2P wrapping terminal	Europe model only	1

## EXPLODED VIEW OF CHASSIS AND CABINET : PMA-925R





## PARTS LIST OF EXPLODED VIEW PMA-925R

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	1U-2938 C	Main unit Ass'y		1s	47	462 0094 007	Screw tube		2
2	1U-2939 A	M-com unit Ass'y		1s	48	112 0646 000	:*Knob(S)	Black model	3
2-1	—	M-com unit		(1)	48	112 0646 013	:*Knob(S)	Gold model	3
2-2	—	LED unit		(1)	49	112 0641 102	:*Fuji knob	Black model	1
2-3	—	Phono unit		(1)	49	112 0641 115	:*Fuji knob	Gold model	1
2-4	—	Supply unit		(1)	50	112 0784 001	Volume knob joint		1
3	1U-2940 C	Volume unit Ass'y		1s	51	112 0785 000	Volume knob joint (B)		1
3-1	—	Volume unit		(1)	52	113 1745 107	:*Push button(Round)	Black model	4
3-2	—	Speaker unit		(1)	52	113 1745 110	:*Push button(Round)	Gold model	4
3-3	—	AC outlet unit		(1)	53	113 1738 101	:*Power button	Black model	1
3-4	—	Speaker sel. unit		(1)	53	113 1738 114	:*Power button	Gold model	1
4	212 0336 005	Rotary switch	SW101 Rec out sel.	1	54	144 2509 207	Front panel	Black model	1
5	212 1161 004	1P push switch	SW202 S.Direct	1	54	144 2509 210	Front panel	Gold model	1
6	211 0798 103	Variable resistor 100kohm	VR202 Balance	1	55	412 4136 005	Radiator bracket		1
7	211 0834 009	Variable resistor 30kohm	VR204 Bass	1	56	445 0048 003	Cord holder L=76		3
8	211 0834 012	Variable resistor 10kohm	VR203 Treble	1	57	112 0789 006	Volume knob Ass'y	Black model	1
9	204 8266 008	4P pin jack(S-GND)	for TAPE	2	57	112 0789 019	Volume knob Ass'y	Gold model	1
10	204 8278 009	6P pin jack(S-GND)	for INPUTS	1	58	445 8004 007	Wire clasper		18
11	212 4789 001	Tact switch	SW801-806	6	59	102 0521 128	:*Top cover	Black model	1
12	212 1099 008	1P push switch	SW901 MM/MC	1	59	102 0521 131	:*Top cover	Gold model	1
13	499 0150 008	Remote sensor SBX1610-52	IC105	1	60	513 2444 005	Label (China)	Put on rear panel	1
14	204 8413 000	2P pin jack(C-GND)	for PHONO	1	61	477 0096 007	Push rivet		8
15	206 1015 032	Fuse (2.5A)	F001	1	62	513 2433 003	Serial No. sheet		1
16	206 1015 029	Fuse (1A T)	F002	1	63	122 0219 007	Sheet	F/Panel, R/Panel	4
17	415 0299 000	Capacitor cover	for C002	1	64	143 0945 006	:*Lens		1
18	—	—	—	—	64-1	—	:*Lens		(1)
19	214 0142 004	Relay(TV-5)	RL001	1	64-2	—	:*Lens		(1)
20	214 0129 001	Relay(DH2TU)	RL601,602	2	65	143 9181 007	:*Remocon window		1
21	214 0178 007	Relay(MR62-12USRY)	RL101-106,603	7	66	254 4252 082	Electrolytic cap. 2200μF/10V	C309,310	2
22	212 1030 009	Power switch(TV-5)	SW001	1	67	254 6206 007	Electrolytic cap. 12000μF/63V	C705,706	2
23	—	—	—	—	68	415 0305 017	P.V.C. tube	for AC cord	1
24	212 1162 003	3P push switch	SW501 Speaker ON-OFF	1	69	412 4135 006	Volume plate	Black model	1
25	205 0484 001	8P speaker terminal	for speaker	1	69	412 4135 019	Volume plate	Gold model	1
26	211 0869 003	Variable resistor 30kohm	VR201 Main volume	1	70	276 0424 005	Diode 4D4B42	D-702 Bridge	1
27	204 8503 004	:Head phone jack	JA501	1	71	272 0129 007	Transistor 2SB1566(E/F)	TR702	1
28	203 3950 002	3P AC outlet	AOL-1	1	72	263 0793 002	IC NJM7806FA(S)	IC702 Regulator +6V	1
29	411 1267 712	*Main chassis		1	73	279 0034 041	PTH94M04BD222TS2F333	PH701	1
30	104 0282 007	:*Foot Ass'y		4	74	412 4156 001	Trans frame		1
31	441 1786 016	Trans bracket		1	75	—	—		—
32	105 1203 004	Rear panel		1	76	—	—		—
33	205 0071 016	Terminal Ass'y		1	77	146 1651 000	Side spacer		2
34	206 2063 009	AC cord with plug		1	78	461 0940 006	:Rubber form		1
35	445 0056 008	Cord bush		1	79	449 0138 025	Card spacer (L=31)		5
36	417 0503 132	Power radiator		1	80	449 0138 012	Card spacer (L=25)		1
37	417 0507 015	:*CU plate		1	81	—	—		—
38	273 0389 002	Transistor 2SC3855(O/P/Y)(Z)	TR319,320	2					
39	271 0240 006	Transistor 2SA1491(O/P/Y)(Z)	TR321,322	2					
40	412 4000 005	:*P.W.B.bracket (A)		2					
41	449 0138 009	:Card spacer (L=12)		1					
42	146 1637 008	Inner panel	Black model	1					
42	146 1637 011	Inner panel	Gold model	1					
43	—	Mica sheet		4					
44	113 1739 003	:*Function button	Black model	1					
44	113 1739 016	:*Function button	Gold model	1					
45	—	—		—					
46	233 6207 009	Power transformer		2					

## PACKING &amp; ACCESSORIES

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
SCREWS & WASHERS					151	GEN 3580	Envelope Sub. Ass'y		1s
101	473 7002 018	Screw 3x8	CBTS(S)-Z	17	151-1	505 8006 019	Envelope		(1)
102	473 7004 016	Screw 4x6	CBTS(S)-Z	8	151-2	511 2899 007	Operating instructions		(1)
103	473 7004 029	Screw 4x10	CBTS(S)-Z	14	151-3	399 0277 004	Remote control unit	RC-176	(1)
104	473 7015 018	Screw 3x8	CBTS(S)-B	11	151-4	—	Batteries	R6P/AA/SUM-3	(2)
105	473 8007 009	Cup screw 3x12		7	151-5	515 0671 326	DENON service network		(1)
106	473 7508 017	Screw 3x10	CBTS(P)-B	18	152	505 8092 010	Laminate envelope		1
107	477 0064 107	Fixing screw 3x10		10	153	503 1222 001	Cushion		2
108	473 7508 004	Screw 3x6	CBTS(P)-B	2	154	502 0892 002	:Support pad		2
109	473 7500 044	Screw 3x8	CBTS(P)-B	2	155	502 1227 006	:Sub cushion		1
110	477 0263 005	3P swelling screw	Black model	4	156	501 1927 009	Carton case		1
110	477 0263 018	3P swelling screw	Gold model	4	157	513 2446 003	China label(E)		1
111	—	—		—	158	513 2447 002	China label(F)		1
112	473 7002 034	Screw 3x6	CBTS(S)-B	1	159	513 9111 001	Color label (Gold)	Gold model only	2
113	477 0018 001	Washer	P-87	1					
114	475 1175 002	:Washer		1					
115	—	—		—					

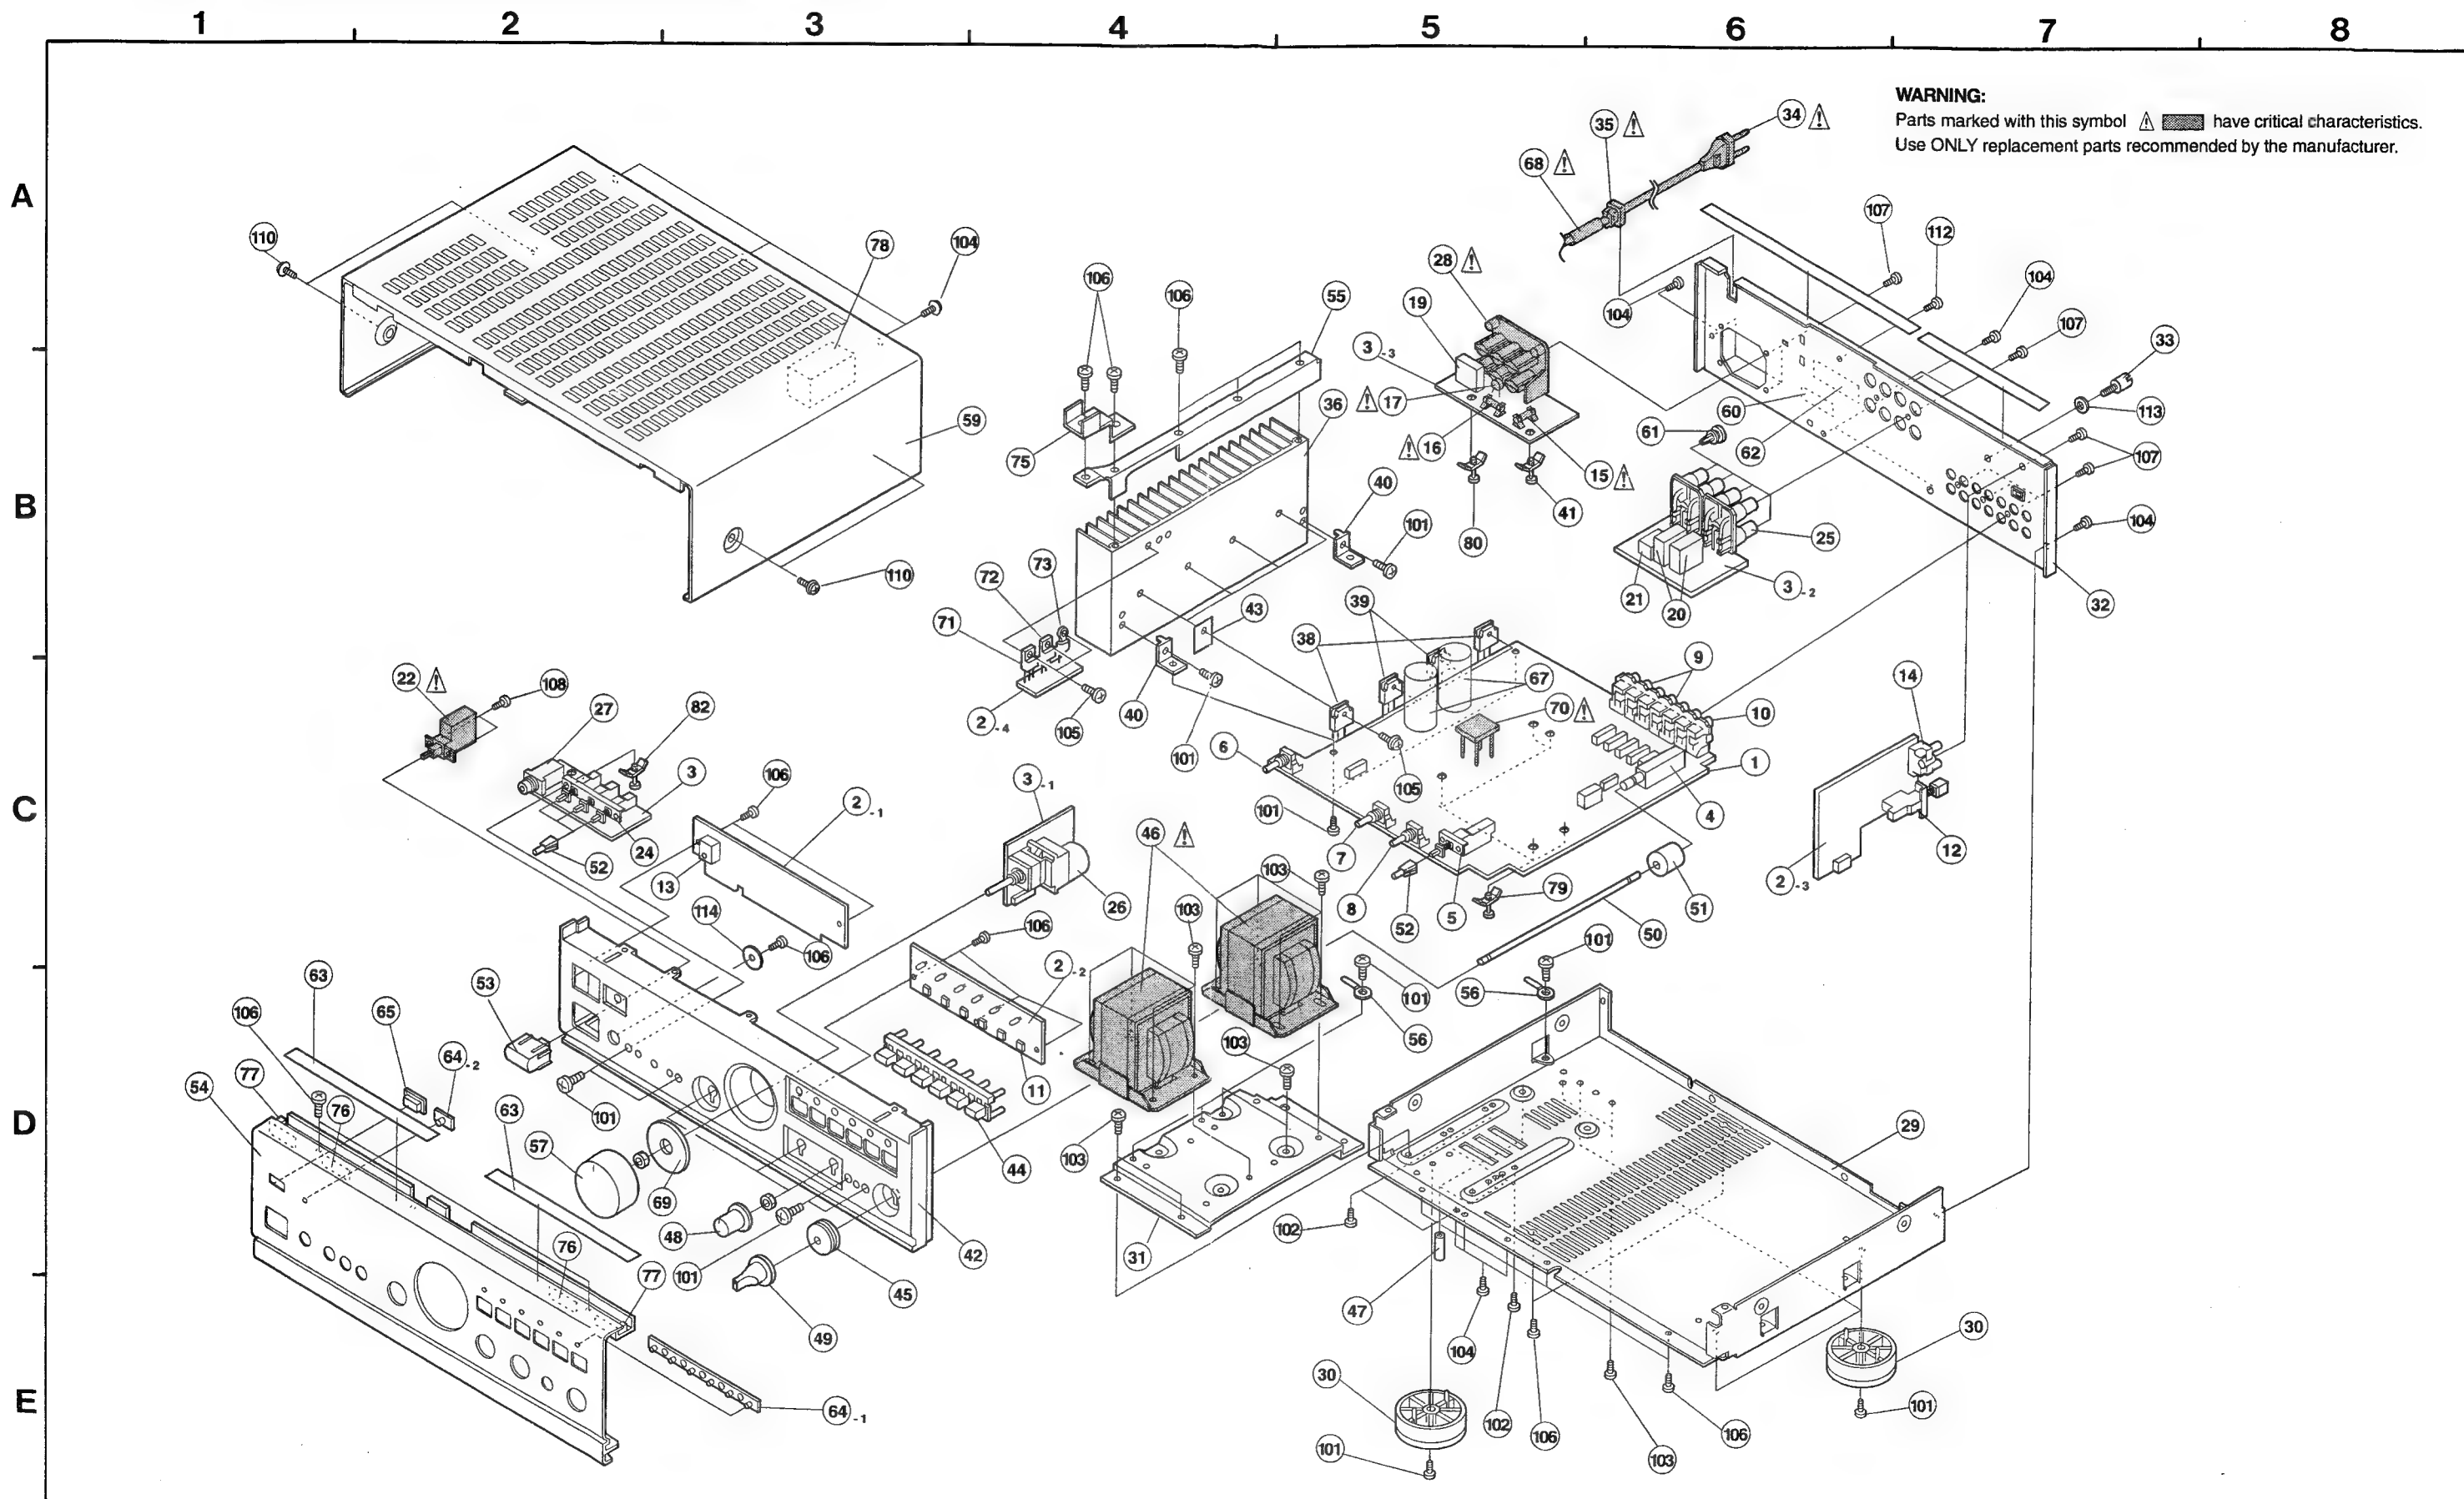
## NOTE FOR PARTS LIST

- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "1" and "1" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

## WARNING:

Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

# EXPLODED VIEW OF CHASSIS AND CABINET : PMA-725R



## PARTS LIST OF EXPLODED VIEW PMA-725R

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
1	1U- 2938 A	Main unit Ass'y	Europe model	1s	40	412 4000 005	*P.W.B.bracket (A)		2
1	1U- 2938 B	Main unit Ass'y	U.K. model	1s	41	—	—		
2	1U- 2939 A	M-com unit Ass'y		1s	42	146 1632 003	Inner panel	Black model	1
2-1	—	M-com unit		(1)	42	146 1632 016	Inner panel	Gold model	1
2-2	—	LED unit		(1)	43	—	Mica sheet		4
2-3	—	Phono unit		(1)	44	113 1739 003	*Function button	Black model	1
2-4	—	Supply unit		(1)	44	113 1739 016	*Function button	Gold model	1
3	1U- 2940 A	Volume unit Ass'y	Europe model	1s	45	124 0032 057	Felt sheet		1
3	1U- 2940 B	Volume unit Ass'y	U.K. model	1s	46	233 6203 003	Power transformer		2
3-1	—	Volume unit		(1)	47	462 0094 007	Screw tube		2
3-2	—	Speaker unit		(1)	48	112 0646 000	*Knob(S)	Black model	3
3-3	—	AC outlet unit	Europe model only	(1)	48	112 0646 013	*Knob(S)	Gold model	3
3-4	—	Speaker sel. unit		(1)	49	112 0641 102	*Fuji knob	Black model	1
3-5	—	Power switch unit	U.K. model only	(1)	49	112 0641 115	*Fuji knob	Gold model	1
3-6	—	AC unit	U.K. model only	(1)	50	112 0784 001	Volume knob joint		1
4	212 0336 005	Rotary switch	SW101 Rec out sel.	1	51	112 0785 000	Volume knob joint (B)		1
5	212 1161 004	1P push switch	SW202 S.Direct	1	52	113 1745 107	*Push button(Round)	Black model	4
6	211 0798 103	Variable resistor 100kohm	VR202 Balance	1	52	113 1745 110	*Push button(Round)	Gold model	4
7	211 0834 009	Variable resistor 30kohm	VR204 Bass	1	53	113 1738 101	*Power button	Black model	1
8	211 0834 012	Variable resistor 10kohm	VR203 Treble	1	53	113 1738 114	*Power button	Gold model	1
9	204 8266 008	4P pin jack(S-GND)	for TAPE	2	54	144 2507 306	Front panel	Black model	1
10	204 8278 009	6P pin jack(S-GND)	for INPUTS	1	54	144 2507 319	Front panel	Gold model	1
11	212 4789 001	Tact switch	SW801-806	6	55	412 4128 000	Radiator bracket		1
12	212 1099 008	1P push switch	SW901 MM/MC	1	56	445 0048 003	Cord holder L=76		3
13	499 0150 008	Remote sensor SBX1610-52	IC105	1	57	112 0744 009	Volume knob Ass'y	Black model	1
14	204 8413 000	2P pin jack(C-GND)	for PHONO	1	57	112 0744 012	Volume knob Ass'y	Gold model	1
15	206 1015 061	Fuse (2 A)	F001	1	58	445 8004 007	Wire clasper		18
16	206 1015 029	Fuse (1A T)	F002	1	59	102 0543 119	::Top cover	Black model	1
17	415 0299 000	Capacitor cover	Europe model only	1	59	102 0543 122	::Top cover	Gold model	1
18	—	—	for C002	1	60	513 2444 005	Label (China)	Puton rear panel	1
19	214 0142 004	Relay(TV-5)	RL001	1	61	477 0096 007	Push rivet		8
20	214 0129 001	Relay(DH2TU)	Europe model only	2	62	513 2433 003	Serial No. sheet		1
21	214 0178 007	Relay(MR62-12USRY)	RL601,602	7	63	122 0219 007	Sheet	F/Panel,R/Panel	4
22	212 1030 009	Power switch(TV-5)	SW001	1	64	143 0945 006	*Lens		1
23	—	—		1	64-1	—	*Lens		(1)
24	212 1162 003	3P push switch	SW501 Speaker	1	64-2	—	*Lens		(1)
25	205 0484 001	8P speaker terminal	ON-OFF	1	65	143 9181 007	*Remocon window		1
26	211 0869 003	Variable resistor 30kohm	for speaker	1	66	254 4252 082	Electrolytic cap. 2200μF/10V	C309,310	2
27	204 8503 004	:Head phone jack	VR201 Main volume	1	67	254 6205 008	Electrolytic cap. 10000μF/51V	C705,706	2
28	203 3950 002	3P AC outlet	JA501	1	68	415 0305 017	P.V.C. tube	for AC cord	1
29	411 1267 712	*Main chassis	AOL-1	1	69	412 4135 006	Volume plate	Black model	1
30	104 0282 007	*Foot Ass'y	Europe model only	4	69	412 4135 019	Volume plate	Gold model	1
31	441 1786 003	Trans bracket		1	70	276 0338 007	Diode S4VB20F	D702 Bridge	1
32	105 1198 009	Rear panel	Europe model	1	71	272 0129 007	Transistor 2SB1566 (E/F)	TR702	1
32	105 1198 012	Rear panel	U.K. model	1	72	263 0793 002	IC NJM7806FA (S)	IC702 Regulator+6V	1
33	205 0071 016	Terminal Ass'y		1	73	279 0034 041	PTH9M04BD222TS2F333	PH701	1
34	206 2063 009	AC cord with plug		1	74	—	—		1
34	206 2131 009	AC cord with plug	Europe model	1	75	412 4159 008	:Support bracket		1
35	445 0056 008	Cord bush	U.K. model	1	76	461 0942 004	Spacer (T=1)		2
36	417 0503 129	Power radiator		1	77	146 1648 000	Side spacer		2
37	—	—		1	78	461 0941 005	:Rubber form		1
38	274 0173 004	Transistor 2SD2390(O/P/Y)		2	79	449 0138 012	:Card spacer (L=25)		5
39	272 0137 002	Transistor 2SB1560(O/P/Y)	TR319,320	2	80	449 0138 012	:Card spacer (L=25)		1
			TR321,322	2	81	449 0138 012	:Card spacer (L=25)		1
					82	449 0138 025	:Card spacer (L=31)		1
					83	513 2001 008	Insulate mark sheet	U.K. model only	1
					84	202 0013 101	Fuse holder	U.K. model only	1

## PACKING &amp; ACCESSORIES

Ref. No.	Part No.	Part Name	Remarks	Q'ty	Ref. No.	Part No.	Part Name	Remarks	Q'ty
85	415 0785 006	Insulating plate	U.K. model only	1	151	GEN 3580	Envelope Sub. Ass'y		1s
86	513 1390 008	Fuse label	U.K. model only	1	151-1	505 8006 019	Envelope		(1)
87	203 0150 009	Write connector	U.K. model only	2	151-2	511 2899 007	Operating instructions		(1)
88	415 0360 052	P.V.C. Tubing (19)	U.K. model only	1	151-3	399 0277 004	Remote control unit	RC-176	(1)
SCREWS & WASHERS					151-4	—	Batteries	R6P/AA/SUM-3	(2)
101	473 7002 018	Screw 3x8	CBTS(S)-Z	15	151-5	515 0671 326	DENON service network		(1)
102	473 7004 016	Screw 4x6	CBTS(S)-Z	8	152	505 8092 010	Laminate envelope		1
103	473 7004 029	Screw 4x10	CBTS(S)-Z	14	153	503 1218 002	Cushion		2
104	473 7015 018	Screw 3x8	CBTS(S)-B	10	154	502 0893 001	:L supporter		2
105	473 8007 009	Cup screw 3x12		7	155	502 0894 000	:Pad (T=10)		1
106	473 7508 017	Screw 3x10	CBTS(P)-B	18	156	501 1922 004	Carton case		1
107	477 0064 107	Fixing screw 3x10	Europe model	10	157	513 2446 003	China label(E)		1
107	477 0064 107	Fixing screw 3x10	U.K. model	6	158	513 2447 002	China label(F)		1
108	473 7508 004	Screw 3x6	CBTS(P)-B	2	159	513 9111 001	Color label (Gold)	Gold model only	2
109	—	—			160	504 0176 009	AC protect sheet	U.K. model only	1
110	477 0263 005	3P swelling screw	Black model	4	161	503 1228 008	Support pad	U.K. model only	1
110	477 0263 018	3P swelling screw	Gold model	4					
111	—	—							
112	473 7002 034	Screw 3x6	CBTS(S)-B	1					
113	477 0018 001	Washer	P-87	1					
114	475 1175 002	:Washer		1					
115	471 3304 031	Screw 3x8	CBS U.K. model only	1					
116	475 6006 008	Nut M3	U.K. model only	1					

## NOTE FOR PARTS LIST

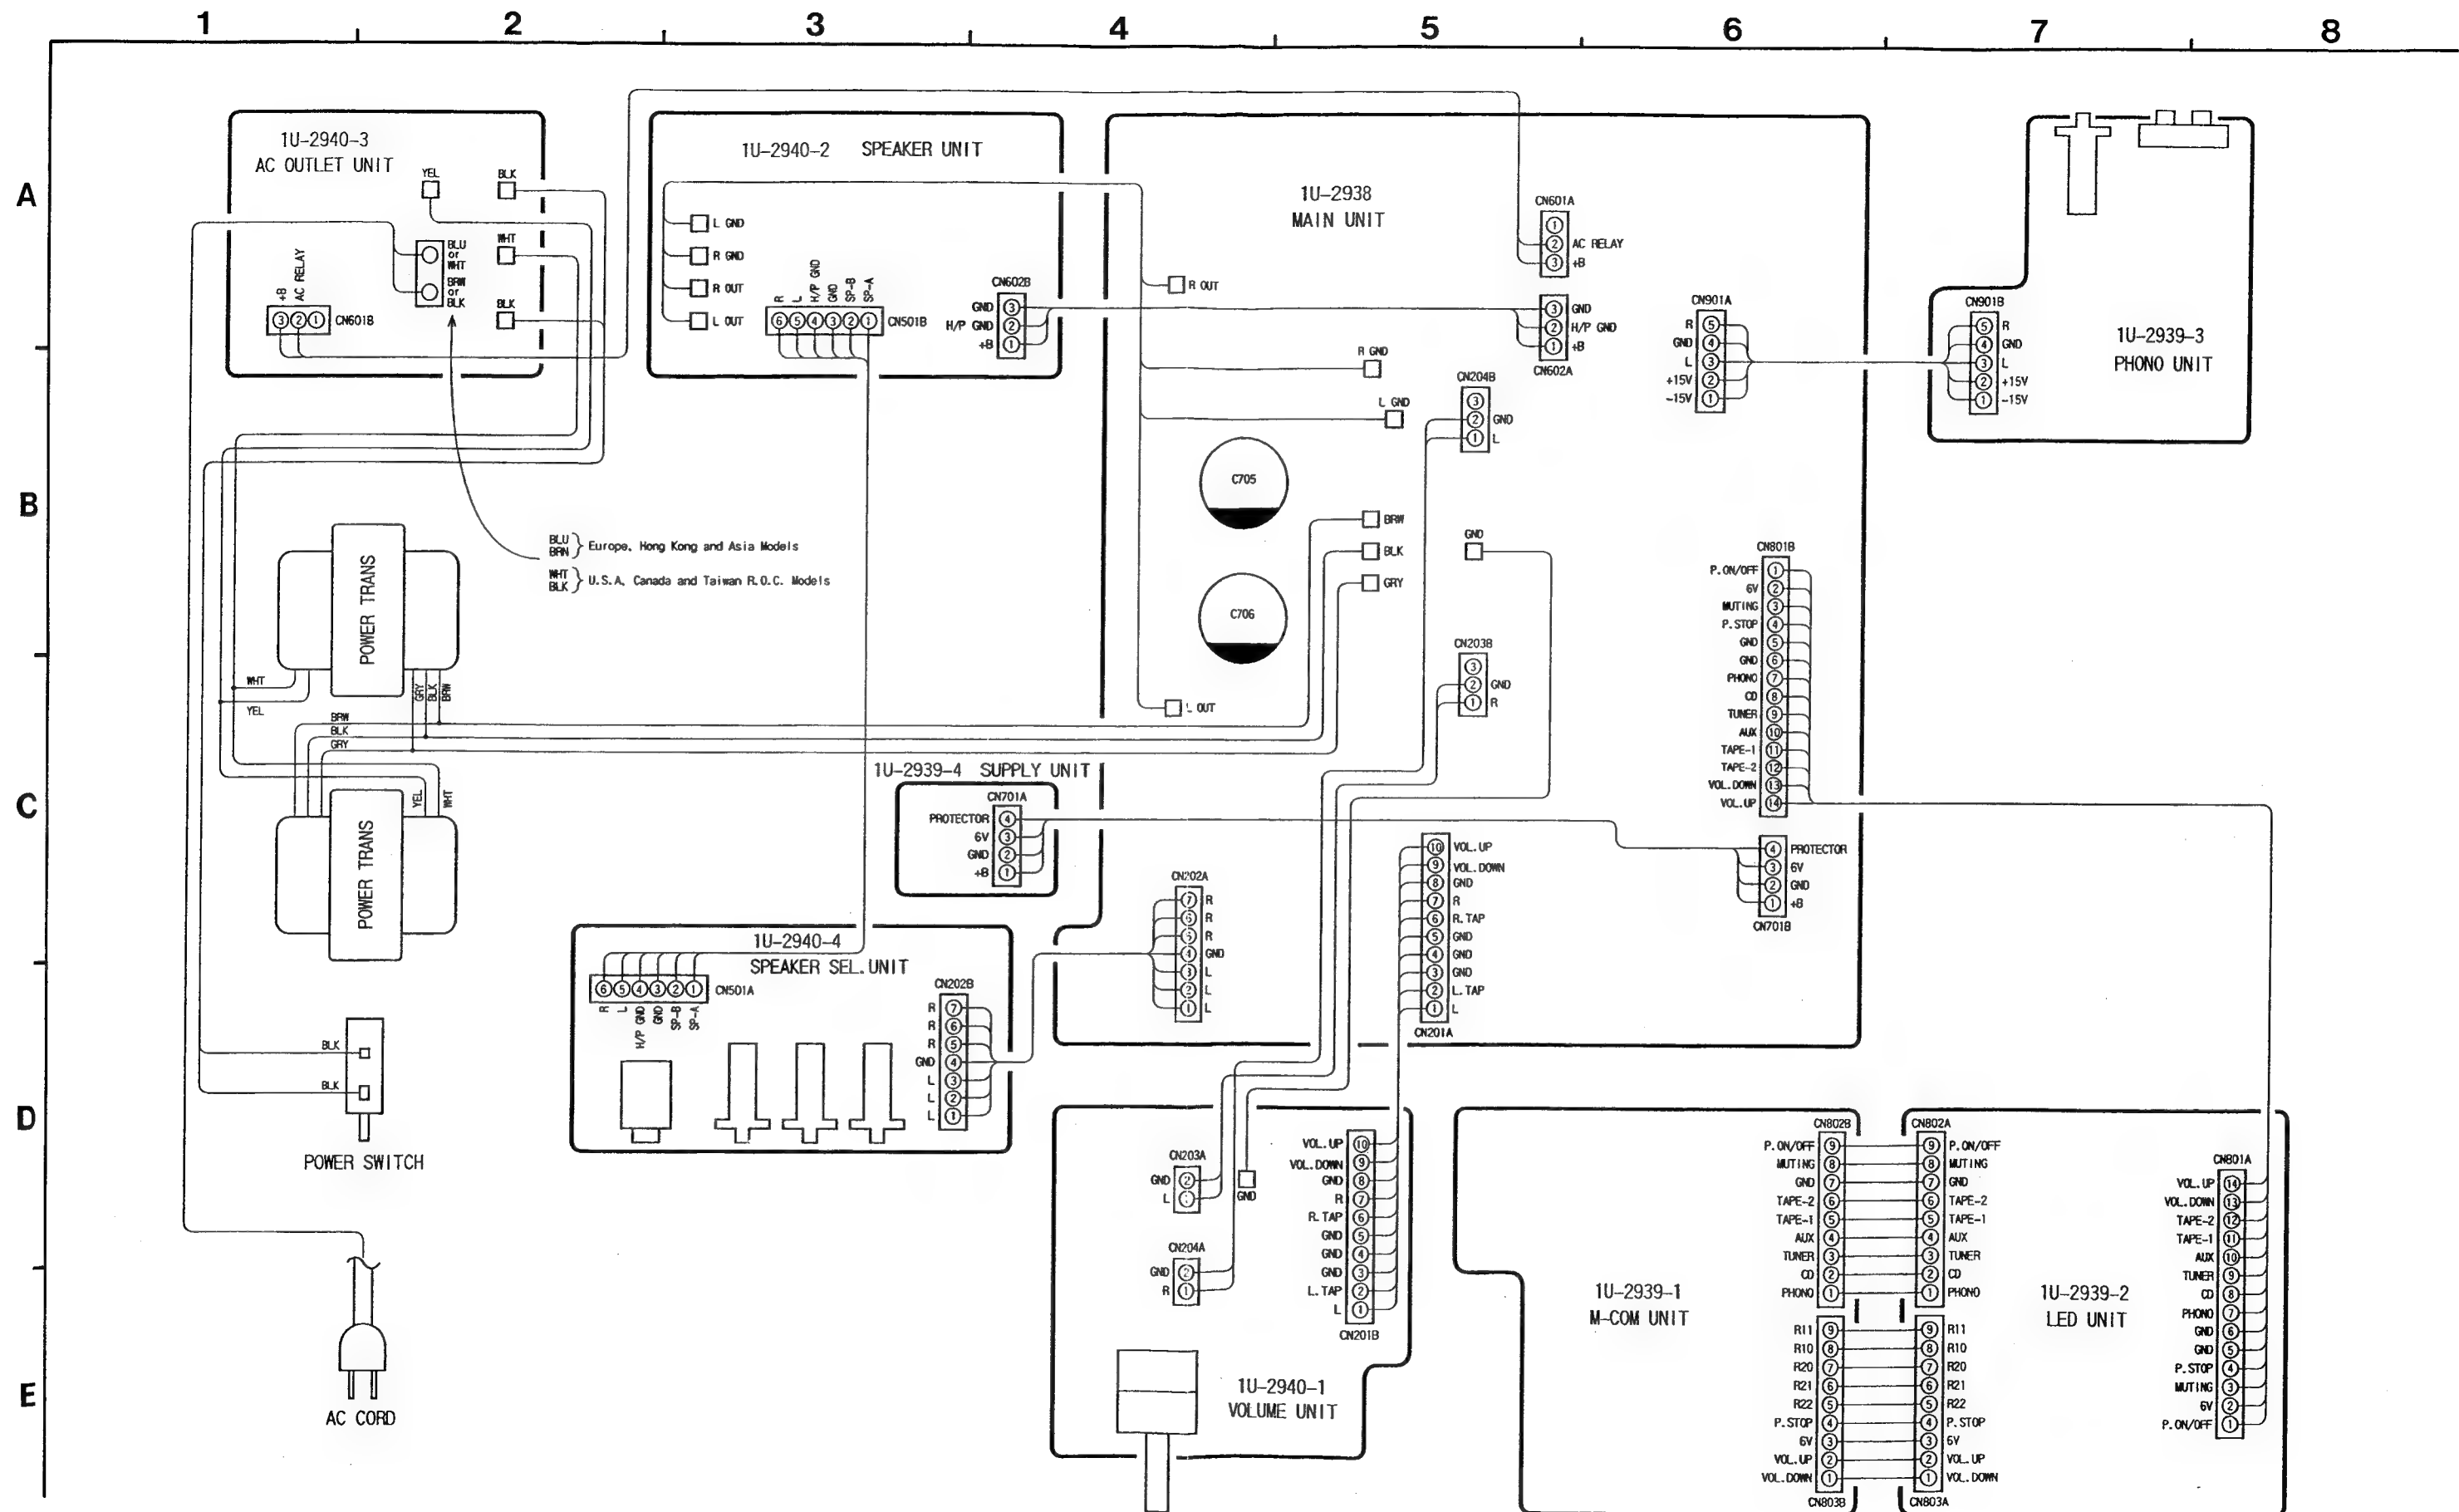
- Part indicated with the mark "●" are not always in stock and possibly to take a long period of time for supplying, or in some case supplying of part may be refused.
- When ordering of part, clearly indicate "I" and "I" (i) to avoid mis-supplying.
- Ordering part without stating its part number can not be supplied.
- Part indicated with the mark "★" is not illustrated in the exploded view.

## WARNING:


Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.



## WIRING DIAGRAM




6

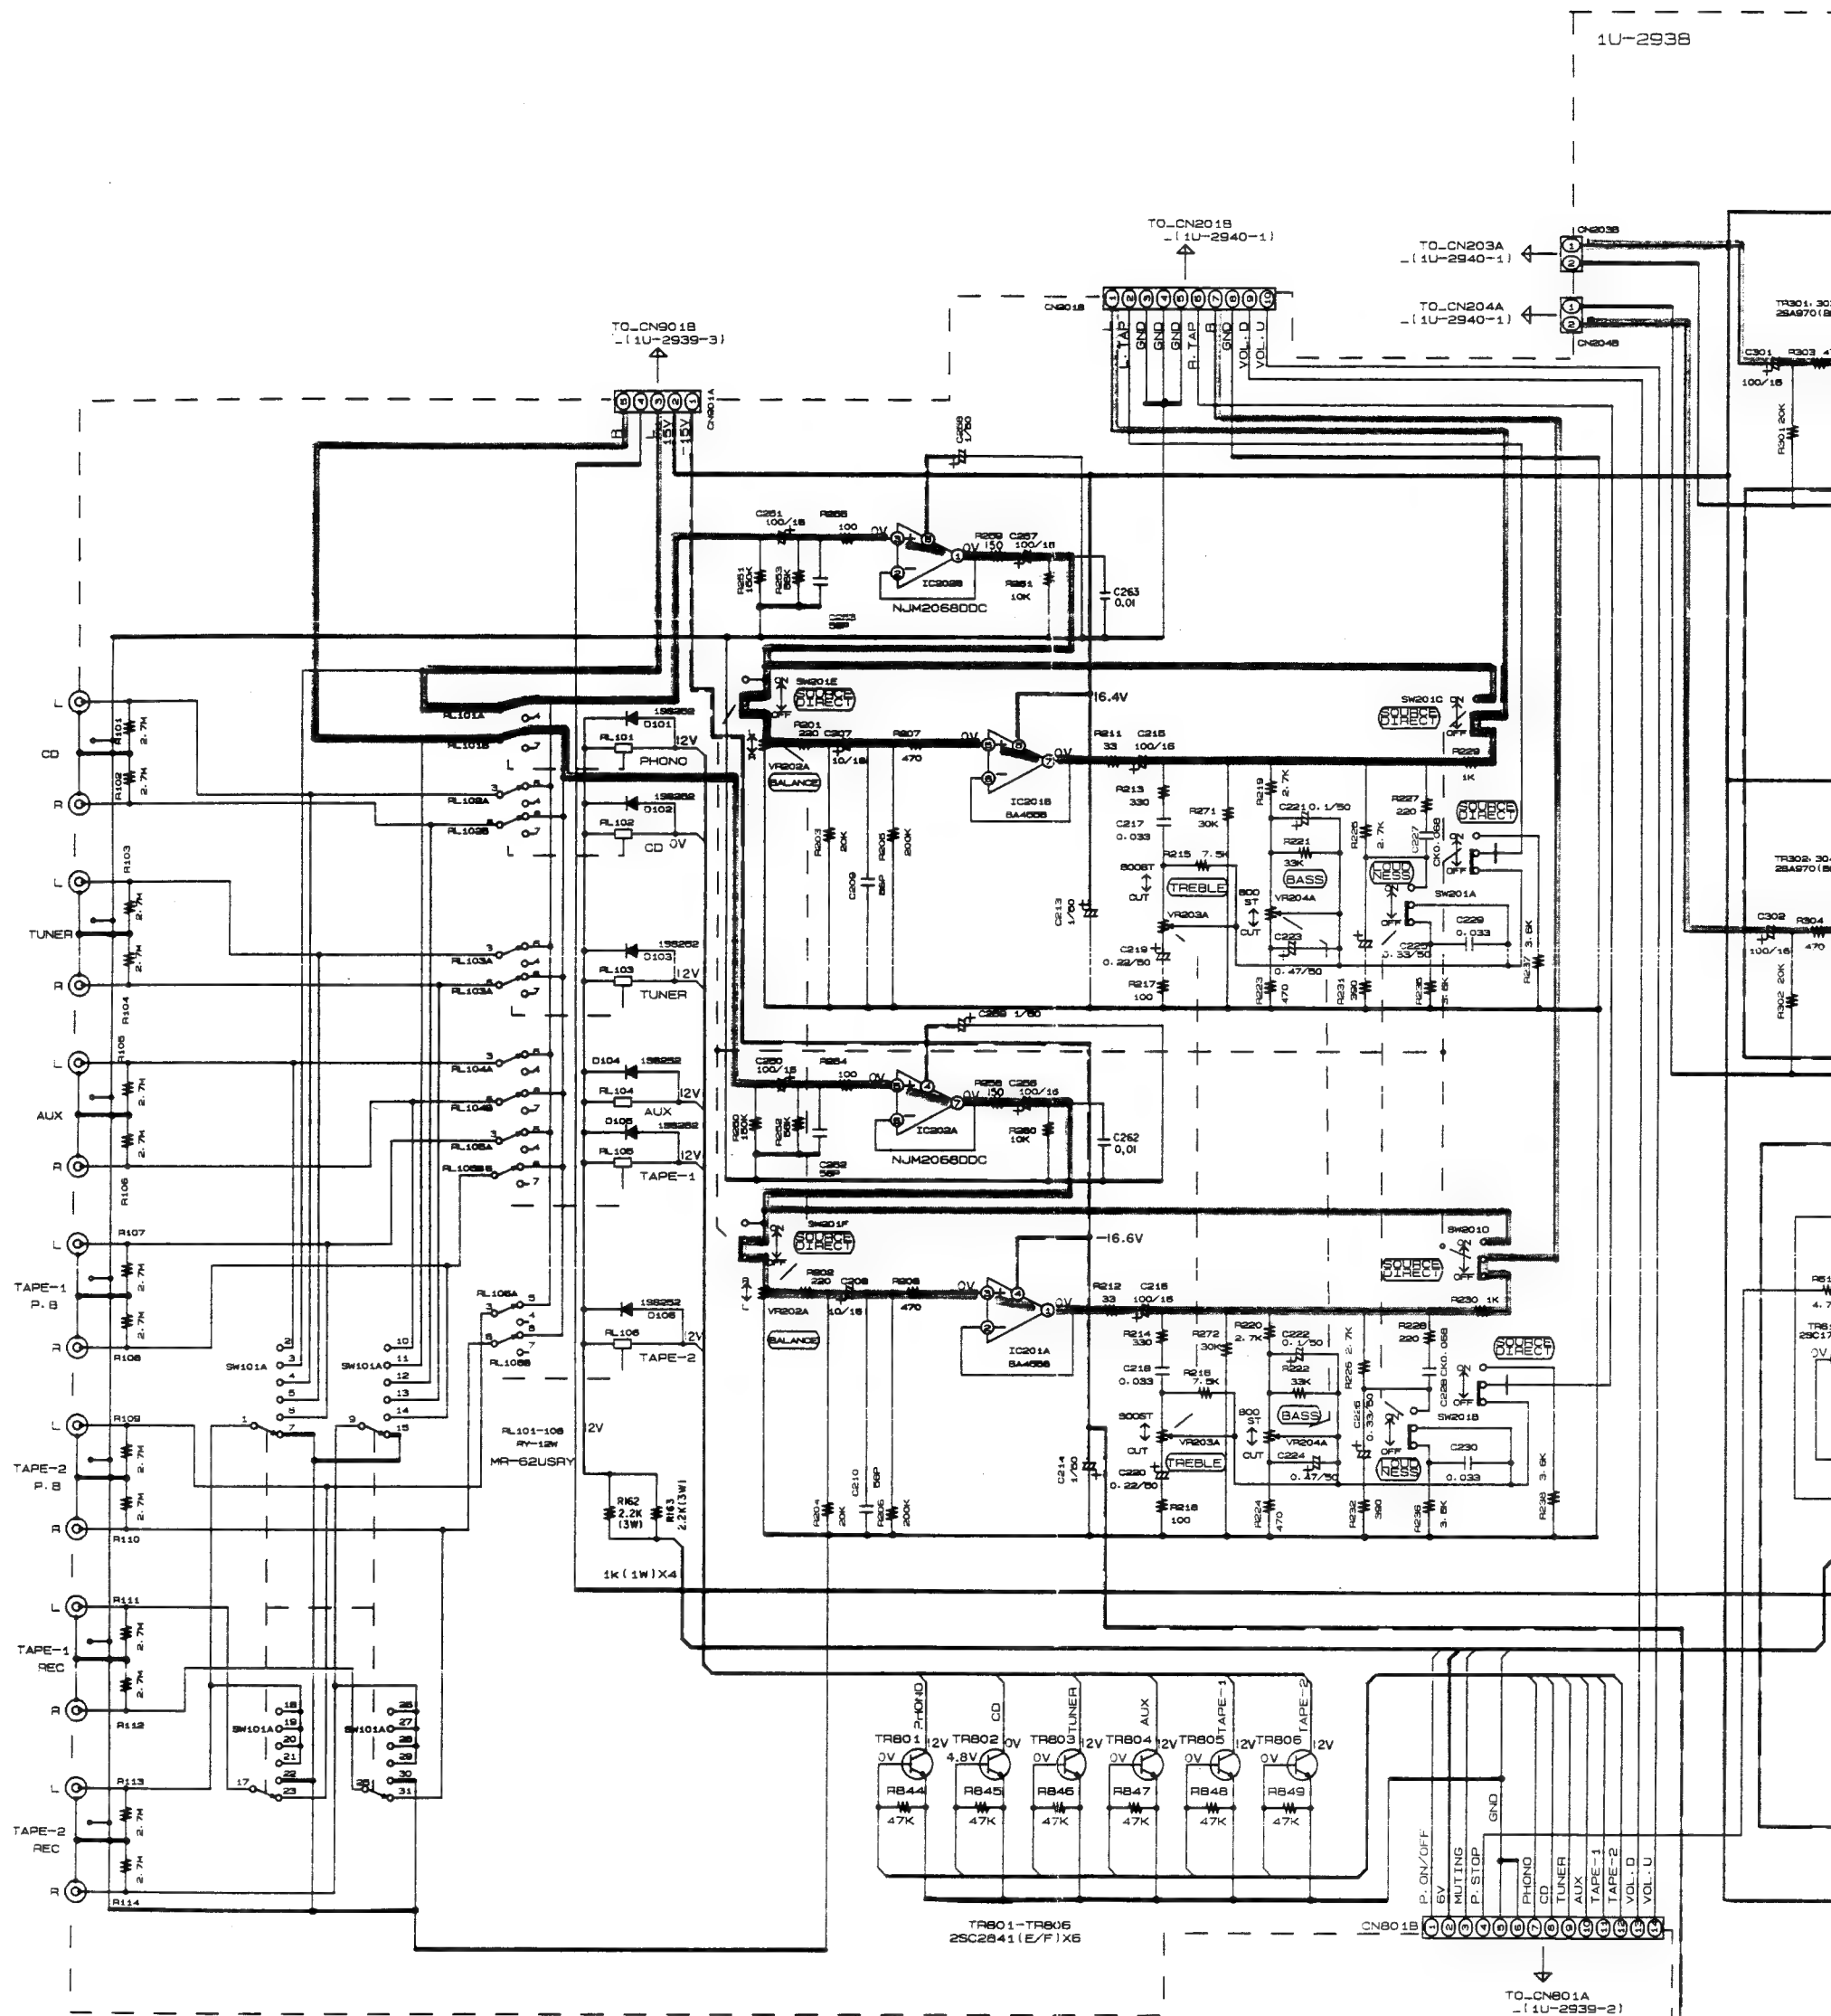



**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.

## SCHEMATIC DIAGRAM (2/4) : PMA-925R

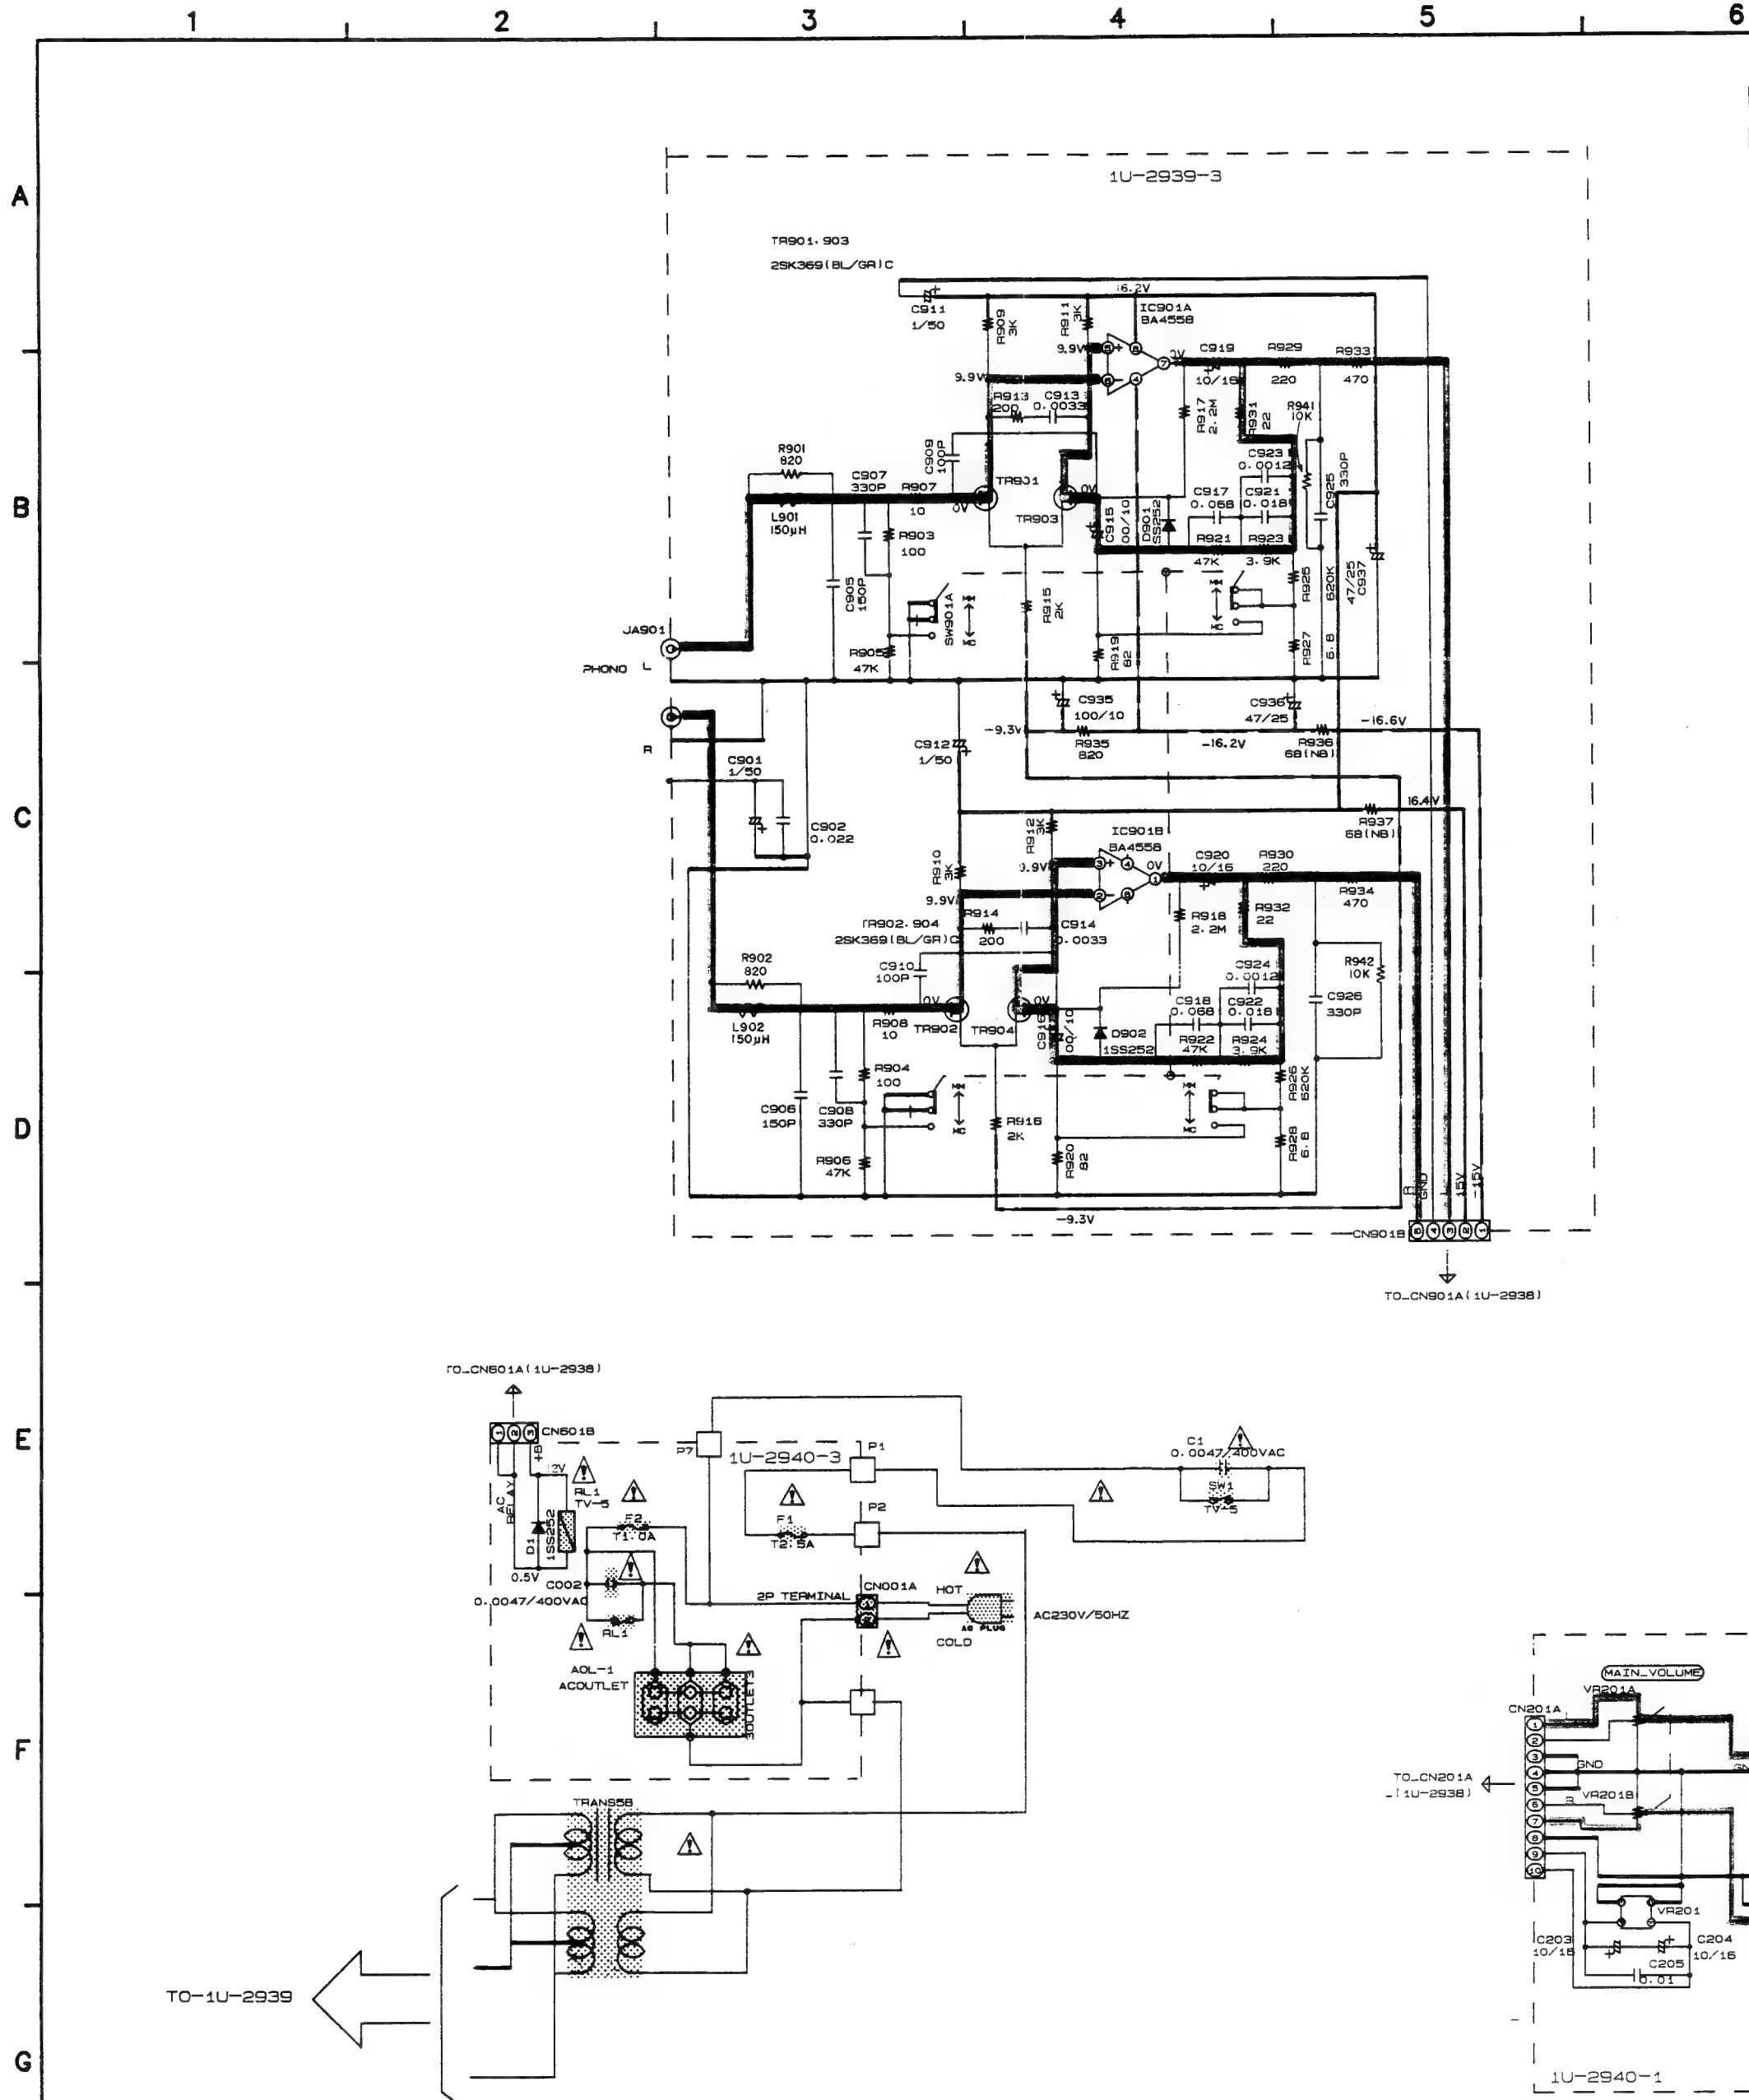

## NOTES


ALL RESISTANCE VALUES IN OHM. K=1,000 OHM.  
M=1,000,000 OHM

ALL CAPACITANCE VALUES IN MICRO FARAD.  
P=MICRO-MICRO FARAD

EACH VOLTAGE AND CURRENT ARE MEASURED AT  
NO SIGNAL INPUT CONDITION.

CIRCUIT AND PARTS ARE SUBJECT TO CHANGE  
WITHOUT PRIOR NOTICE.

## WARNING:

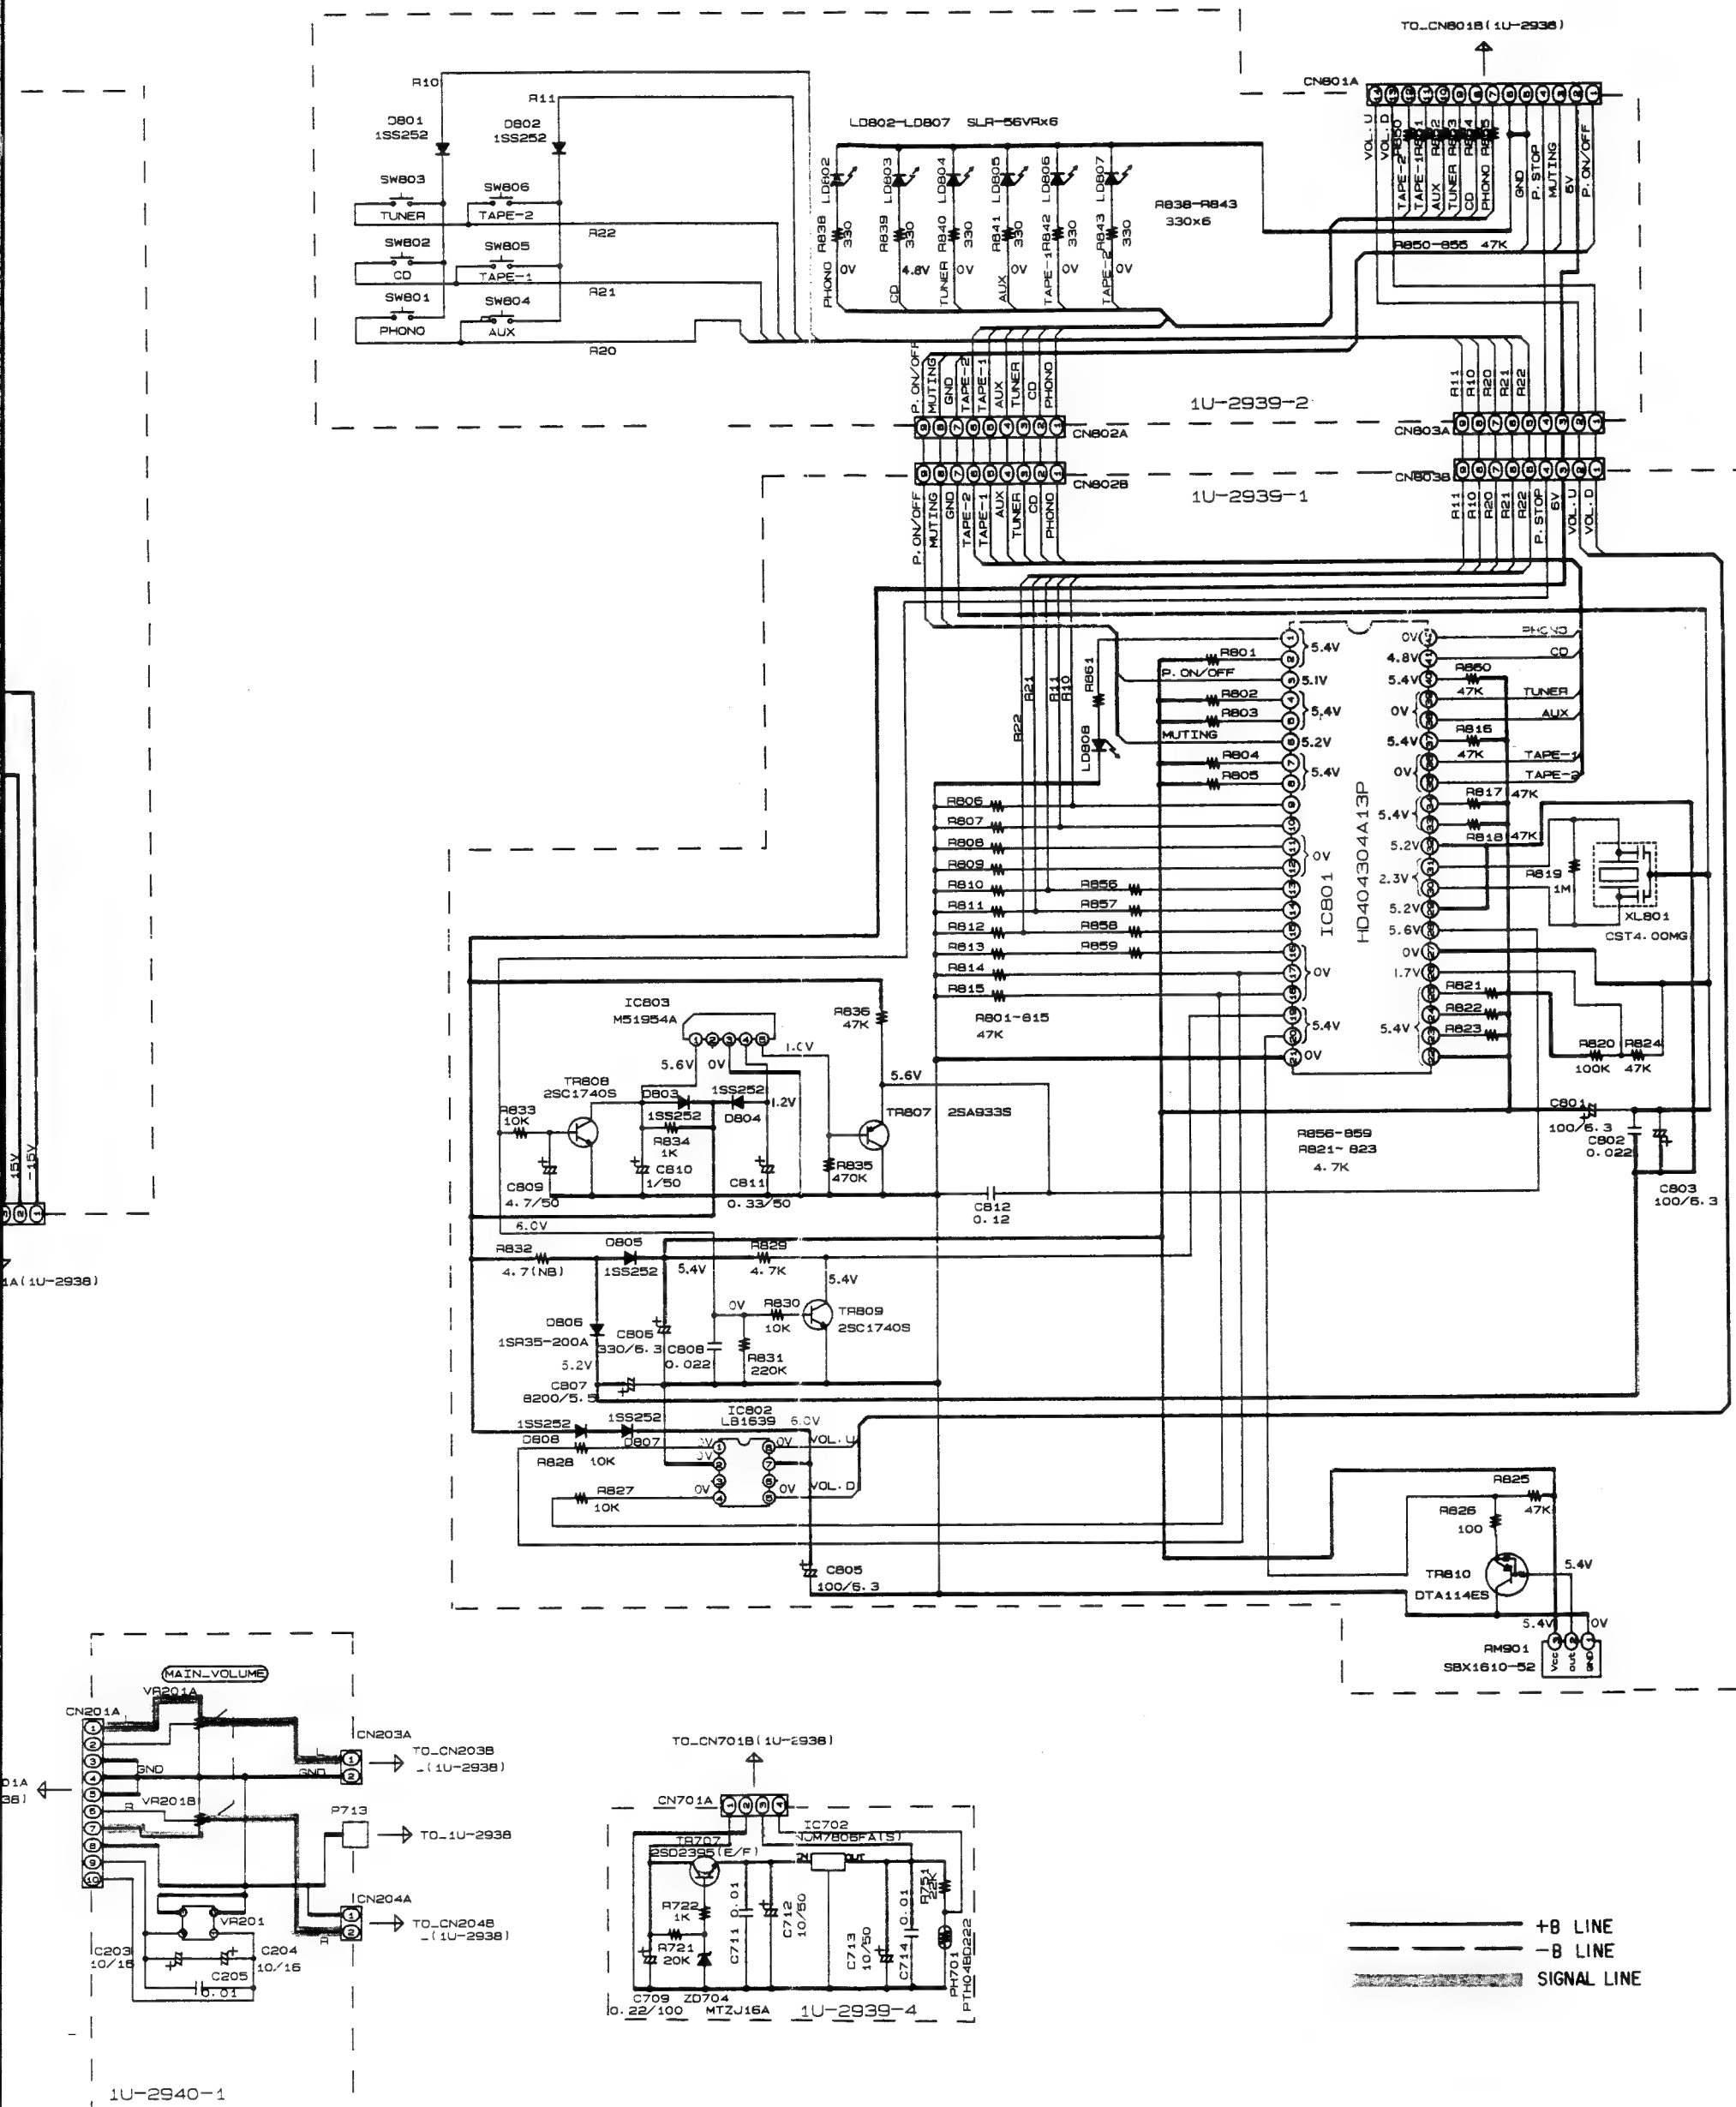
Parts marked with this symbol  have critical characteristics.  
Use ONLY replacement parts recommended by the manufacturer.

## CAUTION:

Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 milliamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

## WARNING:

DO NOT return the unit to the customer until the problem is located and corrected.



## SCHEMATIC DIAGRAM (4/4) : PMA-725R

1 2 3 4 5 6

A

B

C

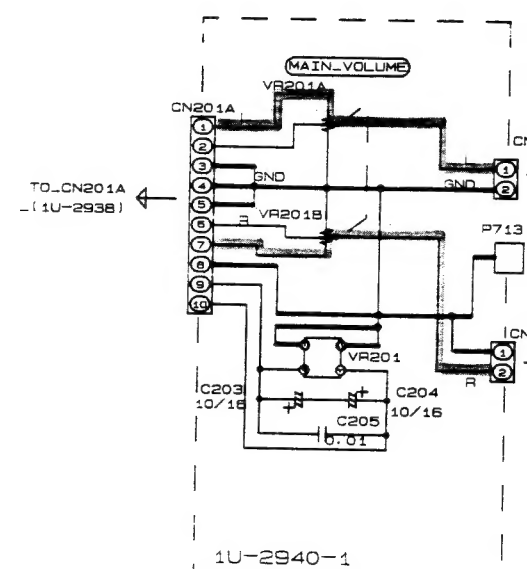
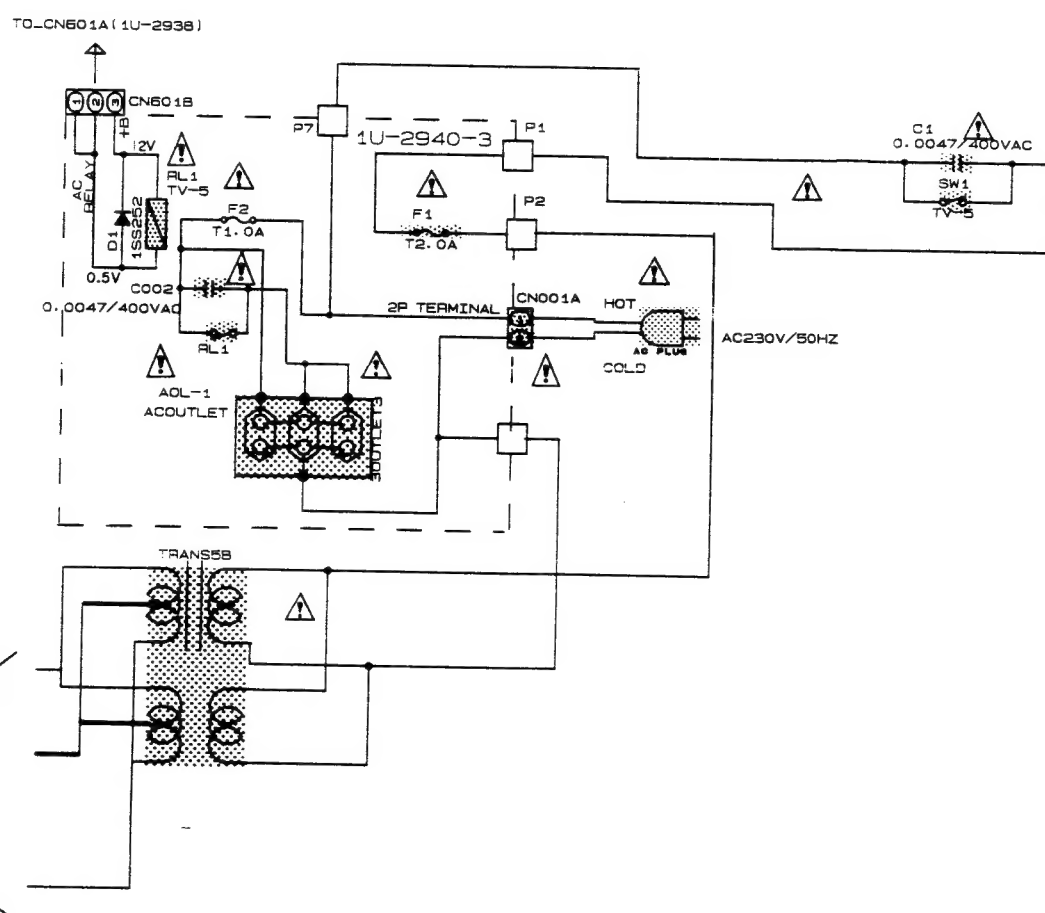
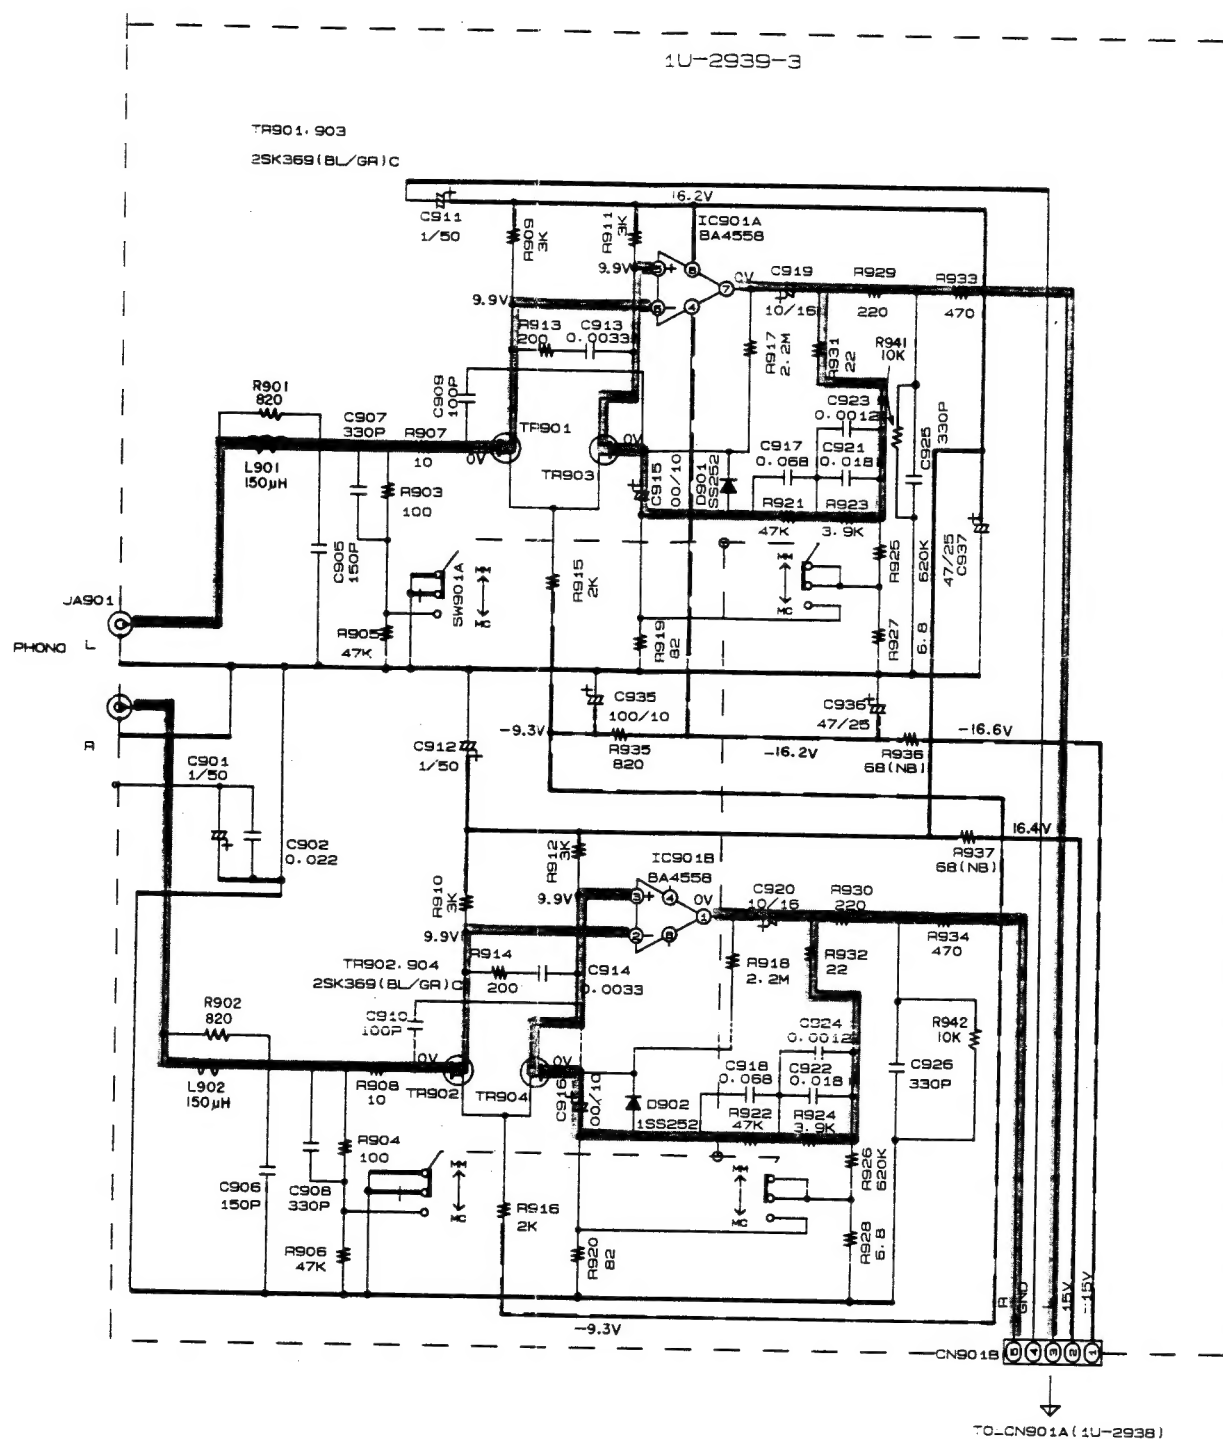
D

E

F

G


H



## NOTES

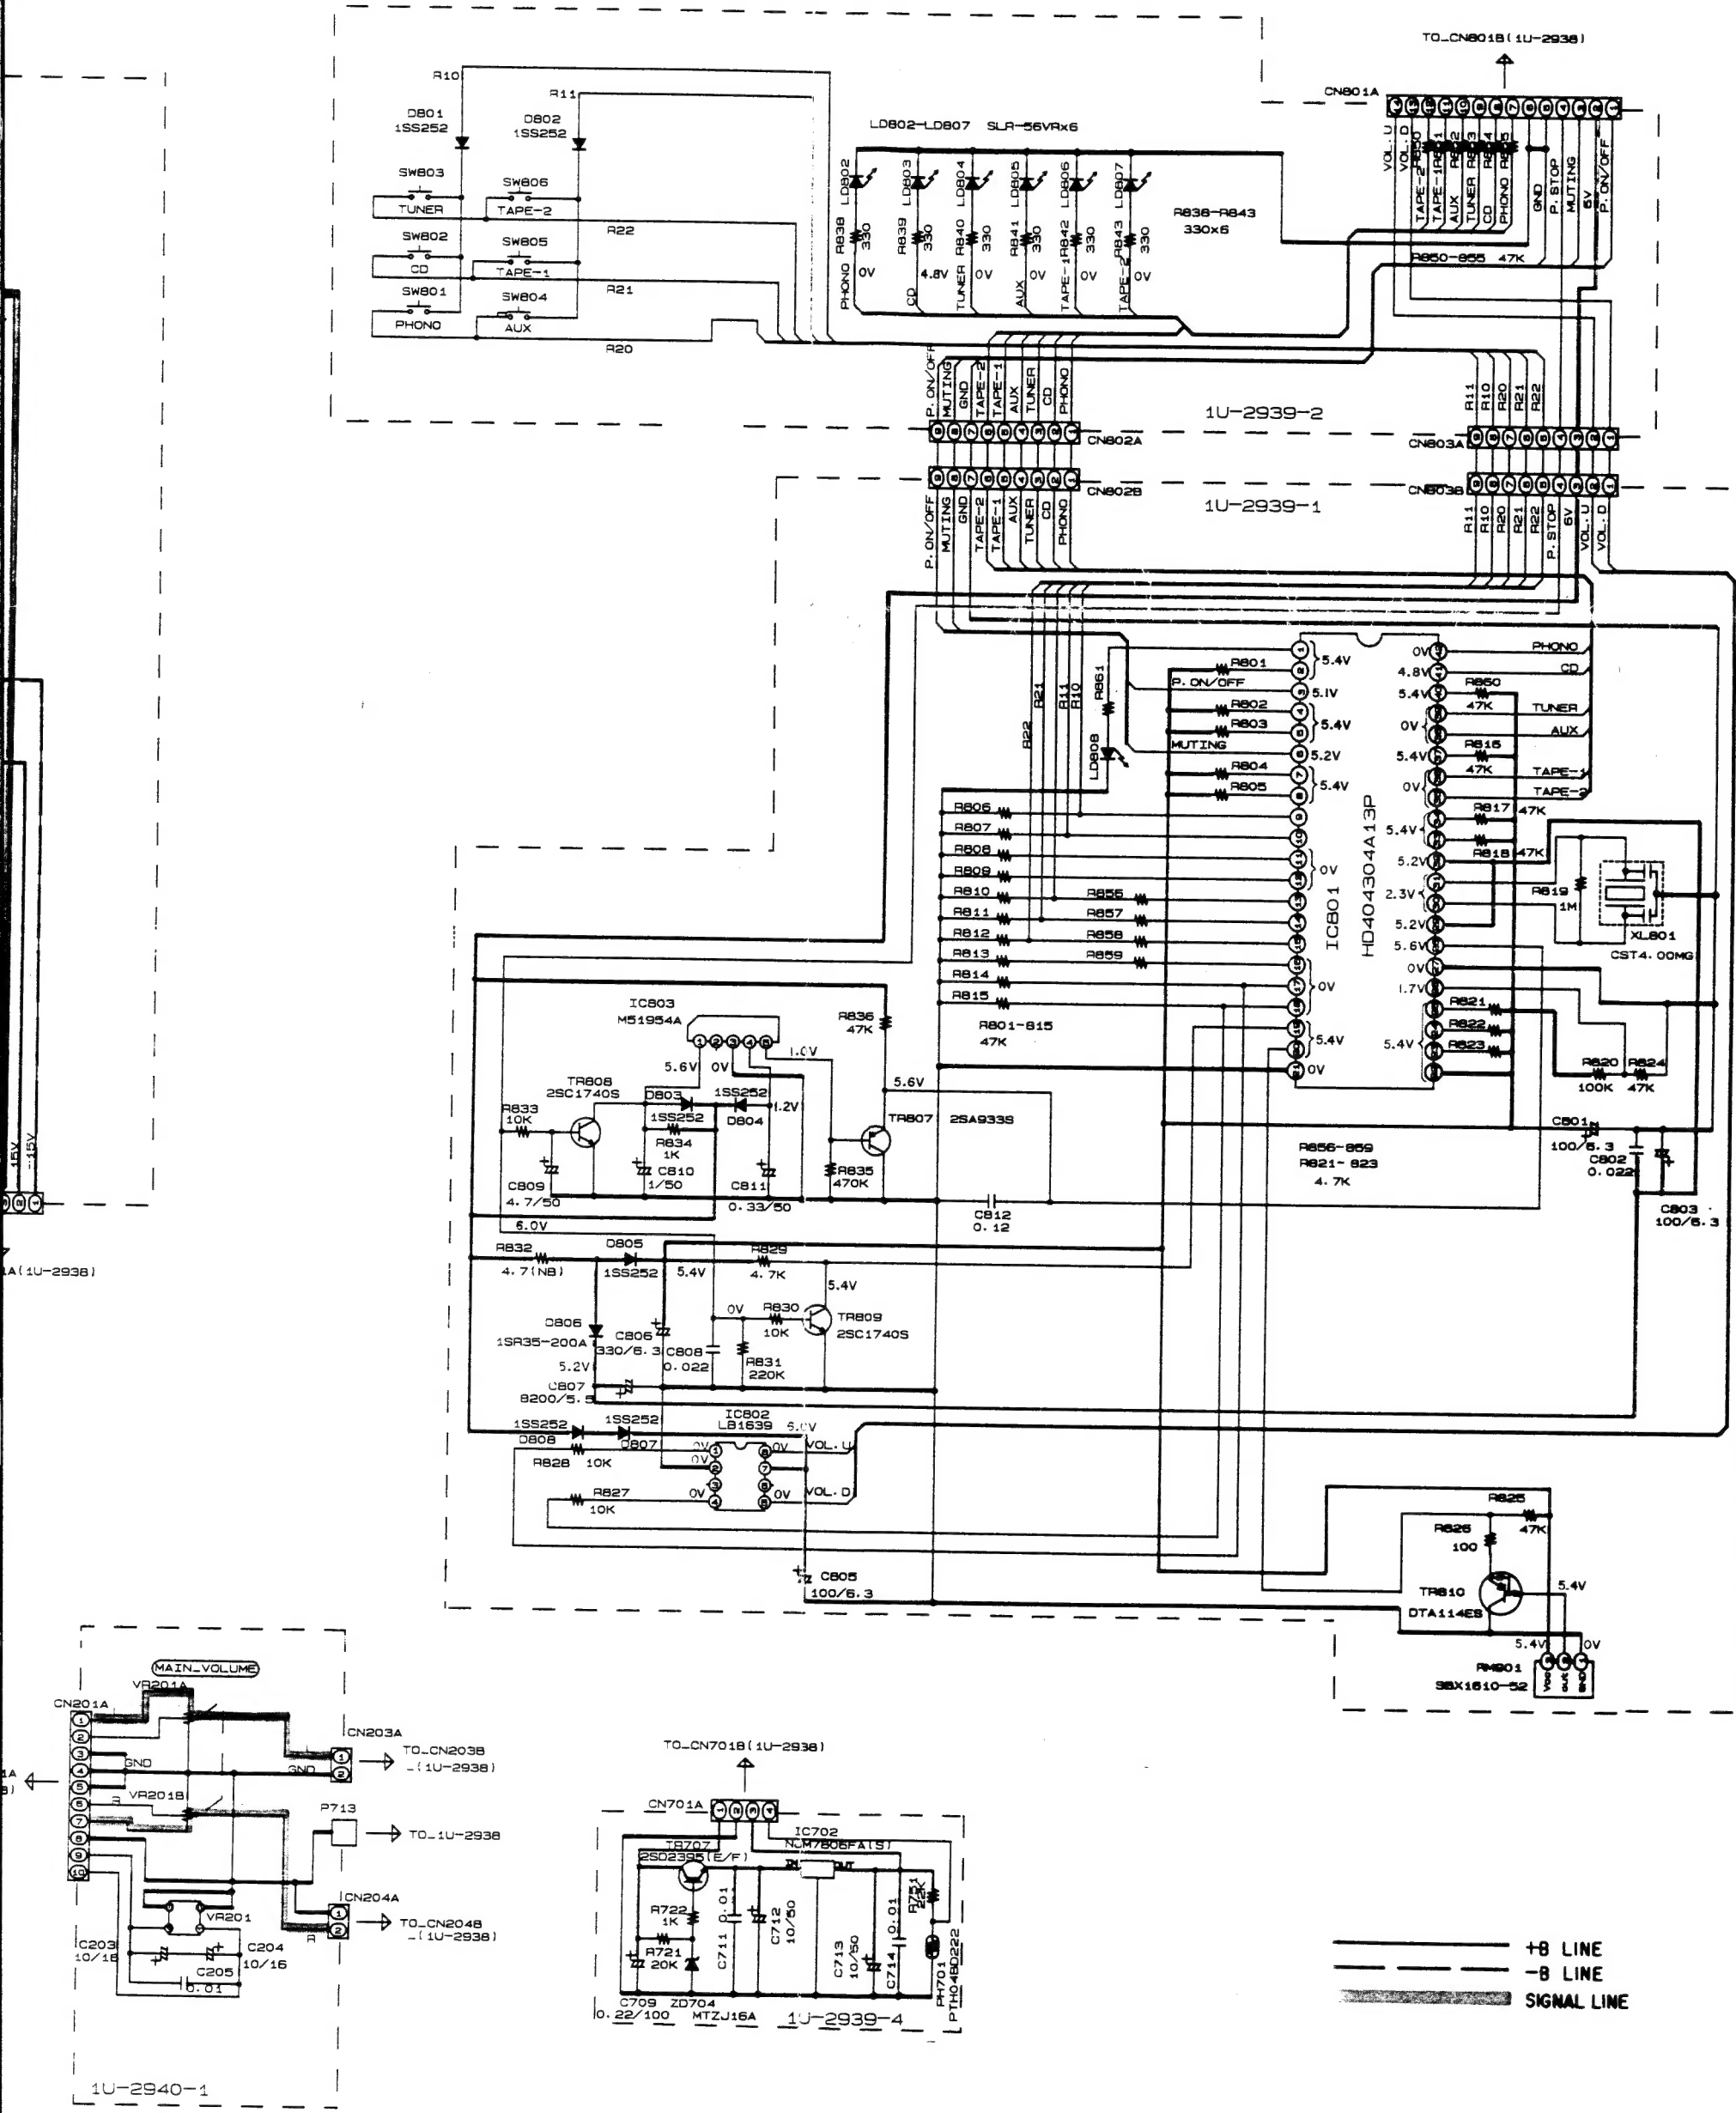ALL RESISTANCE VALUES IN OHM. K=1,000 OHM, M=1,000,000 OHM  
 ALL CAPACITANCE VALUES IN MICRO-FARAD. P=MICRO-MICRO-FARAD  
 EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT CONDITION.  
 CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR NOTICE.






— +8 LINE  
- - - -8 LINE  
— SIGNAL LINE




# SCHEMATIC DIAGRAM (3/4) : PMA-725R

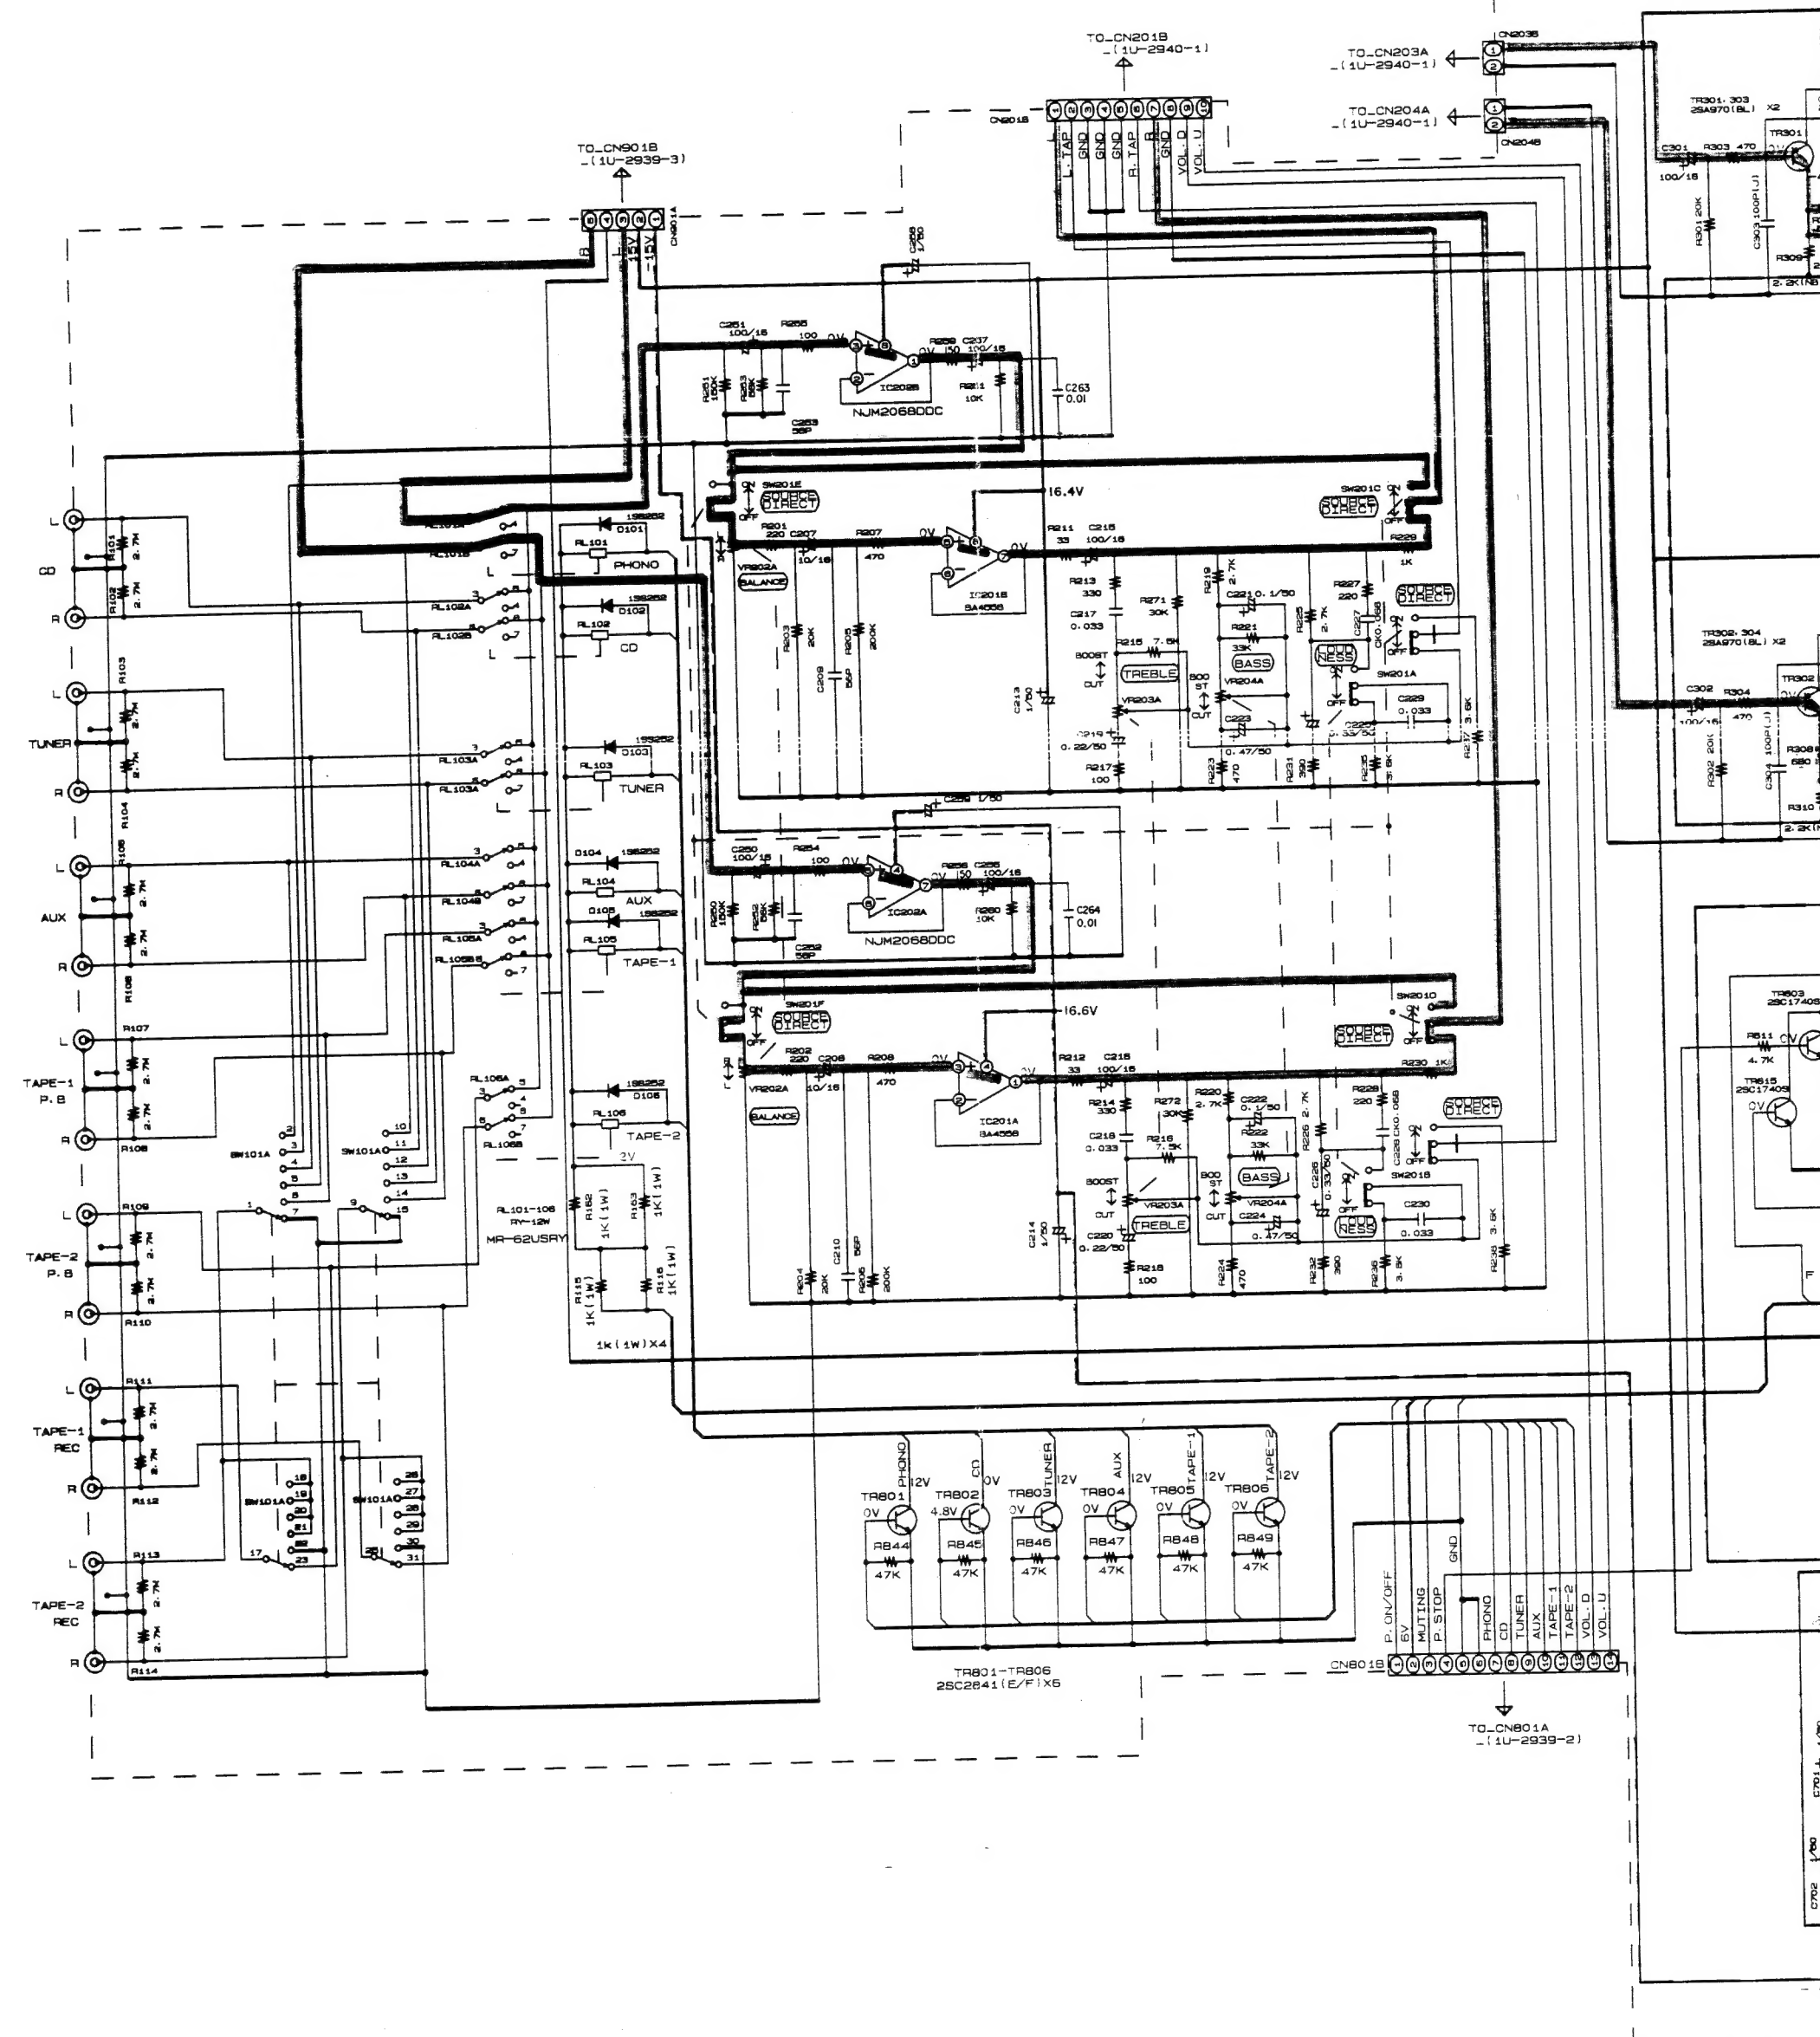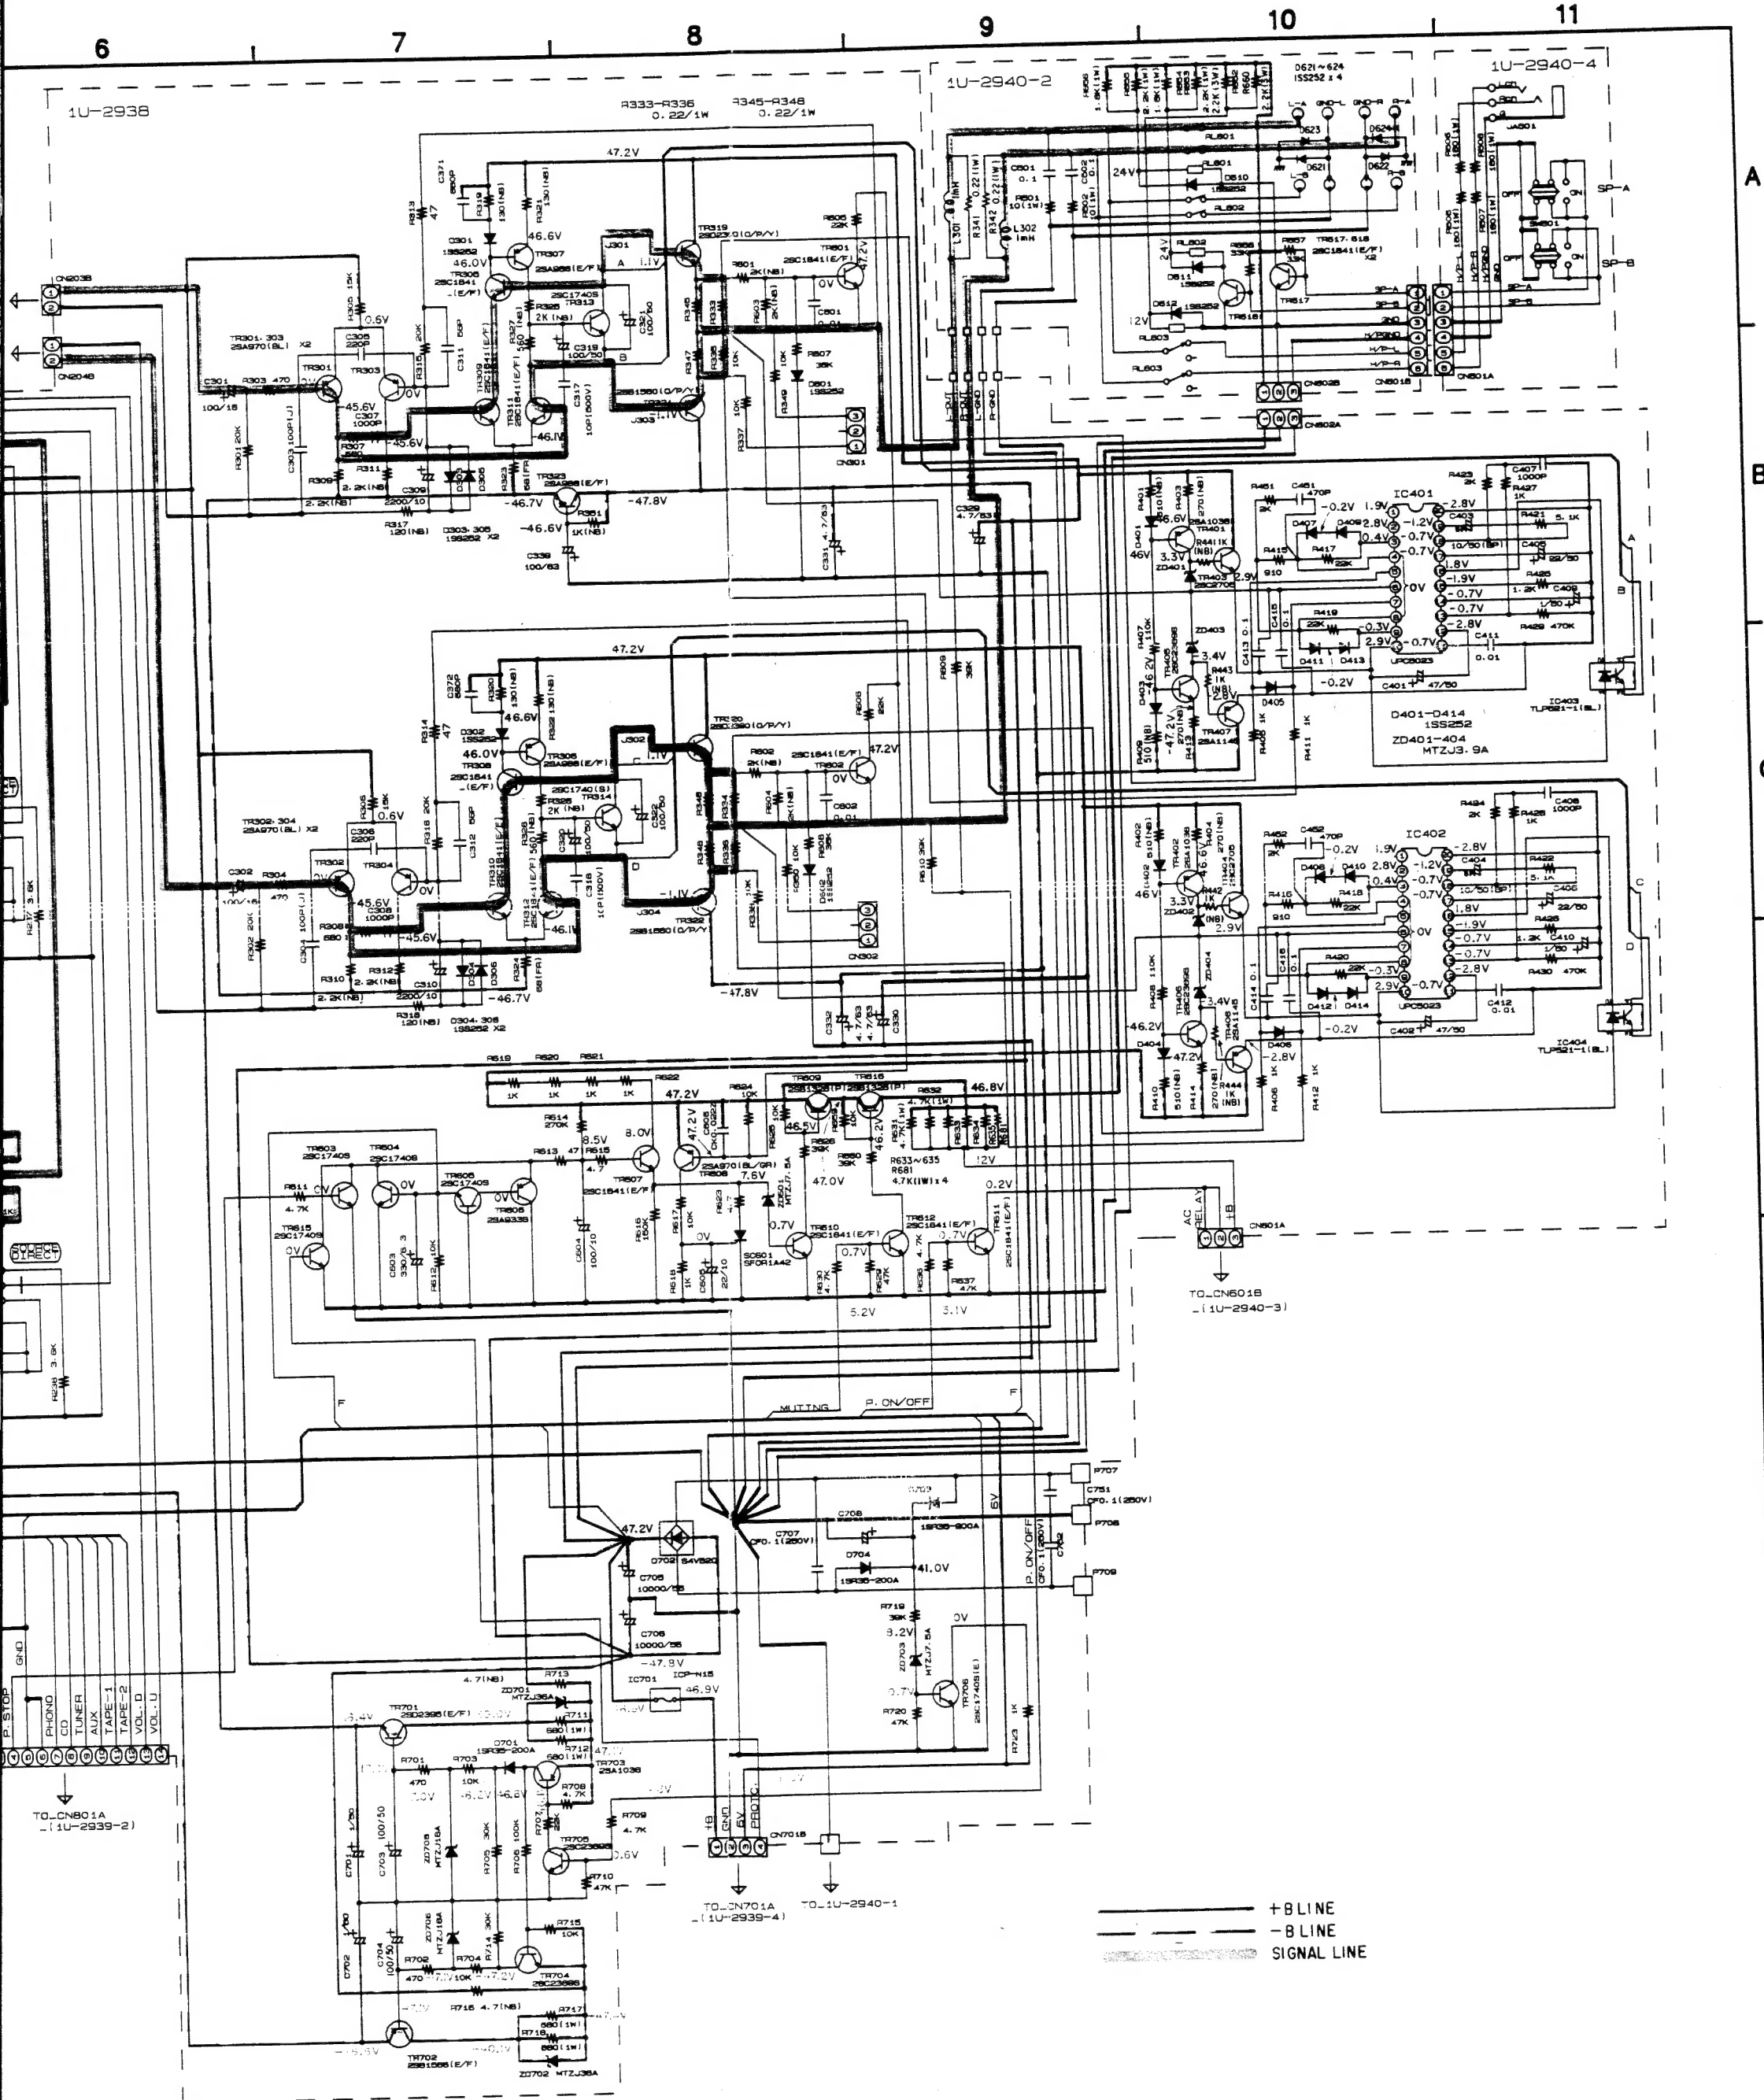1 2 3 4 5 6

1U-2938





**NOTES**  
ALL RESISTANCE VALUES IN OHM. K=1,000 OHM. M=1,000,000 OHM  
ALL CAPACITANCE VALUES IN MICRO FARAD. P=MICRO-MICRO FARAD  
EACH VOLTAGE AND CURRENT ARE MEASURED AT NO SIGNAL INPUT  
CONDITION.  
CIRCUIT AND PARTS ARE SUBJECT TO CHANGE WITHOUT PRIOR  
NOTICE.

**WARNING:**  
Parts marked with this symbol   have critical characteristics.  
Use **ONLY** replacement parts recommended by the manufacturer.

**CAUTION:** Before returning the unit to the customer, make sure you make either (1) a leakage current check or (2) a line to chassis resistance check. If the leakage current exceeds 0.5 millamps, or if the resistance from chassis to either side of the power cord is less than 240 kohms, the unit is defective.

**WARNING:**  
DO NOT return the unit to the customer until the problem is located and corrected.